

**ASI SPECIALIZED TEST EQUIPMENT LIST**

**AVAILABILITY SUBJECT TO CHANGE WITHOUT NOTICE**

<b>ASI MN</b>	<b>EQUIV MN</b>	<b>EQUIV PN</b>	<b>DESCRIPTION</b>	<b>AVAILABILITY</b>
ASI-1			ADAPTER RACK: ARINC COMM TO VHF-20(), VHF-21()	ASI DEALER
ASI-1A			ADAPTER RACK: ARINC COMM TO VHF-22()	ASI DEALER
ASI-1B			ADAPTER RACK: ARINC COMM TO VHF-22C / VHF-22D	ASI DEALER
ASI-1C			ADAPTER RACK: ARINC COMM TO VHF-21C / VHF-21D	ASI DEALER
ASI-2			ADAPTER RACK: ARINC NAV TO VIR-30(), VIR-32()	ASI DEALER
ASI-2A			ADAPTER RACK: ARINC NAV TO VIR-31()	ASI DEALER
ASI-7			ADAPTER RACK: 860E-3/5 TO DME-40	ASI DEALER
ASI-10			SERVO AMPLIFIER	ASI DEALER
ASI-01-P55241U001		01-P55241U001	TYPE 2 RF TEST FIXTURE	ASI DEALER
ASI-10-02A		940-ASI-10-02A	CABLE: ASI-1002 TO GABLES G7400 / G7412	GABLES
ASI-10-02B		940-ASI-10-02B	CABLE: ASI-1002 TO GABLES G7401	GABLES
ASI-10-02C		940-ASI-10-02C	CABLE: ASI-1002 TO G7402	GABLES
ASI-10-02D		940-ASI-10-02D	CABLE: ASI-1002 TO G7403	GABLES
ASI-10-02E		940-ASI-10-02E	CABLE: ASI-1002 TO G7404	GABLES
ASI-10-02F		940-ASI-10-02F	CABLE: ASI-1002 TO G7406	GABLES
ASI-10-02G		940-ASI-10-02G	CABLE: ASI-1002 TO G7500	GABLES
ASI-10-02H		940-ASI-10-02H	CABLE: ASI-1002 TO G6990/G6992/G7131/G7156 (TCAS CONTROLS)	GABLES
ASI-10-02J		940-ASI-10-02J	CABLE: ASI-1002 TO G6959	GABLES
ASI-10-02K		940-ASI-10-02K	CABLE: ASI-1002 TO G6977	GABLES
ASI-10-02L		940-ASI-10-02L	CABLE: ASI-1002 TO G6981	GABLES
ASI-10-02M		940-ASI-10-02M	CABLE: ASI-1002 TO G6982	GABLES
ASI-10-02N		940-ASI-10-02N	CABLE: ASI-1002 TO G6984	GABLES
ASI-10-02P1			CABLE: ASI-1002 TO DFP-702/-703/-712/-713	ASI DEALER
ASI-10-02P2			CABLE: ASI-1002 TO VFP-702/-712	ASI DEALER
ASI-10-02P3			CABLE: ASI-1002 TO DTP-702/-712	ASI DEALER
ASI-10-02P4			CABLE: ASI-1002 TO HFP-702/-712	ASI DEALER
ASI-10-02P5			CABLE: ASI-1002 TO DTP-722	ASI DEALER
ASI-10-02Q		940-ASI-10-02Q	CABLE: ASI-1002 TO G6966/G7024	GABLES
ASI-10-02R		940-ASI-10-02R	CABLE: ASI-1002 TO G7026	GABLES
ASI-10-02S		940-ASI-10-02S	CABLE: ASI-1002 TO G7023	GABLES
ASI-10-02T		940-ASI-10-02T	CABLE: ASI-1002 TO G7119	GABLES
ASI-10-02U		940-ASI-10-02U	CABLE: ASI-1002 TO G7165	GABLES
ASI-10-02V		940-ASI-10-02V	CABLE: ASI-1002 TO G7409	GABLES
ASI-10-02W		940-ASI-10-02W	CABLE: ASI-1002 TO G6773	GABLES
ASI-10-02X		940-ASI-10-02X	CABLE: ASI-1002 TO G7163	GABLES
ASI-10-02Y		940-ASI-10-02Y	CABLE: ASI-1002 TO G7131 (SEE ASI-10-02H)	GABLES
ASI-10-02Z		940-ASI-10-02Z	CABLE: ASI-1002 TO G7451	GABLES
ASI-10-02AA		940-ASI-10-02AA	CABLE: ASI-1002 TO G7503	GABLES
ASI-10-02AB		940-ASI-10-02AB	CABLE: ASI-1002 TO G7300	GABLES
ASI-10-02AC		940-ASI-10-02AC	CABLE: ASI-1002 TO G7532	GABLES
ASI-10-02AD		940-ASI-10-02AD	CABLE: ASI-1002 TO G7514	GABLES
ASI-10-02AE		940-ASI-10-02AE	CABLE: ASI-1002 TO G7185	GABLES
ASI-10-02AF		940-ASI-10-02AF	CABLE: ASI-1002 TO G7490/G7492 (REPLACED BY ASI-10-02AF1)	GABLES
ASI-10-02AF1		940-ASI-10-02AF1	CABLE: ASI-1002 TO G7490/G7492 (WITH AC PWR SWITCHING)	GABLES
ASI-10-02AG		940-ASI-10-02AG	CABLE ASI-1002 TO G7511-101	GABLES
ASI-10-02AH		940-ASI-10-02AH	CABLE ASI-1002 TO G7501	GABLES
ASI-10-02AJ		940-ASI-10-02AJ	CABLE: ASI-1002 TO G6967	GABLES
ASI-10-02AK		940-ASI-10-02AK	CABLE: ASI-1002 TO G6200/G6223	GABLES
ASI-10-02AL		940-ASI-10-02AL	CABLE: ASI-1002 TO G6840	GABLES
ASI-10-02AM		940-ASI-10-02AM	CABLE: ASI-1002 TO G6762	GABLES
ASI-10-022A1			CABLE, ASI-1002-2 BREAKOUT BOX TO MS24266R22B55SN	ASI DEALER
ASI-10-022A2			CABLE, ASI-1002-2 BREAKOUT BOX TO MS24266R22B55S6	ASI DEALER
ASI-10-022A3			CABLE, ASI-1002-2 BREAKOUT BOX TO MS24266R22B55S7	ASI DEALER
ASI-10-022A4			CABLE, ASI-1002-2 BREAKOUT BOX TO MS24266R22B55S8	ASI DEALER
ASI-10-022A5			CABLE, ASI-1002-2 BREAKOUT BOX TO MS24266R22B55S9	ASI DEALER
ASI-10-022A6			CABLE, ASI-1002-2 BREAKOUT BOX TO MS24266R22B55S10	ASI DEALER
ASI-10-022B1			CABLE, ASI-1002-2 BREAKOUT BOX TO MS24266R16B24P	ASI DEALER
ASI-10-022B2			CABLE, ASI-1002-2 BREAKOUT BOX TO MS3126F20-39S	ASI DEALER
ASI-10-022B3			CABLE, ASI-1002-2 BREAKOUT BOX TO MS3126F22-55S	ASI DEALER
ASI-10-022B4			CABLE, ASI-1002-2 BREAKOUT BOX TO MS24266R16B24S6	ASI DEALER
ASI-10-022B5			CABLE, ASI-1002-2 BREAKOUT BOX TO MS24266R16B10SN	ASI DEALER
ASI-10-022B6			CABLE, ASI-1002-2 BREAKOUT BOX TO MS24266R16B24S9	ASI DEALER
ASI-10-022B7			CABLE, ASI-1002-2 BREAKOUT BOX TO MS3126F20-41S	ASI DEALER
ASI-10-1A			CABLE: ASI-200-1 TO CTL-22	ASI DEALER
ASI-10-1B			CABLE: ASI-200-1 TO CTL-62	ASI DEALER
ASI-10-1C			CABLE: ASI-200-1 TO CTL-92	ASI DEALER
ASI-10-1D			CABLE: ASI-200-1 TO CTL-23	ASI DEALER
ASI-10-1D1			CABLE: CTL-X2 EXTENDER CABLE A6 (CTL-X2 MAN FIG 5-2)	ASI DEALER
ASI-10-1E			CABLE: CTL-X2 EXTENDER CABLE A2 (CTL-X2 MAN FIG 5-2)	ASI DEALER
ASI-10-1F			CABLE: CTL-X2 EXTENDER CABLE A3 (CTL-X2 MAN FIG 5-2)	ASI DEALER

**AVAILABILITY:**

ASI DEALER: CONTACT ANY ASI DEALER FOR QUOTE

COLLINS: CONTACT ROCKWELL COLLINS FOR QUOTE

GABLES: CONTACT GABLES ENGINEERING FOR QUOTE

TELEPHONICS: CONTACT TELEPHONICS FOR QUOTE

**ASI SPECIALIZED TEST EQUIPMENT LIST**

**AVAILABILITY SUBJECT TO CHANGE WITHOUT NOTICE**

ASI MN	EQUIV MN	EQUIV PN	DESCRIPTION	AVAILABILITY
ASI-10-1G			CABLE: CTL-X2 EXTENDER CABLE A1/A2/A6 (CTL-X2 MAN FIG 5-2)	ASI DEALER
ASI-10-2A			CABLE: EXTERNAL OBS RESOLVER TO ASI-200-2A, 2C, 2D	ASI DEALER
ASI-10-2B			CABLE: ASI-160B (HDG SYNCHRO AND 332C-10) TO ASI-200-2D	ASI DEALER
ASI-10-2C			CABLE: ASI-160( ) (HDG SYNCHRO AND RMI) TO ASI-200-2C VIA P7	ASI DEALER
ASI-10-2D			CABLE: MANUAL CONTROL NAV-750() TO ASI-2000 FOR VIR-() NAV UNITS	ASI DEALER
ASI-10-2E			CABLE: MANUAL CONTROL CTL-30 TO ASI-2000 FOR VIR-() NAV UNITS	ASI DEALER
ASI-10-2F			CABLE: ASI-161, 479V-3 OR 79V-3 TO ASI-200-2A, 2C, 2D	ASI DEALER
ASI-10-2G			CABLE: 332-C10 TO RMI-36 ADAPTER	ASI DEALER
ASI-10-2H			CABLE: ASI-200-2() TO 332C-10 AND VIR-31	ASI DEALER
ASI-10-2H1			CABLE: ASI-200-2( ) / ASI-10-02H TO 699Z-1	ASI DEALER
ASI-10-2I			CABLE: ASI-200-2D TO VIR-31(P3)	ASI DEALER
ASI-10-2J			CABLE: ASI-200-2D TO ASI-160() AND VIR-31	ASI DEALER
ASI-10-2K			CABLE: VIR-32 EXTENDER A5-36 POS (VIR-32 MAN FIG 5-9)	ASI DEALER
ASI-10-2L			CABLE: VIR-32 EXTENDER A5-26 POS (VIR-32 MAN FIG 5-9)	ASI DEALER
ASI-10-2M			CABLE: ASI-200-2( ) TO CTL-32	ASI DEALER
ASI-10-2N			CABLE: MANUAL CONTROL 313N-4B/BA TO ASI-2000 FOR VIR-() NAV UNITS	ASI DEALER
ASI-10-3A			CABLE: MANUAL CONTROL NAV-750() TO ASI-2000 FOR VHF-() COMM UNITS	ASI DEALER
ASI-10-3B			CABLE: MANUAL CONTROL CTL-20 TO ASI-2000 FOR VHF-() COMM UNITS	ASI DEALER
ASI-10-3C			CABLE: NAV-760 TO ASI-2000	ASI DEALER
ASI-10-3D			CABLE: ASI-200-3 TO CTL-22	ASI DEALER
ASI-10-5A			CABLE: CTL KEC-1030 / SQUAWK NAUT I TO ASI-2000 FOR DME-() UNITS	ASI DEALER
ASI-10-5B			CABLE: MAN CTL CTL-30 TO ASI-2000 FOR DME-40,42,IND-40,41,339F-12	ASI DEALER
ASI-10-5C			CABLE: MANUAL CONTROL ATC-1400 TO ASI-2000 FOR DME-40 AND DME-42	ASI DEALER
ASI-10-5D			CABLE: ASI-200-5 TO IND-40,41,339F-12, AND 313N-4D	ASI DEALER
ASI-10-5E			CABLE: ASI-200-5 TO ATC-1400 (COMPUTER TESTING ONLY)	ASI DEALER
ASI-10-7A			CABLE: ASI-200-7 TO KFS-564()	ASI DEALER
ASI-10-7B			CABLE: ASI-200-7 TO KFS-576()	ASI DEALER
ASI-10-7C			CABLE: ASI-200-7 TO KFS-579()	ASI DEALER
ASI-10-7D			CABLE: ASI-200-7 TO KFS-586()	ASI DEALER
ASI-10-7E			CABLE: ASI-200-7 TO KFS-598()	ASI DEALER
ASI-10-8A			CABLE: ASI-2000 TO CTL-20	ASI DEALER
ASI-10-8B			CABLE: ASI-2000 TO LTC-1	ASI DEALER
ASI-10-8C			CABLE: ASI-2000 TO NAV-750()	ASI DEALER
ASI-10-9A			CABLE: ASI-2000 TO CTL-30	ASI DEALER
ASI-10-9B			CABLE: ASI-2000 TO LVC-4	ASI DEALER
ASI-10-9C			CABLE: ASI-2000 TO NAV-750()	ASI DEALER
ASI-10-9D			CABLE: ASI-200-9 TO VIR-130A	ASI DEALER
ASI-10-10A			CABLE: ASI-61, 970W1 OR ANT-60A TO ASI-200-10	ASI DEALER
ASI-10-10B			CABLE: ASI-200-10 TO RMI-36	ASI DEALER
ASI-10-10C			CABLE: 332C-10 RMI TO ASI-200-10	ASI DEALER
ASI-10-10D			CABLE: ASI-2000 TO CTL-62	ASI DEALER
ASI-10-10E			CABLE: ASI-200-10 TO ASI-160( )	ASI DEALER
ASI-10-10F			CABLE: ASI-200-10 TO 332C-10 AND 699Z-1 FOR TESTING ADF-462	ASI DEALER
ASI-10-10G			CABLE: ASI-200-10 TO CTL-60	ASI DEALER
ASI-10-11A			CABLE: CTL-22 TO ASI-2000 FOR VHF-422	ASI DEALER
ASI-10-11B		??	CABLE: CTL-23 TO ASI-2000 FOR VHF-23	ASI DEALER
ASI-10-12A			CABLE: ASI-2000 TO CTL-32	ASI DEALER
ASI-10-13A			CABLE: ASI-2000 TO CTL-32	ASI DEALER
ASI-10-14A			CABLE: MANUAL CONTROL 613L-3 TO ASI-2000 FOR TDR-90	ASI DEALER
ASI-10-14B			CABLE: MANUAL CONTROL ASI-500-1 TO ASI-2000 FOR TDR-90	ASI DEALER
ASI-10-14C			CABLE: ASI-2000 TO CTL-90 FOR TDR-90	ASI DEALER
ASI-10-14D			CABLE: ASI-2000 TO CAD-62/CTL-92 FOR TDR-90	ASI DEALER
ASI-10-14E			CABLE: ASI-200-14 TO TDR-950	ASI DEALER
ASI-10-14F			CABLE: 4 FT CALIBRATED RF (RG58 N TO TNC) FOR TDR-90	ASI DEALER
ASI-10-17A-A2			EXTENDER CABLE FOR A2 CIRCUIT CARD IN THE COLLINS RTU-870A	ASI DEALER
ASI-10-17A-A3			EXTENDER CABLE FOR A3 CIRCUIT CARD IN THE COLLINS RTU-870A	ASI DEALER
ASI-10-19A			CABLE: ASI-200-19 TO RMI-30	ASI DEALER
ASI-10-19B			CABLE: ASI-200-19 TO RMI-36/BDI-36	ASI DEALER
ASI-10-27A	CT8070		CABLE: ASI-1027-1 (CT8069) AC POWER	ASI DEALER
ASI-10-27B	CT8071		CABLE: ASI-1027-1 (CT8069) TO ASI-1027-2 (CT8073)	ASI DEALER
ASI-10-27C	CT8046		CABLE: ASI-1027-1 (CT8069) DC POWER	ASI DEALER
ASI-10-27D	CT8072		CABLE: ASI-1027-1 (CT8069) TO UUT (624066-X)	ASI DEALER
ASI-10-27E	CT8058		CABLE: TEST LEAD	ASI DEALER
ASI-10-27F	CT3258		EXTENDER CARD: 624066-X A1	ASI DEALER
ASI-10-27G	CT3259		EXTENDER CARD: 624066-X A2-A3	ASI DEALER
ASI-10-27H	CT3260		EXTENDER CARD: 624066-X A4	ASI DEALER
ASI-10-400A			CABLE: ASI-2000 P2 COLLINS TO ASI-400-(25P) 6FT	ASI DEALER
ASI-10-400B			CABLE: ASI-2000 P3 COLLINS TO ASI-400-(37P) 6FT	ASI DEALER
ASI-10-400C			CABLE: ASI-2000 J3 COLLINS TO ASI-400-(37P) 6FT	ASI DEALER
ASI-10-400D			CABLE: ASI-2000 429 COLLINS TO ASI-200()-15P) 6FT	ASI DEALER

**AVAILABILITY:**

ASI DEALER: CONTACT ANY ASI DEALER FOR QUOTE  
 COLLINS: CONTACT ROCKWELL COLLINS FOR QUOTE  
 GABLES: CONTACT GABLES ENGINEERING FOR QUOTE  
 TELEPHONICS: CONTACT TELEPHONICS FOR QUOTE

**ASI SPECIALIZED TEST EQUIPMENT LIST**

**AVAILABILITY SUBJECT TO CHANGE WITHOUT NOTICE**

<b>ASI MN</b>	<b>EQUIV MN</b>	<b>EQUIV PN</b>	<b>DESCRIPTION</b>	<b>AVAILABILITY</b>
ASI-10-400E			CABLE: ASI-2000 J1 KING ASI-400-(25P) 6 FT	ASI DEALER
ASI-10-400F			CABLE: ASI-2000 J2 KING TO ASI-400-(25P) 6FT	ASI DEALER
ASI-10-400G			CABLE: ASI-2000 J3 KING TO ASI-400-(25P) 6 FT	ASI DEALER
ASI-10-400H			CABLE: ASI-2000 ASYNCH TO ASI-200-( )-(25P) 6 FT	ASI DEALER
ASI-10-401A			CABLE: ASI-401 J2 TO PROLINE PANEL J3 (2.5 FT)	ASI DEALER
ASI-10-401B			CABLE: ASI-401 J3 TO PROLINE PANEL P3 (2.5 FT)	ASI DEALER
ASI-10-401C			CABLE: ASI-401 J7 TO PROLINE PANEL P2 (2.5 FT)	ASI DEALER
ASI-10-401D			CABLE: ASI-401 J8 TO PROLINE PANEL ARINC 429 (2.5 FT)	ASI DEALER
ASI-10-401E			CABLE: ASI-401 J10 TO CTC-429 CARD P1 (3.5 FT)	ASI DEALER
ASI-10-401F			CABLE: ASI-401 J12 TO CTC-429 CARD J33 (3.5 FT)	ASI DEALER
ASI-10-401G			CABLE: ASI-401 J14 TO CTC-429 CARD J32 (3.5 FT)	ASI DEALER
ASI-10-401H			CABLE: CUSTOM FIT FOR ASI-2000, REPLACES ASI-10-401A/B/C/D	ASI DEALER
ASI-10-401I			CABLE: ASI-401 J2 TO PROLINE PANEL J3 (6 FT)	ASI DEALER
ASI-10-401J			CABLE: ASI-401 J3 TO PROLINE PANEL P3 (6 FT)	ASI DEALER
ASI-10-401K			CABLE: ASI-401 J7 TO PROLINE PANEL P2 (6 FT)	ASI DEALER
ASO-10-401L			CABLE: ASI-401 J8 TO PROLINE PANEL ARINC 429 (6 FT)	ASI DEALER
ASI-10-401M			CABLE: ASI-401 J10 TO CTC-429 CARD P1 (6 FT)	ASI DEALER
ASI-10-401N			CABLE: ASI-401 J12 TO CTC-429 CARD J33 (6 FT)	ASI DEALER
ASI-10-401O			CABLE: ASI-401 J14 TO CTC-429 CARD J32 (6 FT)	ASI DEALER
ASI-10-500A			CABLE: ASI-500 TO ASI-2000 (NAV-COMM-DME)	ASI DEALER
ASI-10-2000A			CABLE: 4 FT EXTENDER ASI-2000 TO COMPUTER (COLLINS)	ASI DEALER
ASI-10-2000B			CABLE: 4 FT EXTENDER ASI-2000 TO COMPUTER (KING)	ASI DEALER
ASI-11-1A		634-9802-001	CABLE: ASI-CTS-11 (CTS-11) TO ADI-85	ASI DEALER
ASI-11-1B			CABLE: ASI-CTS-11/-11A/-12 TO ASI-167(978F-2S) OR ASI-165(CSS-10)	ASI DEALER
ASI-11-1C			CABLE: ASI-CTS-11A TO ADI-77	ASI DEALER
ASI-11-1D		647-8962-001	CABLE: ADI-77 EXTENDER	COLLINS
ASI-11-1E		647-8962-002	CABLE: ADI-77 EXTENDER	COLLINS
ASI-11-1F		647-8962-003	CABLE: ADI-77 EXTENDER	COLLINS
ASI-11-1G		647-8962-004	CABLE: ADI-77 EXTENDER	COLLINS
ASI-11-1H		647-8962-005	CABLE: ADI-77 EXTENDER	COLLINS
ASI-11-1I		647-8962-006	CABLE: ADI-77 EXTENDER	COLLINS
ASI-11-1J		647-8962-020	CABLE: ADI-77 EXTENDER	COLLINS
ASI-11-1K			TEST FIXTURE: ADI-77 GIMBAL ALIGNMENT FIXTURE	ASI DEALER
ASI-11-1L			CABLE: ADI-77 GIMBAL ALIGNMENT FIXTURE CABLE	ASI DEALER
ASI-12-0A			CABLE: ASI-120 TO BRG-40	ASI DEALER
ASI-12-0B			CABLE: ASI-120 TO DME-40A	ASI DEALER
ASI-12-0C			CABLE: ASI-120 TO 332C-10/10B	ASI DEALER
ASI-12-0D			CABLE: ASI-120 TO IND-350G	ASI DEALER
ASI-12-0E			CABLE: ASI-120 TO 339F-12( )	ASI DEALER
ASI-12-0F			CABLE: ASI-120 TO ASI-160B/160C	ASI DEALER
ASI-12-0G			CABLE: ASI-120 TO 313N-4D / 378N-2	ASI DEALER
ASI-12-1A		634-9003-001	CABLE: ASI-CTS-12 (CTS-12) TO HSI-85( )	ASI DEALER
ASI-12-1B		634-9004-001	CABLE: ASI-CTS-12 (CTS-12) TO COLT CTS-703	ASI DEALER
ASI-12-1C			CABLE: ASI-CTS-12 (CTS-12) TO ASI-176/176A/176BR	ASI DEALER
ASI-12-1C1			CABLE: ASI-CTS-12 (CTS-12) TO ASI-176-1	ASI DEALER
ASI-12-1D			CABLE: ASI-121 TO BIA-32	ASI DEALER
ASI-12-1E			CABLE: ASI-121 TO RMI-30	ASI DEALER
ASI-12-1F			CABLE: ASI-121 TO RMI-36 / BDI-36	ASI DEALER
ASI-12-2A			CABLE: ASI-122 TO DDA-42	ASI DEALER
ASI-12-2B			CABLE: ASI-122 TO IND-40/41	ASI DEALER
ASI-12-2C			CABLE: ASI-122 TO 339F-8B	ASI DEALER
ASI-12-2D			CABLE: ASI-122 TO 339F-12( )	ASI DEALER
ASI-12-2E			CABLE: ASI-122 TO 339F-18( )	ASI DEALER
ASI-12-3A			CABLE: ASI-123 TO BDI-36	ASI DEALER
ASI-12-3B			CABLE: ASI-123 TO COLT CTA-339B1	ASI DEALER
ASI-12-3C			CABLE: ASI-123 TO ASI-176( )	ASI DEALER
ASI-12-4A			CABLE: ASI-124 TO CAD-870G - P1	ASI DEALER
ASI-12-4B			CABLE: ASI-124 TO CAD-870G - P2	ASI DEALER
ASI-12-5A			CABLE: ASI-125 TO VHF-21	ASI DEALER
ASI-12-5B			CABLE: ASI-125 TO CTL-22	ASI DEALER
ASI-12-5C			CABLE: ASI-125 TO VHF-22	ASI DEALER
ASI-12-5D			CABLE: ASI-125 TO VHF-422	ASI DEALER
ASI-12-6A			CABLE: ASI-126 TO CTL-22/22A	ASI DEALER
ASI-12-6B			CABLE: ASI-126 TO CTL-32/32A	ASI DEALER
ASI-12-6C			CABLE: ASI-126 TO CTL-62/62A	ASI DEALER
ASI-12-6D			CABLE: ASI-126 TO CTL-92/92A	ASI DEALER
ASI-12-6E			CABLE: ASI-126 TO CTL-23	ASI DEALER
ASI-12-7A			CABLE: ASI-127 TO VIR-31( )	ASI DEALER
ASI-12-7B			CABLE: ASI-127 / ASI-127-1 TO RMI-30	ASI DEALER
ASI-12-7C			CABLE: ASI-127/ASI-127-1 TO RMI-36	ASI DEALER

**AVAILABILITY:**

ASI DEALER: CONTACT ANY ASI DEALER FOR QUOTE  
 COLLINS: CONTACT ROCKWELL COLLINS FOR QUOTE  
 GABLES: CONTACT GABLES ENGINEERING FOR QUOTE  
 TELEPHONICS: CONTACT TELEPHONICS FOR QUOTE

**ASI SPECIALIZED TEST EQUIPMENT LIST**

**AVAILABILITY SUBJECT TO CHANGE WITHOUT NOTICE**

<b>ASI MN</b>	<b>EQUIV MN</b>	<b>EQUIV PN</b>	<b>DESCRIPTION</b>	<b>AVAILABILITY</b>
ASI-12-7D			CABLE: ASI-127/ASI-127-1 TO ASI-161 (479V-3)	ASI DEALER
ASI-12-7E			CABLE: ASI-127/ASI-127-1 TO 313N-4B	ASI DEALER
ASI-12-7F			CABLE: ASI-127/ASI-127-1 TO CTL-30	ASI DEALER
ASI-12-7G			CABLE: ASI-127/ASI-127-1 TO ASI-190( )	ASI DEALER
ASI-12-71A			CABLE: ASI-127-1 TO VIR-30/-31/-32/-33	ASI DEALER
ASI-12-71B			CABLE: ASI-127-1 TO CTL-32	ASI DEALER
ASI-12-71C			CABLE: ASI-127-1 TO 699Z-1	ASI DEALER
ASI-12-8A			CABLE: ASI-128 TO CTL-32	ASI DEALER
ASI-12-8B			CABLE: ASI-128 TO VIR-32	ASI DEALER
ASI-12-8C			CABLE: ASI-128 TO VIR-432	ASI DEALER
ASI-12-8D			CABLE: ASI-128 TO 332C-10	ASI DEALER
ASI-12-8E			CABLE: ASI-128 TO ASI-161 (479V-3)	ASI DEALER
ASI-12-8F			CABLE: ASI-128 TO ASI-160( ) OR ASI-190( ) OBS	ASI DEALER
ASI-12-8G			CABLE: ASI-128 TO ASI-160( ) OBI	ASI DEALER
ASI-12-8H			CABLE: ASI-128 TO RMI-36	ASI DEALER
ASI-12-9A			CABLE: ASI-129 TO CAD-31, CAD-62	ASI DEALER
ASI-13-0A			CABLE: ASI-130 TO 613L-3	ASI DEALER
ASI-13-0B			CABLE: ASI-130 TO CAD-62 / CTL-92	ASI DEALER
ASI-13-0C			CABLE: ASI-130 TO TDR-90	ASI DEALER
ASI-13-0D			CABLE: ASI-130 TO CTL-90	ASI DEALER
ASI-13-1A			CABLE: ASI-131 TO CTL-230	ASI DEALER
ASI-13-2A			CABLE: ASI-132 TO RAC-870 / CAD-870	ASI DEALER
ASI-13-3A			CABLE: ASI-133 TO RTU-870( )	ASI DEALER
ASI-13-4A			CABLE: ASI-134 TO DME-42	ASI DEALER
ASI-13-4B			CABLE: ASI-134 TO IND-42/B	ASI DEALER
ASI-13-4C			CABLE: ASI-134 TO IND-40, IND-41, 339F-12	ASI DEALER
ASI-13-4D			CABLE: ASI-134 TO CTL-30	ASI DEALER
ASI-13-4E			CABLE: ASI-134 TO 313N-4D	ASI DEALER
ASI-13-4F			CABLE: ASI-134 TO CTL-32	ASI DEALER
ASI-13-4G			CABLE: ASI-134 TO SQUAWK NAUT	ASI DEALER
ASI-13-4H			CABLE: ASI-134 TO DME-442	ASI DEALER
ASI-13-4I			CABLE: ASI-134 TO IFR-1400A	ASI DEALER
ASI-13-4J			CABLE: DME-42/442 PS LOAD TEST FIXTURE	ASI DEALER
ASI-13-5A			CABLE: ASI-135 TO ADF-462-P1	ASI DEALER
ASI-13-5B			CABLE: ASI-135 TO ADF-462-J7	ASI DEALER
ASI-15-1A			CABLE: ASI-151 TO 590A-3( )	ASI DEALER
ASI-15-2A		2038272-0501	CABLE: ASI-152 (RDT-1F) W101	ASI DEALER
ASI-15-2B		2038273-0501	CABLE: ASI-152 (RDT-1F) W102	ASI DEALER
ASI-15-2C		2038274-0501	CABLE: ASI-152 (RDT-1F) W103	ASI DEALER
ASI-15-2D		2038275-0501	CABLE: ASI-152 (RDT-1F) W104	ASI DEALER
ASI-15-3A		2038308-0501	CABLE: ASI-153 (ATT-1T) W101	ASI DEALER
ASI-15-3B		2038309-0501	CABLE: ASI-153 (ATT-1T) W102	ASI DEALER
ASI-15-3C		8056302-0501	CABLE: ASI-153 (ATT-1T) W103	ASI DEALER
ASI-15-4A		2038350-0501	CABLE: ASI-154 (RCT-1F) W101	ASI DEALER
ASI-15-4B		2038351-0501	CABLE: ASI-154 (RCT-1F) W102	ASI DEALER
ASI-15-4C		2038352-0501	CABLE: ASI-154 (RCT-1F) W103	ASI DEALER
ASI-15-4D		2038353-0501	CABLE: ASI-154 (RCT-1F) W104	ASI DEALER
ASI-15-6A		685-6590-001	CABLE: ASI-156 TO AHC-85	ASI DEALER
ASI-15-8A		687-9993-001	CABLE: ASI-158 TO SVO-1000	ASI DEALER
ASI-15-8B		830-2523-001	CABLE: ASI-158 TO BCA-770	ASI DEALER
ASI-15-22A		8056334-0501	CABLE: ASI-152-2 (RDT-1FB) W101	ASI DEALER
ASI-15-22B			CABLE: ASI-152-2 (RDT-1FB) W102	ASI DEALER
ASI-15-22C			CABLE: ASI-152-2 (RDT-1FB) W103	ASI DEALER
ASI-15-22D			CABLE: ASI-152-2 (RDT-1FB) W104	ASI DEALER
ASI-15-42A		8056346-0501	CABLE: ASI-154-2 (RCT-1FB) W101	ASI DEALER
ASI-15-42B		2041574-0502	CABLE: ASI-154-2 (RCT-1FB) W102	ASI DEALER
ASI-15-42C		2038352-0502	CABLE: ASI-154-2 (RCT-1FB) W103	ASI DEALER
ASI-15-42D		2038353-0502	CABLE: ASI-154-2 (RCT-1FB) W104	ASI DEALER
ASI-15-42E		8056342-0501	CABLE: ASI-154-2 (RCT-1FB) W105	ASI DEALER
ASI-16-B1			CABLE: ASI-160B/C TO KNI-582	ASI DEALER
ASI-16-B2			CABLE: ASI-160B/C TO RMI-36	ASI DEALER
ASI-16-B3			CABLE: ASI-160B/C TO LINAIRE LV-5 PANEL	ASI DEALER
ASI-16-B4			CABLE: ASI-160( ) / ASI-190( ) TO 479V-3 MOCK-UP ADAPTER	ASI DEALER
ASI-16-B5			CABLE: ASI-160B/C TO COLLINS 977A-1 (TB2)	ASI DEALER
ASI-16-B6			CABLE: ASI-160B/C TO LINAIRE LV-6 PANEL	ASI DEALER
ASI-16-3A			CABLE: ASI-163 TO PRIMUS-90 R/T	ASI DEALER
ASI-16-3B			CABLE: ASI-163 TO PRIMUS-90 IND	ASI DEALER
ASI-16-3C			CABLE: ASI-163 TO PRIMUS-90 ANT	ASI DEALER
ASI-16-3D			CABLE: ASI-163 TO PRIMUS-90 W/G SWITCH	ASI DEALER
ASI-16-3E			CABLE: ASI-163 TO PRIMUS-40/300/400/500 R/T	ASI DEALER

**AVAILABILITY:**

ASI DEALER: CONTACT ANY ASI DEALER FOR QUOTE  
 COLLINS: CONTACT ROCKWELL COLLINS FOR QUOTE  
 GABLES: CONTACT GABLES ENGINEERING FOR QUOTE  
 TELEPHONICS: CONTACT TELEPHONICS FOR QUOTE

**ASI SPECIALIZED TEST EQUIPMENT LIST**

**AVAILABILITY SUBJECT TO CHANGE WITHOUT NOTICE**

<b>ASI MN</b>	<b>EQUIV MN</b>	<b>EQUIV PN</b>	<b>DESCRIPTION</b>	<b>AVAILABILITY</b>
ASI-16-3F			CABLE: ASI-163 TO PRIMUS-40/300/400/500 IND	ASI DEALER
ASI-16-3G			CABLE: ASI-163 TO PRIMUS-40/300/400/500 ANT	ASI DEALER
ASI-16-3H			PRIMUS R/T MAG CURRENT/AFC TEST SET	ASI DEALER
ASI-16-3J			CABLE: PRIMUS R/T STABILIZATION ADAPTER	ASI DEALER
ASI-16-4A			CABLE: ASI-164 TO 339H-1/1A/1D, 339H-2(-001), 339H-6(-001)	ASI DEALER
ASI-16-4B			CABLE: ASI-164 TO 339H-2, 339H-6	ASI DEALER
ASI-16-4C			CABLE: ASI-164 TO 339H-5	ASI DEALER
ASI-16-4D			CABLE: ASI-164 TO INA-51A, INA-51B, INA-51D, INA-51V	ASI DEALER
ASI-16-4E			CABLE: ASI-164 TO 339H-3, 339H-4	ASI DEALER
ASI-16-6A		540-7245-000	CABLE: ASI-166 (479X-2) TO OBI (331-3F/3G)	ASI DEALER
ASI-16-6B			CABLE: ASI-166 (479X-2) TO ASI-160/190 SERIES	ASI DEALER
ASI-16-6C		540-7246-000	CABLE: ASI-166 (479X-2) TO OBS (INCLUDED WITH PURCHASE OF ASI-166)	ASI DEALER
ASI-16-6D		540-7244-000	30 HZ FILTER FOR ASI-166 (479X-2) (INCLUDED WITH PURCHASE OF ASI-166)	ASI DEALER
ASI-16-6E			CABLE: ASI-166 (479X-2) TO FMC-28/28A (ORZ)	ASI DEALER
ASI-16-6F		506-4851-002	CABLE: COAX	ASI DEALER
ASI-16-6G		540-7247-000	CABLE: VOLTMETER	ASI DEALER
ASI-16-8A			CABLE: ASI-168 TO 332D-11	ASI DEALER
ASI-16-8B			TEST FIXTURE, 332D-11 ROTOR END CAP PULLER	ASI DEALER
ASI-16-8C1			332D-11 ROTOR END CAP PULLER	ASI DEALER
ASI-16-8C2			332D-11 ROTOR PLUG SPANNER WRENCH	ASI DEALER
ASI-16-8D			332D-11 PIVOT SPANNER WRENCH	ASI DEALER
ASI-16-8E1			332D-11 BEARING REMOVER	ASI DEALER
ASI-16-8E2			332D-11 BEARING PRESS TOOL	ASI DEALER
ASI-16-8E3			332D-11 BASE TOOL	ASI DEALER
ASI-16-8E4			332D-11 OIL RETAINING PRESS TOOL	ASI DEALER
ASI-16-8E5			332D-11 ARBOR HOLDING PLATE	ASI DEALER
ASI-16-8F			332D-11 BALANCE MACHNE GYRO MOUNTING ADAPTER (GYROS WITHOUT SB 26)	ASI DEALER
ASI-16-8G			332D-11 GISHOLT HS-2 BALANCE MACHINE ADAPTER	ASI DEALER
ASI-16-8H			332D-11 BALANCE MACHNE GYRO MOUNTING ADAPTER (GYROS WITH SB 26)	ASI DEALER
ASI-16-8I			332D-11 DRILLING UNIT ADAPTER	ASI DEALER
ASI-16-8J			332D-11 BRUSH ADJUSTMENT TOOL	ASI DEALER
ASI-16-8K			332D-11 BRUSH TENSION GAGE	ASI DEALER
ASI-16-8L			332D-11 DIAL INDICATOR MOUNTING POST	ASI DEALER
ASI-16-8M			332D-11 END PLAY ADJUSTMEN SPACER (QTY 2 REQUIRED)	ASI DEALER
ASI-16-8N1			332D-11 TORQUER STATOR CEMENTING FIXTURE	ASI DEALER
ASI-16-8N2			332D-11 RING ASSEMBLY CEMENTING FIXTURE	ASI DEALER
ASI-16-8N3			332D-11 SOLENOID PLUNGER CEMENTING FIXTURE	ASI DEALER
ASI-16-8O			332D-11 TEST COVER	ASI DEALER
ASI-16-8P			332D-11 WOODEN BLOCK	ASI DEALER
ASI-16-8Q1			332D-11 GYRO RUN IN FIXTURE FOR UNITS WITHOUT SB 26	ASI DEALER
ASI-16-8Q2			332D-11 BONDING / RUN IN FIXTURE FOR UNITS WITH SB 26	ASI DEALER
ASI-16-8Q3			332D-11 GYROMOTOR RUN IN FIXTURE	ASI DEALER
ASI-16-8R			332D-11 EPOXY APPLICATION TOOL	ASI DEALER
ASI-16-8S			332D-11 BEARING RACE CLEANING FIXTURE	ASI DEALER
ASI-16-8T1			332D-11 BEARING BONDING WEIGHT	ASI DEALER
ASI-16-8T2			332D-11 ROTOR END CAP / BEARING BONDING FIXTURE	ASI DEALER
ASI-16-8U			332D-11 CALIBRATED GYROMOTOR ROTOR	ASI DEALER
ASI-16-8V			332D-11 MODIFIED DRILL BIT	ASI DEALER
ASI-16-8W			332D-11 PRELOAD SLEEVE REMOVER	ASI DEALER
ASI-16-8W1			332D-11 ROTOR DISASSEMBLY TOOLS	ASI DEALER
ASI-16-8W2			332D-11 MOUNT INSTALLATION BASE TOOL NO 1	ASI DEALER
ASI-16-8W3			332D-11 MOUNT INSTALLATION FLARING TOOL NO 1	ASI DEALER
ASI-16-8W4			332D-11 MOUNT INSTALLATION BASE TOOL NO 2	ASI DEALER
ASI-16-8W5			332D-11 MOUNT INSTALLATION FLARING TOOL NO 2	ASI DEALER
ASI-16-8X			332D-11 ARBOR PRESS PUNCH TOOL	ASI DEALER
ASI-16-8Y1			332D-11 DIAL INDICATOR MOUNTING POST INSPECTION NO 1 TOOL	ASI DEALER
ASI-16-8Y2			332D-11 DIAL INDICATOR MOUNTING POST INSPECTION NO 2 TOOL	ASI DEALER
ASI-16-8Y3			332D-11 DIAL INDICATOR MOUNTING POST INSPECTION NO 3 TOOL	ASI DEALER
ASI-16-8Y4			332D-11 DIAL INDICATOR MOUNTING POST CHECK NO 1 TOOL	ASI DEALER
ASI-16-8Y5			332D-11 DIAL INDICATOR MOUNTING POST CHECK NO 1 TOOL	ASI DEALER
ASI-16-8Z1			332D-11 PRESS ADAPTER PLATE (FOR DAKE MODEL 0)	ASI DEALER
ASI-16-8Z2			332D-11 GYROMOTOR SUPPORT FIXTURE (USE WITH DAKE MODEL 0)	ASI DEALER
ASI-16-9A		2034816-0001	TEST PLACARD	ASI DEALER
ASI-16-9B		2034816-0002	TEST PLACARD	ASI DEALER
ASI-16-9C		2034816-0003	TEST PLACARD	ASI DEALER
ASI-16-92A		3611841-0001	TEST PLACARD	ASI DEALER
ASI-17-0A		2035426-0002	TEST PLACARD	ASI DEALER
ASI-17-1A		2036958-0501	CABLE: ASI-171 (RDT-1A) TO RDR (W1)	ASI DEALER
ASI-17-1B		2036957-0501	CABLE: ASI-171 (RDT-1A) TO PPI (W2)	ASI DEALER
ASI-17-1C		2036959-0501	CABLE: ASI-171 (RDT-1A) TO SYN (W3)	ASI DEALER

**AVAILABILITY:**

ASI DEALER: CONTACT ANY ASI DEALER FOR QUOTE  
 COLLINS: CONTACT ROCKWELL COLLINS FOR QUOTE  
 GABLES: CONTACT GABLES ENGINEERING FOR QUOTE  
 TELEPHONICS: CONTACT TELEPHONICS FOR QUOTE

**ASI SPECIALIZED TEST EQUIPMENT LIST**

**AVAILABILITY SUBJECT TO CHANGE WITHOUT NOTICE**

<b>ASI MN</b>	<b>EQUIV MN</b>	<b>EQUIV PN</b>	<b>DESCRIPTION</b>	<b>AVAILABILITY</b>
ASI-17-1D			LOAD BOX: ASI-171 (RDT-1A) A1	ASI DEALER
ASI-17-2A		2037016-0501	CABLE: ASI-172 (RDT-1B) TO CON-1J/L/N (W102)	ASI DEALER
ASI-17-2B		2037018-0501	CABLE: ASI-172 (RDT-1B) TO ANT-1A/B/C/D/E/F/J/L/M/N/P/S (W201)	ASI DEALER
ASI-17-2C		2037015-0501	CABLE: ASI-172 (RDT-1B) TO CON-1A/B/D (W101)	ASI DEALER
ASI-17-2D		2037017-0501	CABLE: ASI-172 (RDT-1B) TO CON-1NB (W103)	ASI DEALER
ASI-17-2E		2037019-0501	CABLE: ASI-172 (RDT-1B) TO ANT-1G (W202)	ASI DEALER
ASI-17-3A			CABLE: ASI-173 (PPT-1A) W1	ASI DEALER
ASI-17-3B			CABLE: ASI-173 (PPT-1A) W2	ASI DEALER
ASI-17-4A		2038283-0501	CABLE: ASI-174 (PPT-1B) W101	ASI DEALER
ASI-17-4B		2038284-0501	CABLE: ASI-174 (PPT-1B) W102	ASI DEALER
ASI-17-4C		2038816-0501	CABLE: ASI-174 (PPT-1B) W103	ASI DEALER
ASI-17-5A		2034175-0002	TEST PLACARD	ASI DEALER
ASI-17-6A			CABLE: ASI-176 TO BDI-36	ASI DEALER
ASI-17-6B			CABLE: ASI-176 TO CLIFTON 59500000-(), 66000000-()	ASI DEALER
ASI-17-6C			CABLE: ASI-176 TO 339F-8B, 339F-18/18F	ASI DEALER
ASI-17-6D			CABLE: ASI-176 TO 331A-6A, 331A-6P	ASI DEALER
ASI-17-6E			CABLE: ASI-176 TO 331A-6R	ASI DEALER
ASI-17-6F			CABLE: ASI-176 TO 331A-9G, HSI-45	ASI DEALER
ASI-17-6G			CABLE: ASI-176 TO 331A-8G	ASI DEALER
ASI-17-6H			CABLE: ASI-176 TO 339F-12, IND-40/41	ASI DEALER
ASI-17-6I			CABLE: ASI-176 TO 331A-8A, 331A-8D, 331A-8K	ASI DEALER
ASI-17-6J			CABLE: ASI-176 TO KDI-5700, KDI-5710, ARINC 568	ASI DEALER
ASI-17-6K			CABLE: ASI-176 TO 331A-8L	ASI DEALER
ASI-17-6L			CABLE: ASI-176 TO HSI-84	ASI DEALER
ASI-17-6M			CABLE: ASI-176 TO RD-550/A/B/R	ASI DEALER
ASI-17-6N			CABLE: ASI-176 TO RD-500/A	ASI DEALER
ASI-17-6O			CABLE: ASI-176 TO COLLINS 331A-8D DME BOARDS	ASI DEALER
ASI-17-6P			CABLE: ASI-176 TO RD-600/A/B	ASI DEALER
ASI-17-6Q			CABLE: ASI-176 TO RD-650/A/B/R	ASI DEALER
ASI-17-6R			CABLE: ASI-176 TO ASTRONAUTICS 125810	ASI DEALER
ASI-17-6S			CABLE: ASI-176 TO KING KPI-553 INDICATOR	ASI DEALER
ASI-17-61H			CABLE: ASI-176-1 TO 339F-12, IND-40, IND-41	ASI DEALER
ASI-17-61J			CABLE: ASI-176-1 TO CLIFTON 660 (66000000-1)	ASI DEALER
ASI-17-7A		2037543-0501	CABLE: ASI-177-1 (RNT-26A) W105	ASI DEALER
ASI-17-7B		2037550-0501	CABLE: ASI-177-1 (RNT-26A) W109	ASI DEALER
ASI-17-7C		2037551-0501	CABLE: ASI-177-1 (RNT-26A) W110	ASI DEALER
ASI-17-7D		2037547-0501	CABLE: ASI-177-1 (RNT-26A) W111	ASI DEALER
ASI-17-7E		2037549-0501	CABLE: ASI-177-1 (RNT-26A) W112	ASI DEALER
ASI-17-7F		2037544-0501	CABLE: ASI-177-1 (RNT-26A) W113	ASI DEALER
ASI-17-7G		2037546-0501	CABLE: ASI-177-1 (RNT-26A) W114	ASI DEALER
ASI-17-7H		2037545-0501	CABLE: ASI-177-1 (RNT-26A) W115	ASI DEALER
ASI-17-7I		2037552-0501	CABLE: ASI-177-1 (RNT-26A) W116	ASI DEALER
ASI-17-7J		2037551-0502	CABLE: ASI-177-1 (RNT-26A) W117	ASI DEALER
ASI-17-7K		2037548-0501	CABLE: ASI-177-1 (RNT-26A) W118	ASI DEALER
ASI-17-7L			LOAD, ASI-177-1 (RNT-26A) A2	ASI DEALER
ASI-17-7M			LOAD, ASI-177-1 (RNT-26A) A3	ASI DEALER
ASI-17-7N		2037553-0501	LOAD: ASI-177-1 (RNT-26A) PR1	ASI DEALER
ASI-17-7P			CABLE, ASI-177-1 (RNT-26A) W103	ASI DEALER
ASI-17-7Q			CABLE, ASI-177-1 (RNT-26A) W121	ASI DEALER
ASI-17-7R			CABLE, ASI-177-1 (RNT-26A) W104	ASI DEALER
ASI-17-72A	W12	3604050-0501	CABLE, ASI-177-2 (RNT-260A) TO R-2032 / R-2325	ASI DEALER
ASI-17-72B	W11	3604049-0501	CABLE, ASI-177-2 (RNT-260A) TO CONTROL	ASI DEALER
ASI-17-72G		3604322-0501	CABLE, ASI-177-2 (RNT-260A) TO R-2023 / R-2139	ASI DEALER
ASI-17-72H		3604321-0501	CABLE, ASI-177-2 (RNT-260A) TO C-10048 / C-10049	ASI DEALER
ASI-17-72J			BENCH MOCK-UP, ASI-177-2 (RNT-260 / 6001) TO R-2325(V)/ARN-147(V) (VIR-130A)	ASI DEALER
ASI-17-72K		687-4041-001	1553 BUS ADAPTER VIR-130A TO ALTANTIS DCM-1553	COLLINS
ASI-17-8A			CABLE: ASI-178 (477Q-1/1A) TO 331A-3F/3G	ASI DEALER
ASI-17-8B			CABLE: ASI-178 (477Q-1/1A) TO 331A-6D	ASI DEALER
ASI-17-8C			CABLE: ASI-178 (477Q-1/1A) TO ASI-166 (479X-2)	ASI DEALER
ASI-17-8D			CABLE: ASI-178 (477Q-1/1A) TO ASI-142-1 (477L-1)	ASI DEALER
ASI-17-9A			CABLE: ASI-179 (476E-7) TO 332E-4	ASI DEALER
ASI-18-1A		791-8153-001	CABLE: ASI-181 (975D-1) TO 860E-3	ASI DEALER
ASI-18-2A		635-5775-001	CABLE: ASI-182 (975D-2) TO ARINC 521 DME (W2)	ASI DEALER
ASI-18-2B		635-5774-001	CABLE: ASI-182 (975D-2) TO ARINC 568 DME (W3)	ASI DEALER
ASI-18-2C		635-5791-001	CABLE: ASI-182 (975D-2) TO SQUAWK NAUT (W4)	ASI DEALER
ASI-18-2D		635-5795-001	CABLE: ASI-182 (975D-2) TO DME 40 (W5)	ASI DEALER
ASI-18-2E			SUPPRESSOR LOAD BOX FOR 860E-3/4/5	ASI DEALER
ASI-18-2F			FAULT MONITOR (A8) TEST FIXTURE FOR 860E-5	ASI DEALER
ASI-18-2G		791-8381-001	TUBE EXTENDER A FOR 860E-3	COLLINS
ASI-18-2H		791-8390-001	TUBE EXTENDER B FOR 860E-3	COLLINS

**AVAILABILITY:**

ASI DEALER: CONTACT ANY ASI DEALER FOR QUOTE

COLLINS: CONTACT ROCKWELL COLLINS FOR QUOTE

GABLES: CONTACT GABLES ENGINEERING FOR QUOTE

TELEPHONICS: CONTACT TELEPHONICS FOR QUOTE

**ASI SPECIALIZED TEST EQUIPMENT LIST**

**AVAILABILITY SUBJECT TO CHANGE WITHOUT NOTICE**

<b>ASI MN</b>	<b>EQUIV MN</b>	<b>EQUIV PN</b>	<b>DESCRIPTION</b>	<b>AVAILABILITY</b>
ASI-18-2I			CABLE: SPECIAL DRIVER INPUT FOR 860E-3	ASI DEALER
ASI-18-2J			CABEL: SPECAIL SYNTHESIZER OUTPUT FOR 860E-3	ASI DEALER
ASI-18-3A		629-0001-001	CABLE: ASI-183 (971F-1) GYRO SIMULATOR CABLE (W1)	ASI DEALER
ASI-18-3B		629-0002-001	CABLE: ASI-183 (971F-1) TO 562C-5() (W2)	ASI DEALER
ASI-18-3C		629-0005-001	CABLE: ASI-183 (971F-1) TO 161E-2A (W5)	ASI DEALER
ASI-18-3D		629-0006-001	CABLE: ASI-183 (971F-1) TO 614E-5A (W6)	ASI DEALER
ASI-18-3E		629-0007-001	CABLE: ASI-183 (971F-1) TO 562C-5() (W7)	ASI DEALER
ASI-18-3F		629-0009-001	CABLE: ASI-183 (971F-1) TO 562C-8 (W9)	ASI DEALER
ASI-18-3G		629-0010-001	CABLE: ASI-183 (971F-1) TO 562C-5() (W10)	ASI DEALER
ASI-18-3H		629-9007-001	CABLE: ASI-183 (971F-1) TO 562C-8F/G (W11)	ASI DEALER
ASI-18-3I		629-9008-001	CABLE: ASI-183 (971F-1) TO 562C-8F (W12)	ASI DEALER
ASI-18-3J		634-9299-001	CABLE: ASI-183 (971F-1) TO 562C-8F (W13)	ASI DEALER
ASI-18-3K		634-9668-001	CABLE: ASI-183 (971F-1) TO 562C-8() (W14)	ASI DEALER
ASI-18-3L		634-2714-001	CABLE: ASI-183 (971F-1) TO 562C-8G (W15)	ASI DEALER
ASI-18-5A		629-9558-001	CABLE: ASI-185 (970G-1) TO 332C-10	ASI DEALER
ASI-18-5B		629-9557-001	CABLE: ASI-185 (970G-1) TO RMI-36	ASI DEALER
ASI-18-5C		687-7902-001	CABLE: ASI-185 TO ANT-60B/462B (ADF-60 FIG 10-2, ADF-462 FIG 5-14)	ASI DEALER
ASI-18-5D			CABLE: ASI-185 TO ASI-61 ADF ANT SIMULATOR	ASI DEALER
ASI-18-7A			CABLE: ASI-187 (970E-1) TO ASI-167 (978F-2S)	ASI DEALER
ASI-18-7B			CABLE: ASI-187 (970E-1) TO 332C-4	ASI DEALER
ASI-18-7C			CABLE: ASI-187 (970E-1) TO 332C-8	ASI DEALER
ASI-18-7D			CABLE: ASI-187 (970E-1) TO RMI-30, 332C-10	ASI DEALER
ASI-18-7E			CABLE: ASI-187 (970E-1) TO 332C-10B	ASI DEALER
ASI-18-7F			CABLE: ASI-187 (970E-1) TO RMI-36, BDI-36	ASI DEALER
ASI-18-8A			CABLE: ASI-188 TO WXT-XXX R/T	ASI DEALER
ASI-18-8B			CABLE: ASI-188 TO IND-XXX INDICATOR	ASI DEALER
ASI-18-8C			CABLE: ASI-188 TO ANT-XXX ANTENNA	ASI DEALER
ASI-18-8D			CABLE: ASI-188 TO DCP-270/300/325 DISPLAY CONTROL PANEL-J2	ASI DEALER
ASI-18-8E			CABLE: ASI-188 TO WXP-85C/D	ASI DEALER
ASI-18-8F			CABLE: ASI-188 TO DCP-270/300	ASI DEALER
ASI-18-8G			CABLE: WXA-85 TEST CABLE 1	ASI DEALER
ASI-18-8H			CABLE: WXA-85 TEST CABLE 2	ASI DEALER
ASI-18-9A		622-6454-002	SVO-65/75 MODIFICATION KIT FOR ASI-212-3 (960M-3)	ASI DEALER
ASI-18-9B		634-2835-001	SMT-65( ) CAPSTAN HOLDING FIXTURE	ASI DEALER
ASI-18-9C		634-2830-001	SMT-65E CAPSTAN HOLDING FIXTURE	ASI DEALER
ASI-18-9D			MAGNETIC CLUTCH HOLDING FIXTURE	ASI DEALER
ASI-18-9E		647-3825-001	BACKLASH TEST FIXTURE	COLLINS
ASI-19-2A		549-6540-003	CABLE: ASI-192 (477U-2) SENSE CABLE	ASI DEALER
ASI-19-2B		544-5037-002	CABLE: ASI-192 (477U-2) RF SIM CABLE	ASI DEALER
ASI-19-2C		549-6545-004	CABLE: ASI-192 (477U-2) LOOP ANT CABLE	ASI DEALER
ASI-19-2D		554-6109-004	CABLE: ASI-192 (477U-2) LOW CAP SENSE ADAPTER CABLE	ASI DEALER
ASI-19-3A		549-6544-004	CABLE: ASI-193 (477V-2) RECEIVER POWER CABLE	ASI DEALER
ASI-19-3B		549-6543-004	CABLE: ASI-193 INDICATOR POWER CABLE	ASI DEALER
ASI-19-4A			CABLE: ASI-194 TO 860F-1/4 P1B	ASI DEALER
ASI-19-4B			CABLE: ASI-194 TO 860F-1/4 J9	ASI DEALER
ASI-19-4C			CABLE: ASI-194 TO 339H( )	ASI DEALER
ASI-19-4D			CABLE: 860F-4 15 PIN EXTENDER	ASI DEALER
ASI-19-5A			CABLE: ASI-195 TO PS-823( )	ASI DEALER
ASI-19-6A			CABLE: ASI-196 (SN 104 AND ABOVE) TO PS-835( )	ASI DEALER
ASI-19-6B			CABLE: ASI-196 TO A2 PCB	ASI DEALER
ASI-19-9A		2037536-0501	CABLE: ASI-199 (ALT-51A) W101	ASI DEALER
ASI-19-9B		2037533-0501	CABLE: ASI-199 (ALT-51A) W102	ASI DEALER
ASI-19-9C		2037517-0501	CABLE: ASI-199 (ALT-51A) W103	ASI DEALER
ASI-19-9D		2037535-0501	CABLE: ASI-199 (ALT-51A) W104	ASI DEALER
ASI-19-9E		2037554-0501	CABLE: ASI-199 (ALT-51A) W105	ASI DEALER
ASI-19-9F		2068253-0701	CABLE: ASI-199 (ALT-51A) W113	ASI DEALER
ASI-19-9G		2038137-0007	CABLE: ASI-199 (ALT-51A) W112	ASI DEALER
ASI-19-9H		2038137-0008	CABLE: ASI-199 (ALT-51A) W114	ASI DEALER
ASI-19-9I		2037075-0501	EXT CARD: ASI-199 (ALT-51A) NARROW	ASI DEALER
ASI-19-9J		2037075-0502	EXT CARD: ASI-199 (ALT-51A) WIDE	ASI DEALER
ASI-19-9K		TT-1241	ALA-51A STRIPLINE TEST ADAPTER	ASI DEALER
ASI-19-9L		TT-3-2037042	ALA-51A CENTER CONDUCTOR ALIGNMENT TOOL	ASI DEALER
ASI-19-9M		TT-6-2037042	ALA-51A CENTER CONDUCTOR ALIGNMENT RING	ASI DEALER
ASI-19-9N			ALA-51A TRANSMITTER EXTENDER CABLE	ASI DEALER
ASI-19-9P			ALA-51A TRANSMITTER TEST CONNECTOR	ASI DEALER
ASI-19-11A			SPECIAL TEST CABLE, ADI-84 / 329B-7R	ASI DEALER
ASI-19-11B			ADAPTER CABE: ADI-84( )	ASI DEALER
ASI-19-61A	JF-380A	570-7997-01	CABLE: ASI-196-1 TO PS-850( ) / PS-855( )	ASI DEALER
ASI-20-01F			RACKMOUNT COMPUTER MONITOR FOR ASI-2001 (LCD)	ASI DEALER
ASI-20-1A	W2	762-1551-002	CABLE: ASI-201 (477U-3) RF INPUT	ASI DEALER

**AVAILABILITY:**

ASI DEALER: CONTACT ANY ASI DEALER FOR QUOTE  
 COLLINS: CONTACT ROCKWELL COLLINS FOR QUOTE  
 GABLES: CONTACT GABLES ENGINEERING FOR QUOTE  
 TELEPHONICS: CONTACT TELEPHONICS FOR QUOTE

**ASI SPECIALIZED TEST EQUIPMENT LIST**

**AVAILABILITY SUBJECT TO CHANGE WITHOUT NOTICE**

<b>ASI MN</b>	<b>EQUIV MN</b>	<b>EQUIV PN</b>	<b>DESCRIPTION</b>	<b>AVAILABILITY</b>
ASI-20-1B	W4	762-1561-002	CABLE: ASI-201 (477U-3) INVERTER SERVICING	ASI DEALER
ASI-20-1C	W3	549-6545-004	CABLE: ASI-201 (477U-3) LOOP ANTENNA	ASI DEALER
ASI-20-1D		762-1667-002	CABLE: ASI-201 (477U-3) LOW CAP SENSE ANT ADAPTER	ASI DEALER
ASI-20-1E		762-1499-004	TEST FIXTURE, ADF LOOP ANTENNA	ASI DEALER
ASI-20-1F	W1	762-1496-002	CABLE: POWER	ASI DEALER
ASI-20-2A		2064756-0501	CABLE: ASI-202 (DFT-73AA) W101	ASI DEALER
ASI-20-2B		2065211-0501	CABLE: ASI-202 (DFT-73AA) W102	ASI DEALER
ASI-20-2C		2064754-0501	CABLE: ASI-202 (DFT-73AA) W103	ASI DEALER
ASI-20-2D		2065171-0501	CABLE: ASI-202 (DFT-73AA) TO CNA-73CB/FC/FD CONTROL	ASI DEALER
ASI-20-2E		2065171-0502	CABLE: ASI-202 (DFT-73AA) TO CNA-73FB CONTROL	ASI DEALER
ASI-20-3A			CABLE: ASI-203 (980N-1) DUAL ADAPTER	ASI DEALER
ASI-20-3B			CABLE: ASI-203 (980N-1) TRIPLEX ADAPTER	ASI DEALER
ASI-20-3C			CABLE: ASI-203 DUAL SYSTEM RAMP TESTER	ASI DEALER
ASI-20-4XA			CABLE: J101 EXTENDER FOR ASI-204 OR 972S-1 (CUSTOM LENGTH)	ASI DEALER
ASI-20-4XB			CABLE: J102 EXTENDER FOR ASI-204 OR 972S-1 (CUSTOM LENGTH)	ASI DEALER
ASI-20-4XC			CABLE: J103 EXTENDER FOR ASI-204 OR 972S-1 (CUSTOM LENGTH)	ASI DEALER
ASI-20-4XD			CABLE: J104 EXTENDER FOR ASI-204 OR 972S-1 (CUSTOM LENGTH)	ASI DEALER
ASI-20-4XE			CABLE: 562C-13 EXTENDER FOR ASI-204 OR 972S-1 (CUSTOM LENGTH)	ASI DEALER
ASI-20-6A			334C-9/9A/11 SERVO RUN-IN FIXTURE	ASI DEALER
ASI-20-6B			334C-9/9A/11 CAPSTAN ANGLE INDICATOR	ASI DEALER
ASI-20-7A		617-9756-001	CABLE: ASI-207-2 (678P-5) J4 TO 490S-1 J1 (W1)	ASI DEALER
ASI-20-7B		617-9758-001	CABLE: ASI-207-2 (678P-5) J3 TO 490S-1 J3 (W2)	ASI DEALER
ASI-20-7C		617-9755-001	CABLE: ASI-207-2 (678P-5) J2 TO 618T-() P40 (W3)	ASI DEALER
ASI-20-7D		618-7711-001	CABLE: 618T-() TO WATTMETER (W4)	ASI DEALER
ASI-20-7E		618-7712-001	CABLE: 490S-1 J2 TO WATTMETER (W5)	ASI DEALER
ASI-20-7F		617-9743-001	CABLE: DC SUPPLY TO J35	ASI DEALER
ASI-20-7G		757-8979-001	CABLE: AC SUPPLY TO J36	ASI DEALER
ASI-20-7H			TRANSMITTER GAIN CONTROL	ASI DEALER
ASI-20-9A	W3	548-8002-004	CABLE: ASI-209 TO 618T-1/2/3	ASI DEALER
ASI-20-9A1	W3	548-8002-005	CABLE: ASI-209 TO 618T-1/2/3	ASI DEALER
ASI-20-9B	W4	548-8003-004	CABLE: ASI-209 TO 516H-1	ASI DEALER
ASI-20-9B1	W4	548-8003-005	CABLE: ASI-209 TO 516H-1	ASI DEALER
ASI-20-9C	W5	548-8023-003	CABLE: ASI-209 TO DC PWR	ASI DEALER
ASI-20-9C1	W5	548-8023-004	CABLE: ASI-209 TO DC PWR	ASI DEALER
ASI-20-9D	W6	548-8025-003	CABLE: ASI-209 TO AC PWR	ASI DEALER
ASI-20-9D1	W6	548-8025-004	CABLE: ASI-209 TO AC PWR	ASI DEALER
ASI-20-9E	W7	548-8029-004	CABLE: ASI-209 TO 714E-1/2	ASI DEALER
ASI-20-9E1	W7	548-8029-005	CABLE: ASI-209 TO 714E-1/2	ASI DEALER
ASI-20-9F	W8	548-8284-004	CABLE: ASI-209 TO 714E-3/6	ASI DEALER
ASI-20-9F1	W8	548-8284-005	CABLE: ASI-209 TO 714E-3/6	ASI DEALER
ASI-20-9G	W9	548-8285-004	CABLE: ASI-209 TO 309A-1	ASI DEALER
ASI-20-9G1	W9	548-8285-005	CABLE: ASI-209 TO 309A-1	ASI DEALER
ASI-20-9H	W10	548-8286-004	CABLE: ASI-209 TO 309A-2D	ASI DEALER
ASI-20-9H1	W10	548-8286-005	CABLE: ASI-209 TO 309A-2D	ASI DEALER
ASI-20-9J	W11	548-8287-004	CABLE: ASI-209 TO 180L-2/3	ASI DEALER
ASI-20-9J1	W11	548-8287-005	CABLE: ASI-209 TO 180L-2/3	ASI DEALER
ASI-20-9K	W12	549-4334-002	CABLE: RF	ASI DEALER
ASI-20-9K1	W12	549-4334-003	CABLE: RF	ASI DEALER
ASI-20-9L	W13	554-2915-004	CABLE: ASI-209 TO CU-351	ASI DEALER
ASI-20-9L1	W13	554-2915-005	CABLE: ASI-209 TO CU-351	ASI DEALER
ASI-20-9M	W18	757-1377-001	CABLE: ASI-209 TO 490T-1/1A	ASI DEALER
ASI-20-9M1	W18	757-1377-002	CABLE: ASI-209 TO 490T-1/1A	ASI DEALER
ASI-20-9N	W14	761-4971-001	CABLE: ASI-209 TO 490B-1	ASI DEALER
ASI-20-9N1	W14	761-4971-002	CABLE: ASI-209 TO 490B-1	ASI DEALER
ASI-20-9P	W15	761-4970-001	CABLE: ASI-209 TO 313V-1	ASI DEALER
ASI-20-9P1	W15	761-4970-002	CABLE: ASI-209 TO 313V-1	ASI DEALER
ASI-20-9Q	W16	756-5248-004	CABLE: ASI-209 TO 488A-2	COLLINS
ASI-20-9Q1	W17	756-5248-005	CABLE: ASI-209 TO 488A-2	COLLINS
ASI-20-9R	W17	761-4969-001	CABLE: ASI-209 TO DC PWR	ASI DEALER
ASI-20-9R1	W17	761-4969-002	CABLE: ASI-209 TO DC PWR	ASI DEALER
ASI-20-11A		762-1551-001	CABLE: ASI-201 (477U-3) RF INPUT	ASI DEALER
ASI-20-11B		762-1561-001	CABLE: ASI-201 (477U-3) INVERTER SERVICING	ASI DEALER
ASI-20-11C		549-6545-004	CABLE: ASI-201 (477U-3) LOOP ANTENNA	ASI DEALER
ASI-20-11D	SM-446/ARM-93	762-1667-001	CABLE: ASI-201 (477U-3) LOW CAP SENSE ANT ADAPTER	COLLINS
ASI-20-11E	MT-3667/ARM-93	762-1499-003	TEST FIXTURE, ADF LOOP ANTENNA	COLLINS
ASI-20-11F		762-1496-001	CABLE: POWER	COLLINS
ASI-20-74A		988-5561-001	CABLE: ASI-207-4 (964R-2) SPECIAL PURPOSE	ASI DEALER
ASI-20-74B		988-5562-001	CABLE: ASI-207-4 (964R-2) SPECIAL PURPOSE	ASI DEALER
ASI-20-74C		988-5563-001	CABLE: ASI-207-4 (964R-2) SPECIAL PURPOSE	ASI DEALER
ASI-20-74D		988-5564-001	CABLE: ASI-207-4 (964R-2) SPECIAL PURPOSE	ASI DEALER

**AVAILABILITY:**

ASI DEALER: CONTACT ANY ASI DEALER FOR QUOTE

COLLINS: CONTACT ROCKWELL COLLINS FOR QUOTE

GABLES: CONTACT GABLES ENGINEERING FOR QUOTE

TELEPHONICS: CONTACT TELEPHONICS FOR QUOTE



**ASI SPECIALIZED TEST EQUIPMENT LIST**

**AVAILABILITY SUBJECT TO CHANGE WITHOUT NOTICE**

<b>ASI MN</b>	<b>EQUIV MN</b>	<b>EQUIV PN</b>	<b>DESCRIPTION</b>	<b>AVAILABILITY</b>
ASI-20-74E		988-5565-001	CABLE: ASI-207-4 (964R-2) SPECIAL PURPOSE	ASI DEALER
ASI-20-74F		988-5566-001	CABLE: ASI-207-4 (964R-2) SPECIAL PURPOSE	ASI DEALER
ASI-20-74G1		988-5567-001	CABLE: ASI-207-4 (964R-2) SPECIAL PURPOSE	ASI DEALER
ASI-20-74G2		988-5567-002	CABLE: ASI-207-4 (964R-2) SPECIAL PURPOSE	ASI DEALER
ASI-20-74H		988-5568-001	CABLE: ASI-207-4 (964R-2) SPECIAL PURPOSE	ASI DEALER
ASI-20-74J		988-5569-001	CABLE: ASI-207-4 (964R-2) SPECIAL PURPOSE	ASI DEALER
ASI-20-74K		988-5570-001	CABLE: ASI-207-4 (964R-2) SPECIAL PURPOSE	ASI DEALER
ASI-20-74L		988-5571-001	CABLE: ASI-207-4 (964R-2) SPECIAL PURPOSE	ASI DEALER
ASI-20-74M1		988-5572-001	CABLE: ASI-207-4 (964R-2) SPECIAL PURPOSE	ASI DEALER
ASI-20-74M2		988-5572-002	CABLE: ASI-207-4 (964R-2) SPECIAL PURPOSE	ASI DEALER
ASI-20-82A		608-9941-001	CABLE, ASI-208 (980H-5) POWER CABLE	ASI DEALER
ASI-20-83A		617-9770-001	CABLE: ASI-208-3 (878L-39) W1 CABLE	COLLINS
ASI-20-84A		609-9433-001	CABLE: ASI-208-4 (878L-40) W1 CABLE	ASI DEALER
ASI-20-84B		609-9549-001	CABLE: ASI-208-4 (878L-40) W2 CABLE	ASI DEALER
ASI-20-84C		609-9487-001	CABLE: ASI-208-4 (878L-40) W3 CABLE	ASI DEALER
ASI-20-84D			EXTENDER CARD, 490S-1 A4	ASI DEALER
ASI-20-84E			EXTENDER CARD, 490S-1 A5	ASI DEALER
ASI-20-84F			EXTENDER CARD, 490S-1 A6	ASI DEALER
ASI-20-84G			EXTENDER CARD, 490S-1 A7	ASI DEALER
ASI-21-3A			CABLE: ASI-213 TO 334C-6/SVO-80	ASI DEALER
ASI-21-3B		628-5151-001	SERVO MOUNT HOLDING FIXTURE (351B-6J/K/L/M/ ONLY)	COLLINS
ASI-21-3C		608-3945-001	SERVO MOUNT HOLDING FIXTURE (EXCEPT 351B-6J/K/L/M)	COLLINS
ASI-21-3D		608-4005-001	ADAPTER HUB	COLLINS
ASI-21-3E		608-4006-001	SPANNER WRENCH	ASI DEALER
ASI-21-3F		608-4699-001	BACKLASH TEST FIXTURE (25-241J DIAL INDICATOR REQUIRED BUT NOT INCLUDED)	ASI DEALER
ASI-21-3G			PIN REMOVAL FXTURE (334C-6 MAN FIG 1011)	ASI DEALER
ASI-21-4A			ASI-214 TEST KIT FOR THE CTL-92/92A	ASI DEALER
ASI-21-4B			ASI-214 TEST KIT FOR THE CTL-92T	ASI DEALER
ASI-21-4C			ASI-214 TEST KIT FOR THE RTU-870A/T	ASI DEALER
ASI-21-4D			ASI-214 TEST KIT FOR THE TTC-920G	ASI DEALER
ASI-21-5A			CABLE: ASI-215 TO ASI-140, 160, 160B, 160C	ASI DEALER
ASI-21-5B			CABLE: ASI-215 TO ASI-150, 160, 160B, 160C, 190, 190B	ASI DEALER
ASI-21-5C			CABLE: ASI-215 TO ASI-200-2A/2B SYNCHRO CAL	ASI DEALER
ASI-21-5D			CABLE: ASI-215 TO ASI-200-2B RESOLVER CAL	ASI DEALER
ASI-21-7A			CABLE: ASI-217 TO CTL-22	ASI DEALER
ASI-21-8A			CABLE: ASI-218 TO DRI-55	ASI DEALER
ASI-21-8B			CABLE: CIRCUIT ANALYSIS	ASI DEALER
ASI-21-8C			CABLE: ONE TO ONE	ASI DEALER
ASI-21-24A		634-1773-001	CAPSTAN TORQUE ADJUSTMENT FIXTURE (INCLUDED WITH ASI-212-4)	ASI DEALER
ASI-21-24B		634-1773-002	CAPSTAN TORQUE ADJUSTMENT FIXTURE	ASI DEALER
ASI-21-24C		634-1723-001	CAPSTAN AJUSTMENT WRENCH (SUPPLIED WITH ASI-21-24A AND ASI-21-24B)	ASI DEALER
ASI-22-1A			CABLE: ASI-221 (968Y-1) TO 332C-4	ASI DEALER
ASI-22-1B			CABLE: ASI-221 (968Y-1) TO ASI-190/190B/160C	ASI DEALER
ASI-22-1C			CABLE: ASI-221 TO 51RV-2B TEST CONNECTOR	ASI DEALER
ASI-22-1D			CABLE: ASI-221 TO 51RV-4/5 TEST CONNECTOR	ASI DEALER
ASI-22-1E			CABLE: ASI-221 TO ASI-161 / 479V-3	ASI DEALER
ASI-22-1F			N1/N2 DC SOURCE (51RV-4/5 MAN FIG 910-911)	ASI DEALER
ASI-22-1G			CABLE: A18/A19 EXTENSION	ASI DEALER
ASI-22-2A			CABLE: ASI-222-1 TO 346D-1/2	ASI DEALER
ASI-22-3A			MOD KIT: ZIFOR III VOR RF DEMODULATOR FOR ASI-223/478A-3/78A-3	ASI DEALER
ASI-22-6A			CABLE: 972V-1 TO 331A-8H	ASI DEALER
ASI-22-6B			CABLE: 972V-1 TO AQU-6/A	ASI DEALER
ASI-22-6C			CABLE: 972V-1 TO 339D-1, ID-250 AND ID-1347	ASI DEALER
ASI-22-6D			CABLE: 972V-1 TO ID-1103 AND ID-387	ASI DEALER
ASI-22-11A			CABLE: ASI-221-1 TO UUT	ASI DEALER
ASI-22-11B			CABLE: ASI-221-1 TO 32 PIN TEST CONNECTOR	ASI DEALER
ASI-22-11C			CABLE: ASI-221-1 TO 25 PIN TEST CONNECTOR	ASI DEALER
ASI-22-11D			CABLE: ASI-221-1 TO 51R-7A/8A/8B	ASI DEALER
ASI-22-12A			CABLE: ASI-221-2 TO 618M-1/2B/2D/3/3A/4/4A/5/5A	ASI DEALER
ASI-22-12B			CABLE: ASI-221-2 TO UUT 29 PIN TEST CONNECTOR	ASI DEALER
ASI-22-12C			CABLE: ASI-221-2 TO G7406	ASI DEALER
ASI-24-2A			CABLE: ASI-242R TO 621A-6/6A	ASI DEALER
ASI-24-2B			CABLE: ASI-242R TO 621A-3	ASI DEALER
ASI-24-2C			IF AMPLIFIER ALIGNMENT COVER FOR 621A-6 (MAN FIG 1002)	ASI DEALER
ASI-24-4A		2039608-0501	CABLE: ASI-244-1 (PPT-1FB) W101	ASI DEALER
ASI-24-8A			CABLE: ASI-248 TO AIU-4000	ASI DEALER
ASI-24-9A		676-1949-011	CABLE: ASI-249 TO SVT-1000	ASI DEALER
ASI-24-42A		2039608-0502	CABLE: ASI-244-2 (PPT-1FB) W101	ASI DEALER
ASI-24-42B		8056285-0501	CABLE: ASI-244-2 (PPT-1FB) W102	ASI DEALER
ASI-25-2A		2041579-0502	CABLE: ASI-252-1 (COT-1FB) W101	ASI DEALER

**AVAILABILITY:**

ASI DEALER: CONTACT ANY ASI DEALER FOR QUOTE

COLLINS: CONTACT ROCKWELL COLLINS FOR QUOTE

GABLES: CONTACT GABLES ENGINEERING FOR QUOTE

TELEPHONICS: CONTACT TELEPHONICS FOR QUOTE

**ASI SPECIALIZED TEST EQUIPMENT LIST**

**AVAILABILITY SUBJECT TO CHANGE WITHOUT NOTICE**

<b>ASI MN</b>	<b>EQUIV MN</b>	<b>EQUIV PN</b>	<b>DESCRIPTION</b>	<b>AVAILABILITY</b>
ASI-25-2B		2041580-0501	CABLE: ASI-252-1 (COT-1FB) W102	ASI DEALER
ASI-25-3A			CABLE: ASI-253 TO VG-204( )	ASI DEALER
ASI-25-3B			CABLE: ASI-253 TO VG-206( )	ASI DEALER
ASI-25-3C			CABLE: ASI-253 TO VG-208	ASI DEALER
ASI-25-7A			CABLE: ASI-257 (CTS-451) TO DME-451 (W1)	ASI DEALER
ASI-25-8A			CABLE: MAIN EXT FOR 339H-6 (MAN FIG 908)	ASI DEALER
ASI-25-8B			CABLE: PWR SUPPLY EXT FOR 339H-6 (MAN FIG 909)	ASI DEALER
ASI-25-9A		647-6485-003	SERVO ASSY PIN NO. 3 (339H-6 MAN FIG 920)	ASI DEALER
ASI-25-9B		647-6485-004	SERVO ASSY PIN NO. 4 (339H-6 MAN FIG 920)	ASI DEALER
ASI-25-9C		647-6485-001	SERVO ASSY PIN NO 1 (RDMI-743)	ASI DEALER
ASI-25-9D		647-6485-002	SERVO ASSY PIN NO 2 (RDMI-743)	ASI DEALER
ASI-25-9E		647-6485-005	SERVO ASSY PIN NO 5	ASI DEALER
ASI-25-52A		2040035-0501	CABLE: ASI-252-2 (COT-4A) W1	ASI DEALER
ASI-25-52B		2040020-0501	CABLE: ASI-252-2 (COT-4A) W2	ASI DEALER
ASI-26-01A	W1	T321703-49	CABLE , ASI-260-1 PWR	ASI DEALER
ASI-26-01B	W2	T321703-50	CABLE, ASI-260-1 (T321703) TO UUT	ASI DEALER
ASI-26-01C	W3	T321703-51	CABLE, ASI-260-1 (T321703) TO UUT	ASI DEALER
ASI-26-01D		T321677	INDEXING TURNTABLE	ASI DEALER
ASI-26-01E		T321686	VG-401 HOLDING FIXTURE	ASI DEALER
ASI-26-01F		T3012055	HOLDING FIXTURE	ASI DEALER
ASI-26-01G		T3012067	SLIPRING GUARD	ASI DEALER
ASI-26-01H		T893165	BRUSH GUARD	ASI DEALER
ASI-26-01J		T3012074	HEMISPHERE ALIGNING FIXTURE	ASI DEALER
ASI-26-01K		T3012040	SYNCHRO ALIGNMENT BLOCK	ASI DEALER
ASI-26-01L		T3012026	SYNCHRO CEMENTING FIXTURE	ASI DEALER
ASI-26-01M		T3012027	SLIPRING ALIGNMENT FIXTURE	ASI DEALER
ASI-26-01N		T3012029	SLIPRING ALIGNMENT TOOL	ASI DEALER
ASI-26-01P		T3012050	ROTOR SHIMMING FIXTURE	ASI DEALER
ASI-26-01Q		T3013063	BRAKE SHIMMING FIXTURE	ASI DEALER
ASI-26-01R		T3012066	ROTOR ASSEMBLT BUSHING (SAME AS ASI-26-01R)	ASI DEALER
ASI-26-01S		T3012062	ANVIL	ASI DEALER
ASI-26-01T		T3012469	ADAPTER SET	ASI DEALER
ASI-26-01U		T675344	TORQUE NUT DRIVER	ASI DEALER
ASI-26-01V		T3009296	OFFSET WRENCH	ASI DEALER
ASI-26-01W		T3012054	ROTOR BALANCE ADAPTER SET	ASI DEALER
ASI-26-01X		T674655	STATIC BALANCE FIXTURE	ASI DEALER
ASI-26-01Y		T3017560	BALANCE WEIGH	ASI DEALER
ASI-26-01Z		T3012042	ALIGNMENT PLATE	ASI DEALER
ASI-26-02A	W1	T321705-49	CABLE , ASI-260-2 PWR	ASI DEALER
ASI-26-02B	W2	T321705-50	CABLE, ASI-260-2 (T321705) TO UUT	ASI DEALER
ASI-26-02C	W3	T321705-51	CABLE, ASI-260-2 (T321705) TO UUT	ASI DEALER
ASI-26-02D		T897177	RUN-OUT FIXTURE	ASI DEALER
ASI-26-02E		T3012051	GIMBAL SHIMMING STEP PLUG	ASI DEALER
ASI-26-02F		T3000626	HOLDING BLOCK	ASI DEALER
ASI-26-02G		T898656	DIAL INDICATOR POST	ASI DEALER
ASI-26-02H		T626912	GIMBAL BALANCING FIXTURE	ASI DEALER
ASI-26-02J		T3013271	SPACER BLOCK	ASI DEALER
ASI-26-02K		T322896	BASE HOLDING FIXTURE	ASI DEALER
ASI-26-02L		T322710	NUT COVER TIGHTENING TOOL	ASI DEALER
ASI-26-3J			CABLE: HIGH VOLTAGE JUMPER	ASI DEALER
ASI-26-3K1			CABLE: AZIMUTH MOTOR HARNESS JUMPER	ASI DEALER
ASI-26-3K2			CABLE: ELEVATION MOTOR HARNESS JUMPER	ASI DEALER
ASI-26-6E			CABLE: ASI-266 TO WC-810	ASI DEALER
ASI-26-6F			CABLE: ASI-266 TO TEST DISPLAY UNIT (T334579)	ASI DEALER
ASI-26-6J			ELEVATION DRIVE CABLE ADJUSTMENT TOOL	ASI DEALER
ASI-26-6J1			CABLE: P800 TEST HARNESS TO WC-8XX CTL AND WI-800 SLAVE IND	ASI DEALER
ASI-26-9J			CABLE: RECEIVER EXTENDER 653-2349-001 (12 PIN / DOUBLE ROW / PIN 8 KEY)	ASI DEALER
ASI-26-9J1			CABLE: RECEIVER EXTENDER 659-7802-001 (8 PIN / DOUBLE ROW / PIN 7 KEY)	ASI DEALER
ASI-26-9K			CABLE: A7P1 EXT 676-5300/827-3493/628-6960 (28 PIN / DOUBLE ROW / PIN 10 KEY)	ASI DEALER
ASI-26-9K1			CABLE: P1 EXT 628-9858-002/002 (28 PIN / DOUBLE ROW / PIN 17 KEY)	ASI DEALER
ASI-26-9K2			CABLE: A4A5P1 EXT 653-3853-001 (28 PIN / DOUBLE ROW / PIN 6 KEY)	ASI DEALER
ASI-26-9L			CABLE: SCAN TO SCAN BYPASS (16 PIN / DOUBLE ROW)	ASI DEALER
ASI-26-9M			CABLE: TILT ERROR ADAPTER (10 PIN / DOUBLE ROW / PIN 10 KEY)	ASI DEALER
ASI-26-9N			CABLE: EXCITER EXT 622-9744-002 (6 PIN / SINGLE ROW / NO KEY)	ASI DEALER
ASI-26-9N1			CABLE: EXCITER EXT (6 PIN / SINGLE ROW / PIN 3 KEY)	ASI DEALER
ASI-27-0A		1711819-504	CABLE: ASI-270(J3) TO AFC(P501)	ASI DEALER
ASI-27-0B		1711819-502	CABLE: ASI-270(J1) TO IF(P404)	ASI DEALER
ASI-27-0C		1711819-503	CABLE: ASI-270(J2) TO GENERATOR	ASI DEALER
ASI-27-0D		1717866-501	DUMMY MIXER: IF AMP ALIGN AND BANDWIDTH	ASI DEALER
ASI-27-0E		1717868-501	DUMMY MIXER: IF AMP AND ISOCONTOUR	ASI DEALER

**AVAILABILITY:**

ASI DEALER: CONTACT ANY ASI DEALER FOR QUOTE

COLLINS: CONTACT ROCKWELL COLLINS FOR QUOTE

GABLES: CONTACT GABLES ENGINEERING FOR QUOTE

TELEPHONICS: CONTACT TELEPHONICS FOR QUOTE

**ASI SPECIALIZED TEST EQUIPMENT LIST**

**AVAILABILITY SUBJECT TO CHANGE WITHOUT NOTICE**

<b>ASI MN</b>	<b>EQUIV MN</b>	<b>EQUIV PN</b>	<b>DESCRIPTION</b>	<b>AVAILABILITY</b>
ASI-27-0F		1717869-503	DUMMY MIXER: AFC BANDPASS FILT / DESC	ASI DEALER
ASI-27-5A1		T322745-1	CABLE: ASI-275-1 (T307976) TO C-14 GYRO SYNCHRONIZER (PN 4019190-1 THRU -7)	ASI DEALER
ASI-27-5A2		T322745-2	CABLE: ASI-275-1 (T307976) TO C-14 GYRO SYNCHRONIZER (PN 4019190-13/-16/-18)	ASI DEALER
ASI-27-5A3		T322771	CABLE: ASI-275-1 (T307976) TO C-14 GYRO SYNCHRONIZER (PN 4019190-13/-16)	ASI DEALER
ASI-27-5A4		T322870	CABLE: ASI-275-1 (T307976) TO C-14D GYRO (PN 4020577-VAR)	ASI DEALER
ASI-27-5B		T307972	SCORSBY ADAPTER PLATE	ASI DEALER
ASI-27-5C1		T3012061-A	ROTOR CLAMP A	ASI DEALER
ASI-27-5C2		T3012061-B	ROTOR CLAMP B	ASI DEALER
ASI-27-5D		T3012066	ROTOR ASSEMBLT BUSHING (SAME AS ASI-26-01R)	ASI DEALER
ASI-27-5E		T897487	HEIGHT DIMENSION GAUGE	ASI DEALER
ASI-27-5F		T3075022	BEARING PARALLEL CHECKING TOOL	ASI DEALER
ASI-27-5G		T898487	OPEN END WRENCH	ASI DEALER
ASI-27-5H		T896500	BEARING PRELOAD ADAPTER SET	ASI DEALER
ASI-27-5I		T891970	BEARING PRELOAD FIXTURE	ASI DEALER
ASI-27-5J		T896497	ROTOR BALANCING ADAPTERS	ASI DEALER
ASI-27-5K		T896276	ROTOR BALANCING CRADLE	ASI DEALER
ASI-27-5L		T897024	TERMINAL INSERTER	ASI DEALER
ASI-27-5M		T897413	SLIPRING CEMENTING CLAMPS	ASI DEALER
ASI-27-5N		T896625	SWITCH RING ALIGNMENT FIXTURE	ASI DEALER
ASI-27-5P		T896455	MAGNET CEMENTING FIXTURE	ASI DEALER
ASI-27-5Q		T897167	STATIC BALANCE FIXTURE	ASI DEALER
ASI-27-5R		T896773	SLIPRING ALIGNING AND CEMENTING TOOL	ASI DEALER
ASI-27-5S		T896871	SLIPRING PROTECTOR	ASI DEALER
ASI-27-5T		T898023	DIAL INDICATOR MOUNTING ADAPTER	ASI DEALER
ASI-27-5U		T896598	GIMBAL ASSEMBLY BALANCE FIXTURE	ASI DEALER
ASI-27-5V		T3008089	DIAL INDICATING MOUNTING ADAPTER	ASI DEALER
ASI-27-5W		T896496	STATOR LOC. AND CEMENTING FIXTURE	ASI DEALER
ASI-27-5X		T3009480	WEIGHT	ASI DEALER
ASI-27-5Y		T896405	PUNCH AND ANVIL	ASI DEALER
ASI-27-5Z		T896499	PRESSING TOOL	ASI DEALER
ASI-28-2A			BOX 1 BREAKOUT BOX FOR 980L-1/1A	ASI DEALER
ASI-28-2B			PWR INTLK SHORTING CONN	ASI DEALER
ASI-28-2C			BOX 2 CONTINUITY TESTER	ASI DEALER
ASI-28-5A			CABLE: ASI-285 TO COLLINS 329B-4( )	ASI DEALER
ASI-28-5B			CABLE: ASI-285 TO COLLINS 329B-6( ) (329B-6D/E MAN FIG 1004)	ASI DEALER
ASI-28-6A		634-9647-001	CABLE: FGC-80 UNIT	ASI DEALER
ASI-28-6B		634-9648-001	CABLE: FGC-80 AIRCRAFT	ASI DEALER
ASI-28-6C		634-9649-001	CABLE: APC-80 UNIT	ASI DEALER
ASI-28-6D		634-9650-001	CABLE: APC-80 AIRCRAFT	ASI DEALER
ASI-28-6E		634-9651-001	CABLE: APA-80 UNIT	ASI DEALER
ASI-28-6F		634-9652-001	CABLE: APA-80 AIRCRAFT	ASI DEALER
ASI-28-6G		634-9653-001	CABLE: 562A-5M5 UNIT	ASI DEALER
ASI-28-6H		634-9654-001	CABLE: 562A-5M5 AIRCRAFT	ASI DEALER
ASI-28-6I		634-9655-001	CABLE: 562C-5 UNIT	ASI DEALER
ASI-28-6J		634-9656-001	CABLE: 562C-5 AIRCRAFT	ASI DEALER
ASI-28-7A	CT3124		CABLE: ASI-287 (CT2542) TO 627248	ASI DEALER
ASI-28-7B	CT8008		EXTENDER CARD: 36 POS	ASI DEALER
ASI-28-7C	CR8007		SHAFT EXTENDER: S1	ASI DEALER
ASI-28-8A		629-9929-001	CABLE: ASI-288 (968A-1) TO FMC-28/28A J1 (W1)	COLLINS
ASI-28-8B		629-9929-002	CABLE: ASI-288 (968A-1) TO FMC-28/28A J2 (W2)	COLLINS
ASI-28-8C		629-9935-001	EXTENDER CARD: FMC-28/28A (P6-J6) (W3)	COLLINS
ASI-28-8D		629-9935-002	EXTENDER CARD: FMC-28/28A (P7-J7) (W4)	COLLINS
ASI-28-8E			CABLE: ASI-288 TO ASI-167 (978F-2S)	ASI DEALER
ASI-29-1A		634-9424-001	CABLE: ASI-291 (968J-1) TO COLLINS 622-4149-001 (W1)	COLLINS
ASI-29-1B		634-9425-001	CABLE: ASI-291 (968J-1) TO COLLINS 622-4149-001 (W2)	COLLINS
ASI-29-4A	W1	638-2433-001	CABLE: ASI-294 (970D-2) TO ADC-80( ) (W1)	ASI DEALER
ASI-29-6A		629-4898-001	CABLE: ASI-296 (971T-1) TO FPC-75(BP/TP) (W1)	COLLINS
ASI-29-6B		629-4899-001	CABLE: ASI-296 (971T-1) TO FPC-75(ATE) (W2)	COLLINS
ASI-29-6C		629-4886-001	CABLE: ASI-296 (971T-1) 115 VAC 400 HZ PWR (W3)	COLLINS
ASI-29-6D		547-2795-000	CABLE: ASI-296 (971T-1) 115 VAC 60 HZ PWR (W4)	COLLINS
ASI-29-6E		629-4851-001	CABLE: ASI-296 (971T-1) RED PROBE	COLLINS
ASI-29-6F		629-4851-002	CABLE: ASI-296 (971T-1) BLK PROBE	COLLINS
ASI-29-6G		629-4851-003	CABLE: ASI-296 (971T-1) GRN PROBE	COLLINS
ASI-29-9A			CABLE: ASI-299 TO ALT-4000 / ALT-50A / ALT-55B	ASI DEALER
ASI-29-9B			CABLE: ASI-299 TO ALI-55	ASI DEALER
ASI-29-9C			CABLE: ASI-299 TO DRI-55 (FOR USE WITH BOTH ALT-55 AND ALT-4000)	ASI DEALER
ASI-29-9C1			CABLE: ASI-299 TO DRI-55 (FOR USE WITH ALT-55 ONLY)	ASI DEALER
ASI-29-9C2			CABLE: ASI-299 TO DRI-55 (FOR USE WITH ALT-4000 ONLY)	ASI DEALER
ASI-29-9D			TEST FIXTURE: ALT-50/55 PRE AMPLIFIER	ASI DEALER
ASI-29-9E			ALT-4000 DIG CARD EXT CABLE	ASI DEALER

**AVAILABILITY:**

ASI DEALER: CONTACT ANY ASI DEALER FOR QUOTE  
 COLLINS: CONTACT ROCKWELL COLLINS FOR QUOTE  
 GABLES: CONTACT GABLES ENGINEERING FOR QUOTE  
 TELEPHONICS: CONTACT TELEPHONICS FOR QUOTE

**ASI SPECIALIZED TEST EQUIPMENT LIST**

**AVAILABILITY SUBJECT TO CHANGE WITHOUT NOTICE**

<b>ASI MN</b>	<b>EQUIV MN</b>	<b>EQUIV PN</b>	<b>DESCRIPTION</b>	<b>AVAILABILITY</b>
ASI-29-9F			ALT-4000 DIG TO XMTR CARD EXT	ASI DEALER
ASI-29-9G			ALT-4000 BITE CABLE FOR CTC-429	ASI DEALER
ASI-29-9H			ALT-4000 DIG TO TRANSMITTER CARD EXTENDER	ASI DEALER
ASI-29-9J			ALT-4000 BITE INTERFACE CABLE FOR GP-429	ASI DEALER
ASI-29-9K			ALT-50A/55B/860F-2 SPECIAL RF TEST CABLE (2 EACH REQUIRED FOR TESTING)	ASI DEALER
ASI-29-42A	W1	827-6554-001	CABLE: ASI-294-2 (970D-2A) TO ADC-80( )	ASI DEALER
ASI-29-42B	W2	827-6554-002	CABLE: ASI-294-2 (970D-2A) TO ADC-85/86/850	ASI DEALER
ASI-30-1A		751-1767-001	CABLE: ASI-301 (973W-3) W1	ASI DEALER
ASI-30-1B		751-1767-002	CABLE: ASI-301 (973W-3) W2	ASI DEALER
ASI-30-1C		751-1767-003	CABLE: ASI-301 (973W-3) W3	ASI DEALER
ASI-30-1D		751-1766-001	CABLE: ASI-301 (973W-3) W4	ASI DEALER
ASI-30-1E		751-1766-002	CABLE: ASI-301 (973W-3) W5	ASI DEALER
ASI-30-1F		751-1765-001	CABLE: ASI-301 (973W-3) W6	ASI DEALER
ASI-30-1G		751-1762-001	CABLE: ASI-301 (973W-3) W7	ASI DEALER
ASI-30-1H		751-8272-001	CABLE: ASI-301 (973W-3) W8	ASI DEALER
ASI-30-2A		651-3032-001	CABLE: ASI-302 (966B-1) TO POWER AMP	ASI DEALER
ASI-30-2B		651-3028-001	CABLE: ASI-302 (966B-1) TO POWER SUPPLY	ASI DEALER
ASI-30-2C		651-3663-001	CABLE: ASI-302 (966B-1) RF	ASI DEALER
ASI-30-2D		651-3667-001	CABLE: ASI-302 (966B-1) RF	ASI DEALER
ASI-30-2E		651-3667-002	CABLE: ASI-302 (966B-1) RF	ASI DEALER
ASI-30-2F		651-3669-001	CABLE: ASI-302 (966B-1) RF	ASI DEALER
ASI-30-8A		629-0389-001	CABLE: ASI-308-1/-2 (AN/ARM-165/-165A) W1	ASI DEALER
ASI-30-8B		629-0390-001	CABLE: ASI-308-1/-2 (AN/ARM-165/-165A) W2	ASI DEALER
ASI-30-8C		629-0391-001	CABLE: ASI-308-1/-2 (AN/ARM-165/-165A) W3	ASI DEALER
ASI-30-8D		629-0392-001	CABLE: ASI-308-1/-2 (AN/ARM-165/-165A) W4	ASI DEALER
ASI-30-8E		629-9063-001	CABLE: ASI-308-1/-2 (AN/ARM-165/-165A) W5	ASI DEALER
ASI-30-8F		629-9064-001	CABLE: ASI-308-1/-2 (AN/ARM-165/-165A) W6	ASI DEALER
ASI-30-8G		629-9065-001	CABLE: ASI-308-1/-2 (AN/ARM-165/-165A) W7	ASI DEALER
ASI-30-8H		629-9067-001	CABLE: ASI-308-1/-2 (AN/ARM-165/-165A) W8	ASI DEALER
ASI-30-8J		629-9068-001	CABLE: ASI-308-1/-2 (AN/ARM-165/-165A) W9	ASI DEALER
ASI-30-8K		629-9515-001	CABLE: ASI-308-1/-2 (AN/ARM-165/-165A) W11	ASI DEALER
ASI-30-9A		659-3488-002	CABLE: ASI-309 1553 ADDRESS CABLE	ASI DEALER
ASI-31-0A		629-9161-001	CABLE: ASI-310 (438K-2) W1	ASI DEALER
ASI-31-0B		629-9162-001	CABLE: ASI-310 (438K-2) W2	ASI DEALER
ASI-31-0C		629-9163-001	CABLE: ASI-310 (438K-2) W3	ASI DEALER
ASI-31-0D		629-9164-001	CABLE: ASI-310 (438K-2) W4	ASI DEALER
ASI-31-0E		629-9165-001	CABLE: ASI-310 (438K-2) W5	ASI DEALER
ASI-31-0F		629-9167-001	CABLE: ASI-310 (438K-2) W7	ASI DEALER
ASI-31-0G		646-6578-001	CABLE: ASI-310 (438K-2) W8	ASI DEALER
ASI-31-0H		646-7044-001	EXTENDER CARD: ASI-310 (438K-2)	ASI DEALER
ASI-31-3A		629-0102-001	CABLE, ASI-313 (MX-9626/ARM) RF CABLE	ASI DEALER
ASI-32-4A		752-7275-001	CABLE: ASI-324 (964R-2) W1	ASI DEALER
ASI-32-71A			TEST ADAPT: ASI-327-1 TO 51RV-4/5 / 51R-10 (51RV-4/5 MAN FIG 907)	ASI DEALER
ASI-32-71B			BREAKOUT BOX: 51RV-4/5 / 51R-10 (51RV-4/5 MAN FIG 907)	ASI DEALER
ASI-32-72A			TEST ADAPT: ASI-327-2 TO 618M-( ) WITHOUT ATE CONNECTOR	ASI DEALER
ASI-32-81A		761-4400-001	CABLE: ASI-328-1 (878L-15) W2	COLLINS
ASI-32-82A		554-6957-001	CABLE: ASI-328-2 (878L-16) W3	ASI DEALER
ASI-32-83A		554-6958-001	CABLE: ASI-328-3 (878L-17) W4	ASI DEALER
ASI-32-83B		637-1964-001	DISCRIMINATOR TESTER ADAPTER FOR 548S-( )	ASI DEALER
ASI-32-84A		761-4600-001	CABLE: ASI-328-4 (980H-1-POWER PANEL) W1	COLLINS
ASI-32-94A			COAXIAL ADAPTER FOR CU-2275(V)/ARC-190(V)	ASI DEALER
ASI-32-94B			ADAPTER BRACKET FOR CU-2575/ARC-229	ASI DEALER
ASI-32-94C			ADAPTER CABLE FOR CU-2575/ARC-229	ASI DEALER
ASI-32-94D			COUPLER ADAPTER CABLE FOR CU-2575/ARC-229	ASI DEALER
ASI-33-81A		638-2405-001	TEST FIXTURE: ALC MONITOR	ASI DEALER
ASI-33-81B		638-2406-001	TEST FIXTURE: SNIFFER	ASI DEALER
ASI-33-81C		638-2362-001	CABLE: RF/TCR	ASI DEALER
ASI-33-81D		638-2388-001	CABLE: RF/PWR	ASI DEALER
ASI-33-81E		634-9480-001	CABLE: CTL-201/201A/220	ASI DEALER
ASI-33-81F		TP6-3955-013-1	CABLE: CTL-230	ASI DEALER
ASI-33-83A		638-2383-001	CABLE: TCR	ASI DEALER
ASI-33-83B		638-2384-001	CABLE: PWR	ASI DEALER
ASI-33-83C		638-2385-001	CABLE: AAC (37 PIN D CONNECTOR)	ASI DEALER
ASI-33-83D		638-2404-001	TEST FIXTURE: ALC CAPACITOR	ASI DEALER
ASI-33-83E		634-9021-001	TEST FIXTURE	ASI DEALER
ASI-33-83F		634-9022-001	TEST FIXTURE: DISCRIMINATOR ALIGNMENT BOX	ASI DEALER
ASI-33-83G		628-8442-001	CABLE: AAC-200P/220P (CIRCULAR CONNECTOR PER CTS-202 SIL1-86)	ASI DEALER
ASI-33-83H		628-8518-001	CABLE: PAC-200/230 TO CTS-200/202 ADAPTER CABLE	COLLINS
ASI-33-83J		628-8519-001	PAC-200/230 ANTENNA SIMULATOR (DUMMY LOAD)	COLLINS
ASI-33-83K		622-8522-001	PAC-200/230 TEST CRADLE	COLLINS

**AVAILABILITY:**

ASI DEALER: CONTACT ANY ASI DEALER FOR QUOTE  
 COLLINS: CONTACT ROCKWELL COLLINS FOR QUOTE  
 GABLES: CONTACT GABLES ENGINEERING FOR QUOTE  
 TELEPHONICS: CONTACT TELEPHONICS FOR QUOTE

**ASI SPECIALIZED TEST EQUIPMENT LIST**

**AVAILABILITY SUBJECT TO CHANGE WITHOUT NOTICE**

<b>ASI MN</b>	<b>EQUIV MN</b>	<b>EQUIV PN</b>	<b>DESCRIPTION</b>	<b>AVAILABILITY</b>
ASI-33-83L		TP6-1146-011	ATM-200 BREAKOUT CABLE	ASI DEALER
ASI-33-84A		638-2448-001	CABLE: AAC/PAC	ASI DEALER
ASI-33-84B		628-8526-001(1)	PAC-200/230 IN CIRCUIT TEST CABLE	ASI DEALER
ASI-33-84C		628-8526-001(2)	PAC-200/230 OUT OF CIRCUIT TEST CABLE	ASI DEALER
ASI-33-85A		634-9995-001	CABLE: W1	ASI DEALER
ASI-33-85B		634-9996-001	CABLE: W2	ASI DEALER
ASI-33-85C		634-9994-001	CABLE: W3	ASI DEALER
ASI-33-85D		TP6-2800-013	CABLE: SELCAL WIRING CHECK ADAPTER	ASI DEALER
ASI-34-01A		757-6385-001	CABLE: W1	COLLINS
ASI-34-01B			437R-1 CONTACT ADJUSTMENT TOOL (437R-1 / 980H-2 MAN FIG 5-10)	ASI DEALER
ASI-34-4A		634-3060-001	CABLE: ASI-344 TO DAU-850/CTS-2000	COLLINS
ASI-34-5A		621-3517-001	CABLE: ASI-345 (578F-1) TO 334C-3	ASI DEALER
ASI-34-8A			CABLE: ASI-348 TO SVO-65	ASI DEALER
ASI-34-8B		135-3602-961	BALL BEARING INNER RACE REMOVAL TOOL	COLLINS
ASI-34-8C		135-3602-122	BALL BEARING ASSEMBLY FIXTURE	COLLINS
ASI-34-82C		827-1543-001	CLUTCH TEST FIXTURE	COLLINS
ASI-34-82D		634-1942-001	TSM-1001 CAPSTAN LOCKING FIXTURE	COLLINS
ASI-34-82E		634-1943-001	SMT-1001 CAPSTAN LOCKING FIXTURE	COLLINS
ASI-34-82F		634-1785-001	TSM-1000 CAPSTAN LOCKING FIXTURE	COLLINS
ASI-35-4A		638-0246-001	CABLE: ASI-354 TO AHC-85	ASI DEALER
ASI-35-4B		638-0246-002	CABLE: ASI-354 TO AHC-85	ASI DEALER
ASI-35-4C		638-0246-003	CABLE: ASI-354 TO AHC-85-A5	ASI DEALER
ASI-35-4D		638-0246-004	CABLE: ASI-354 TO AHC-85-A6	ASI DEALER
ASI-35-4E		638-0246-005	CABLE: ASI-354 TO COMPUTER	ASI DEALER
ASI-35-4F		638-0246-006	CABLE: ASI-354 TO COMPUTER	ASI DEALER
ASI-35-4G		638-0246-007	CABLE: ASI-354 TO AHC-85	ASI DEALER
ASI-35-41A			CABLE: 440Y-76 TO PRO LINE II CARD (APC-65/FGC-65)	ASI DEALER
ASI-35-41B			CABLE: REAR 36 PIN EXTENDER FOR APC-65/FGC-65)	ASI DEALER
ASI-35-41C			CABLE: REAR 30 PIN EXTENDER FOR APC-65/FGC-65)	ASI DEALER
ASI-35-41D			CABLE: REAR 26 PIN EXTENDER FOR APC-65/FGC-65)	ASI DEALER
ASI-35-41E			CABLE: FRONT EXTENDER FOR APC-65/FGC-65)	ASI DEALER
ASI-35-5A		638-0716-001	CABLE: ASI-355 TO VHF-21	ASI DEALER
ASI-35-5B		638-0717-001	CABLE: ASI-355 TO VHF-22	ASI DEALER
ASI-35-5C		638-0721-001	CABLE: ASI-355 TO VHF-422	ASI DEALER
ASI-35-5D		638-0723-001	CABLE: ASI-355 TO VHF-ESS INTERFACE	ASI DEALER
ASI-35-7A			CABLE: ASI-357 TO KDM-706 / KTU-709	ASI DEALER
ASI-35-7B			CABLE: ASI-357 TO KN-62 / -62A / -64	ASI DEALER
ASI-35-7C			CABLE: ASI-357 TO KN-63	ASI DEALER
ASI-35-7D			CABLE: ASI-357 TO KDI-572 / -574	ASI DEALER
ASI-35-7E			CABLE: ASI-357 TO KDI-573	ASI DEALER
ASI-35-7F			CABLE: ASI-357 TO KFS-562	ASI DEALER
ASI-35-7G			CABLE: ASI-357 TO KX-170A / -170B / -175A / -175B	ASI DEALER
ASI-35-8A		634-9812-001	CABLE: ASI-358 (969Y-1) TO 331D-7 HSI (P/O ASI-358 HSI TEST PANEL) (W1)	ASI DEALER
ASI-35-8B		601-2274-001	EXTENDER CARD A6: 331D-7 HSI	ASI DEALER
ASI-35-8C		601-2275-001	EXTENDER CARD A4: 331D-7 HSI	ASI DEALER
ASI-35-8D		601-2276-001	EXTENDER CARD A3: 331D-7 HSI	ASI DEALER
ASI-35-8E		601-2277-001	EXTENDER CARD A5: 331D-7 HSI	ASI DEALER
ASI-36-0E			CABLE: ASI-360 TO ART-161A	ASI DEALER
ASI-36-0F			CABLE: ASI-360 TO RDS-81/82 SYSTEM	ASI DEALER
ASI-36-1B			CABLE: ASI-361 TO KVG-350 (RUN-IN CABLE)	ASI DEALER
ASI-36-4A		830-6984-001	PLATE, STANDBY SUPPORT	ASI DEALER
ASI-36-4B		830-6984-002	BLOCK, LCD WEIGHT	ASI DEALER
ASI-37-0A		641-6468-002	CABLE: ASI-370 TO ANT-462	ASI DEALER
ASI-37-2B			CABLE: ASI-372 TO 332C-8 INDICATOR	ASI DEALER
ASI-37-2C			CABLE: ASI-372 TO ANGLE POSITION INDICATOR (SR-103 OR EQUIV)	ASI DEALER
ASI-37-3A		641-5761-001	CABLE: ASI-373 TO VHF-22	ASI DEALER
ASI-37-3B		641-6133-002	CABLE: ASI-373 TO VHF-422S	ASI DEALER
ASI-37-3C		638-0524-001	CABLE: ASI-373 TO VHF-20/21	ASI DEALER
ASI-37-5A	W1	659-3486-001	CABLE: ASI-375 TO ADF RECEIVER AND CONTROL	ASI DEALER
ASI-37-5B	W2	659-3483-001	CABLE: ASI-375 TO ADF ANTENNA	ASI DEALER
ASI-37-5C		687-7724-001	FIXTURE: RF ATTENUATOR	ASI DEALER
ASI-37-5D		687-7931-001	FIXTURE: MIL-STD-1553B BUS ADAPTER	ASI DEALER
ASI-37-6A	W1	659-3597-001	CABLE: ASI-376 I/O	ASI DEALER
ASI-37-6B1	W2	659-3598-001	CABLE: ASI-376 MB	ASI DEALER
ASI-37-6B2	W3	659-3598-002	CABLE: ASI-376 RF	ASI DEALER
ASI-37-6B3	W6	659-3598-003	CABLE: ASI-376 NR	ASI DEALER
ASI-37-6B4	W7	659-3598-004	CABLE: ASI-376 GS	ASI DEALER
ASI-37-6C	W4	659-3603-001	CABLE: ASI-376 CONTROL	ASI DEALER
ASI-37-6D		659-3933-001	1553 BUS ADAPTER	ASI DEALER
ASI-37-6E		676-6722-001	CABLE: ASI-37-6D TO ATLANTIS DCM-1553	ASI DEALER

**AVAILABILITY:**

ASI DEALER: CONTACT ANY ASI DEALER FOR QUOTE  
 COLLINS: CONTACT ROCKWELL COLLINS FOR QUOTE  
 GABLES: CONTACT GABLES ENGINEERING FOR QUOTE  
 TELEPHONICS: CONTACT TELEPHONICS FOR QUOTE

**ASI SPECIALIZED TEST EQUIPMENT LIST**

**AVAILABILITY SUBJECT TO CHANGE WITHOUT NOTICE**

<b>ASI MN</b>	<b>EQUIV MN</b>	<b>EQUIV PN</b>	<b>DESCRIPTION</b>	<b>AVAILABILITY</b>
ASI-37-9A		653-2360-001	CABLE: ASI-379 TO EFIS	ASI DEALER
ASI-37-9B		653-2361-001	CABLE: ASI-379 TO WXP-4000	ASI DEALER
ASI-37-9C		653-2362-001	CABLE: ASI-379 TO STD-7000	ASI DEALER
ASI-37-77A			CABLE: 978F-3M AND 978F-2S TO 614E-10( ) (FIG 1002)	ASI DEALER
ASI-38-2A		641-6388-902	CABLE: ASI-382 TO VIR-32	ASI DEALER
ASI-38-2B		641-6388-903	CABLE: ASI-382 TO VIR-432	ASI DEALER
ASI-38-6A		641-5834-005	CABLE: ASI-386 TO AHC-85	ASI DEALER
ASI-38-8A			CABLE: FCC-85/86 ARINC 429 INTERFACE (FCC-85.86 MAN FIG 908)	ASI DEALER
ASI-39-4A			CABLE: HPU-74 EXTENDER (HPU-74 MAN FIG 5-5)	ASI DEALER
ASI-39-5A			CABLE: CTS-74 A4 POWER EXTENDER (CTS-74 MAN FIG 5-3)	ASI DEALER
ASI-39-11A			CABLE: AHC-85 TO CTC-429 INTEGRATION CABLE (AHC-85 MAN FIG 907)	ASI DEALER
ASI-40-1A			CABLE KIT: ASI-10-401A THRU ASI-10-401G (PART OF ASI-401-1)	ASI DEALER
ASI-40-1B			CABLE KIT: ASI-10-401E THRU ASI-10-401H (PART OF ASI-401-2)	ASI DEALER
ASI-40-1C			CABLE KIT: ASI-10-401I THRU ASI-10-401O (PART OF ASI-401-3)	ASI DEALER
ASI-40-3A		634-4242-001	CABLE: ASI-403 (972S-5) TO SVO-75	ASI DEALER
ASI-40-3B		634-2226-001	CABLE: ASI-403 (972S-5) TO SVO-85A(-001/101)/-85B(-001/101)/-85C(-003/103)	ASI DEALER
ASI-40-3C		634-2226-002	CABLE: ASI-403 (972S-5) TO SVO-85A(-002/-102)/-85B(-002/102)/-85C(-004/-104)	ASI DEALER
ASI-40-3D		634-2226-003	CABLE: ASI-403 (972S-5) TO SVO-3000	ASI DEALER
ASI-40-3E		653-1288-002	CABLE: ASI-403 (972S-5) TO SVO-1000	ASI DEALER
ASI-40-3F		628-8888-001	CABLE: ASI-403 (972S-5) TO SVO-85B (-003)	COLLINS
ASI-40-31A			SMT-87 CAPSTAN TORQUE ADJUSTMENT FIXTURE	ASI DEALER
ASI-40-31B		634-1729-001	SERVO CLUTCH DEPTH GAUGE (REQUIRES USER SUPPLIED 25-243 AND 6632-5)	COLLINS
ASI-40-31C		634-1728-001	MOUNT CLUTCH DEPTH GUIDE (REQUIRES USER SUPPLIED 25-243 AND 6632-5)	COLLINS
ASI-40-31D		634-1772-001	SVO-85/1000 / TSM-1000 BACKLASH TEST FIXTURE (REQ USER SUPPLIED 25-241J )	COLLINS
ASI-40-31D1		634-1772-002	SVO-85/1000 / TSM-1000 BACKLASH TEST FIXTURE (INCLUDES 25-241J )	COLLINS
ASI-40-31E			SVO-85 SERVO RUN-IN FIXTURE	ASI DEALER
ASI-40-31F			SVO-85/1000 PRELOAD FIXTURE	ASI DEALER
ASI-40-31G			SMT-85/86/1000 PRELOAD FIXTURE	ASI DEALER
ASI-40-31H			SVO-85 PRELOAD ADJUSTMENT SCREW	ASI DEALER
ASI-40-31J		827-2298-001	SVO-85 BRUSH ADJUSTMENT FIXTURE	COLLINS
ASI-40-31K			SVO-85 CLUTCH BEARING INSTALLATION TOOL	ASI DEALER
ASI-40-31L			SVO-85 SERVO CLUTCH HALF SUPPORT	ASI DEALER
ASI-40-31M			SVO-85 SERVO MOUNT SUPPORT	ASI DEALER
ASI-40-31N			SVO-85 BALL STAKING TOOL	ASI DEALER
ASI-40-31P			SVO-85 BEARING REMOVAL TOOL	ASI DEALER
ASI-40-31Q			SVO-85 BUSHING SUPPORT	ASI DEALER
ASI-40-31R			SVO-85 BUSHING REMOVAL TOOL	ASI DEALER
ASI-40-31S			SVO-85 PIN INSERTION/REMOVAL PUNCHES	ASI DEALER
ASI-40-31T			SMT-85/86 DRILLING FIXTURE	ASI DEALER
ASI-40-31U			SMT-85/86 PINNING FIXTURE	ASI DEALER
ASI-40-31V			SMT-87 DRILLING FIXTURE	ASI DEALER
ASI-40-31W			SMT-87 PINNING FIXTURE	ASI DEALER
ASI-40-31X			SVO-85/86 DRILLING FIXTURE	ASI DEALER
ASI-40-31Y			SVO-85 PIN REMOVAL/INSERTION FIXTURE	ASI DEALER
ASI-40-31Z			SVO-85 CABLE TENSIONING FIXTURE	ASI DEALER
ASI-40-32A		827-1090-001	SVO-85C/1000 BACKLASH/TORQUE TEST FIXTURE	COLLINS
ASI-40-32B1		830-5758-001	TORQUE TEST FIXTURE	COLLINS
ASI-40-32B2		830-5758-002	SMT SHAFT FREE PLAY FIXTURE	COLLINS
ASI-40-32C			SVO-85 GEAR-CLUSTER BEARING REMOVAL FIXTURE	ASI DEALER
ASI-40-32D		827-2785-001	SVO-85C/1000 CLUTCH HALF FORCE TEST TOOL (REQUIRES USER SUPPLIED 25-243)	COLLINS
ASI-40-32E			SMT-87 SEAL INSTALLATION TOOL	ASI DEALER
ASI-40-32F			SVO-85 MOTOR END PLAY FIXTURE	ASI DEALER
ASI-40-32G			SVO-85 GEAR MOVEMENT TOOL	ASI DEALER
ASI-40-32H			SVO-1000 SERVO CLUTCH FIXTURE	ASI DEALER
ASI-40-32J			SVO-1000 / BCA-770 PRESSURE CHECK FITTING	ASI DEALER
ASI-40-32K			SVO-1000 GLAND RETAINER	ASI DEALER
ASI-40-32L			SVO-1000 MOUNT LOADING FIXTURE	ASI DEALER
ASI-40-32M		827-3794-001	SVO-1000 EXPANDER FIXTURE	COLLINS
ASI-40-32M1		827-3794-002	BCA-770 EXPANDER FIXTURE	COLLINS
ASI-40-32N		827-3793-001	SVO-1000 / BCA-770 PUSHER FIXTURE	COLLINS
ASI-40-32P		827-3795-001	SVO-1000 COMPRESSOR FIXTURE	COLLINS
ASI-40-32P1		827-3795-002	BCA-770 COMPRESSOR FIXTURE	COLLINS
ASI-40-32Q		827-2704-001	SVO-1000 SERVO MOUNT HOUSING LEAK CHECK FIXTURE (INCL WITH ASI-40-32S)	COLLINS
ASI-40-32R		827-2796-001	SVO-1000 SLIP CLUTCH LEAK CHECK FIXTURE (INCLUDED WITH ASI-40-32S)	COLLINS
ASI-40-32S			SVO-1000 SERVO MOUNT PRESSURE LEAK TEST ASSEMBLY	ASI DEALER
ASI-40-41A		676-3871-001	BACKLASH TEST FIXTURE (REQUIRES USER 25-241 DIAL INDICATOR)	COLLINS
ASI-40-41B		460-0079-246	BCA-770 SERVO MOUNT PRESSURE LEAK TEST ASSEMBLY	COLLINS
ASI-40-41B1		827-1646-001	PRESSURE CHECK FITTING (INCLUDED WITH ASI-40-41B)	COLLINS
ASI-40-41B2		827-0332-001	SLIP CLUTCH CHECK FIXTURE (INCLUDED WITH ASI-40-41B)	COLLINS
ASI-40-41C		676-3866-001	BCA-770 TORQUE BACKLASH TEST FIXTURE (REQUIRES USER SUPPLIED 25-241J)	COLLINS

**AVAILABILITY:**

ASI DEALER: CONTACT ANY ASI DEALER FOR QUOTE  
 COLLINS: CONTACT ROCKWELL COLLINS FOR QUOTE  
 GABLES: CONTACT GABLES ENGINEERING FOR QUOTE  
 TELEPHONICS: CONTACT TELEPHONICS FOR QUOTE

**ASI SPECIALIZED TEST EQUIPMENT LIST**

**AVAILABILITY SUBJECT TO CHANGE WITHOUT NOTICE**

<b>ASI MN</b>	<b>EQUIV MN</b>	<b>EQUIV PN</b>	<b>DESCRIPTION</b>	<b>AVAILABILITY</b>
ASI-40-41D		131-3605-464	BCA-770 OVERRIDE SLIP CLUTCH TEST FIXTURE	COLLINS
ASI-40-41E		131-3605-422	BCA-770 MOUNT ASSEMBLY PRELOAD TEST FIXTURE	COLLINS
ASI-40-41F		131-3605-423	BCA-770 MOUNT ASSEMBLY FORCE-PULL TEST FIXTURE	COLLINS
ASI-40-41G		117-0600-107	BCA-770 MOUNT ASSY DRILLING AND PINNING TEST FIXTURE	COLLINS
ASI-40-41H		131-3605-469	BCA-770 MOTOR TENSION ADJUSTER	COLLINS
ASI-40X-1	440X-1	763-5591-001	CABLE: ASI-40X-10/14 (440X-10/14) TO 562A-5F	ASI DEALER
ASI-40X-2	440X-2	554-2547-001	CABLE: 978F-10R TO 562R-1/1E	ASI DEALER
ASI-40X-3	440X-3	522-4708-001	CABLE: ASI-191 (978F-1D) TO 978F-2S	ASI DEALER
ASI-40X-4	440X-4	522-4709-001	CABLE: ASI-191 (978F-1D) TO 329B-7/329B-8	ASI DEALER
ASI-40X-5	440X-5	522-4710-001	CABLE: ASI-191 (978F-1D) TO 479X-2	ASI DEALER
ASI-40X-6	440X-6	522-4711-001	CABLE: ASI-191 (978F-1D) TO 331A-6/331A-7 (P1)	ASI DEALER
ASI-40X-7	440X-7	522-4712-001	CABLE: ASI-191 (978F-1D) TO 331A-6/331A-7 (P2)	ASI DEALER
ASI-40X-8	440X-8	522-4713-001	CABLE: ASI-191 (978F-1D) TO 331A-6P/331A-6R	ASI DEALER
ASI-40X-9	440X-9	522-4714-001	CABLE: ASI-191 (978F-1D) TO 331A-6A1/331A-6K1	ASI DEALER
ASI-40X-10	440X-10	522-4715-001	CABLE: ASI-191 (978F-1D) TO 331D-3, AQU-2/A	ASI DEALER
ASI-40X-11	440X-11	554-2549-001	CABLE: 978F-11P TO 562P-1/1E1	ASI DEALER
ASI-40X-12	440X-12	554-2547-002	CABLE: 978F-11P TO 562P-1	ASI DEALER
ASI-40X-13	440X-13	522-4716-001	CABLE: 978F-9A TO 562P-1/1E1	ASI DEALER
ASI-40X-14	440X-14	522-4717-001	CABLE: 978F-5R/10R TO 562A-5F	ASI DEALER
ASI-40X-15	440X-15	554-2548-001	CABLE: 978F-10R TO 562R-1/1E	ASI DEALER
ASI-40X-16	440X-16	522-4718-001	CABLE: 978F-9A TO 562R-1/1E	ASI DEALER
ASI-40X-17	440X-17	522-4719-001	CABLE: 978F-3M TO 978F-2S	ASI DEALER
ASI-40X-18	440X-18	522-4720-001	CABLE: 978F-3M TO 614E-7C/8A	ASI DEALER
ASI-40X-19	440X-19	522-4721-001	CABLE: 978F-3M TO 978F-2S TO 614E-8B	ASI DEALER
ASI-40X-20	440X-20	522-4722-001	CABLE: 978F-3M TO 978F-2S TO 614E-9B	ASI DEALER
ASI-40X-21	440X-21	522-4723-001	CABLE: 978F-3M TO 978F-2S TO 614E-9C	ASI DEALER
ASI-40X-22	440X-22	522-4859-001	CABLE: 978F-4A TO 344C-1D	ASI DEALER
ASI-40X-23	440X-23	522-4860-001	CABLE: 978F-3M TO 614E-7( )	ASI DEALER
ASI-40Y-1	440Y-1	522-4606-001	980L-1/1A PLUG IN FOR 562C-4/4E	ASI DEALER
ASI-40Y-2	440Y-2	522-4607-001	980L-1/1A PLUG IN FOR 562C-5G	ASI DEALER
ASI-40Y-3	440Y-3	522-4609-001	980L-1/1A PLUG IN 161A-1, 332G-2, 345A-4 ,590A-3 ,590B-2, 614E-2	ASI DEALER
ASI-40Y-5	440Y-5	522-4899-001	980L-1/1A PLUG IN FOR 562A-5F/5F1/5F2/5F3/5F4/5F5	ASI DEALER
ASI-40Y-6	440Y-6	522-4900-001	980L-1/1A PLUG IN FOR 344C-1F/1G	ASI DEALER
ASI-40Y-7	440Y-7	522-4944-001	980L-1/1A PLUG IN FOR 161E-1	ASI DEALER
ASI-40Y-8	440Y-8	522-4957-001	980L-1/1A PLUG IN FOR 344C-1D	ASI DEALER
ASI-40Y-9	440Y-9	522-4958-001	980L-1/1A PLUG IN FOR 562P-1/1E1/1F, 562R-1/1E1/1F	ASI DEALER
ASI-40Y-11	440Y-11	522-4960-001	980L-1/1A PLUG IN FOR 161F-1/1A/1B, 345C-2A	ASI DEALER
ASI-40Y-11-1		797-7008-001	345C-2A POSITIONING FIXTURE	COLLINS
ASI-40Y-12	440Y-12	522-4961-001	980L-1/1A PLUG IN FOR 54W-1/1B/1C/1D/1E/1F	ASI DEALER
ASI-40Y-13	440Y-13	522-4962-001	980L-1/1A PLUG IN FOR 614E-7( )/8B/9B/9C/9E/9G/10/10( )/11/11A	ASI DEALER
ASI-40Y-14	440Y-14	522-4963-001	980L-1/1A PLUG IN FOR 344C-1E/1K	ASI DEALER
ASI-40Y-15	440Y-15	522-4964-001	980L-1/1A PLUG IN FOR 562A-5M/5M5	ASI DEALER
ASI-40Y-16	440Y-16	777-1035-001	980L-1/1A PLUG IN FOR 562C-4A	ASI DEALER
ASI-40Y-17	440Y-17	777-1036-001	980L-1/1A PLUG IN FOR 590A-5, 614E-4/4B	ASI DEALER
ASI-40Y-19	440Y-19	777-1038-001	980L-1/1A PLUG IN FOR 331A-8G/8H, 614E-22/22B	ASI DEALER
ASI-40Y-20	440Y-20	777-1039-001	980L-1/1A PLUG IN FOR 161E-2, 614E-20/20A/20D/20E/20J/20K/23	ASI DEALER
ASI-40Y-23	440Y-23	777-1042-001	980L-1/1A PLUG IN FOR 331A-8A/8D/8K/9G	ASI DEALER
ASI-40Y-23AB			ADAPTER BOX: 440Y-23 TO 331A-9G, HSI-45	ASI DEALER
ASI-40Y-24	440Y-24	777-1043-001	980L-1/1A PLUG IN FOR 54W-3/3A/3B	ASI DEALER
ASI-40Y-25	440Y-25	777-1044-001	980L-1/1A PLUG IN FOR MC-103, 323A-1/5, 332C-8, 332E-5	ASI DEALER
ASI-40Y-26	440Y-26	777-1919-001	980L-1/1A PLUG IN FOR 161E-7A	ASI DEALER
ASI-40Y-27	440Y-27	787-6073-001	980L-1/1A PLUG IN FOR 562C-3E	ASI DEALER
ASI-40Y-29	440Y-29	787-6138-001	980L-1/1A PLUG IN FOR 188M-1, 327J-3	ASI DEALER
ASI-40Y-30	440Y-30	787-6139-001	980L-1/1A PLUG IN FOR 161E-6	ASI DEALER
ASI-40Y-31	440Y-31	787-6140-001	980L-1/1A PLUG IN FOR 614E-4C/27/36	ASI DEALER
ASI-40Y-33	440Y-33	787-6142-001	980L-1/1A PLUG IN FOR 329B-8J/8V/9A/8Y	ASI DEALER
ASI-40Y-33-1		637-6079-001	ADAPTER CABLE	ASI DEALER
ASI-40Y-34	440Y-34	787-6143-001	980L-1/1A PLUG IN FOR 54W-4	ASI DEALER
ASI-40Y-35	440Y-35	787-6144-001	980L-1/1A PLUG-IN FOR 161E-7B	ASI DEALER
ASI-40Y-36	440Y-36	787-6810-001	980L-1/1A PLUG IN FOR 329B-8G	ASI DEALER
ASI-40Y-38	440Y-38	792-6383-001	980L-1/1A PLUG IN FOR 562C-5, 562C-8A/8B, 614E-5A/5C	COLLINS
ASI-40Y-39	440Y-39	792-6384-001	980L-1/1A PLUG IN FOR 161E-2A, 614E-20G/20H/20I/23E/23G	COLLINS
ASI-40Y-43	440Y-43	792-6889-001	980L-1/1A PLUG IN FOR 329B-8L/8R/8U/8Z	ASI DEALER
ASI-40Y-67A	440Y-67A	622-4086-001	980L-1A PLUG IN FOR FGC-80( ), FGP-80( ), FGP-81( ), NAC-80	COLLINS
ASI-40Y-67A-1			FGP-80/81 DIODE TESTER (FGP-80/81 MANUAL FIGURE 5-4, 5-5)	ASI DEALER
ASI-40Y-67A-2			FGC-80 TEST EXPEDITER (FGC-80 MANUAL FIGURE 5-5)	ASI DEALER
ASI-40Y-68A	440Y-68A	622-4087-001	980L-1A PLUG IN FOR APC-80( ), APP-80( )	COLLINS
ASI-40Y-69A	440Y-69A	622-4088-001	980L-1A PLUG IN FOR APA-80( ), SVO-80( )	COLLINS
ASI-40Y-69A-1			ROLL RATE TEST FIXTURE FOR 440Y-69A	ASI DEALER
ASI-40Y-76	440Y-76	622-6315-001	980L-1A PLUG-IN FOR APS-65/FGS-65	ASI DEALER

**AVAILABILITY:**

ASI DEALER: CONTACT ANY ASI DEALER FOR QUOTE  
 COLLINS: CONTACT ROCKWELL COLLINS FOR QUOTE  
 GABLES: CONTACT GABLES ENGINEERING FOR QUOTE  
 TELEPHONICS: CONTACT TELEPHONICS FOR QUOTE

**ASI SPECIALIZED TEST EQUIPMENT LIST**

**AVAILABILITY SUBJECT TO CHANGE WITHOUT NOTICE**

<u>ASI MN</u>	<u>EQUIV MN</u>	<u>EQUIV PN</u>	<u>DESCRIPTION</u>	<u>AVAILABILITY</u>
ASI-40Y-76-1	ASI-354-1		APC-65/FCC-65 SERVO EMULATOR	ASI DEALER
ASI-40Y-76-2	ASI-354-2		APC-65/FCC-65 SERVO ANGLE INDICATOR	ASI DEALER
ASI-40Y-76-3	ASI-35-41E		CABLE: FRONT EXTENDER FOR APC-65/FGC-65)	ASI DEALER
ASI-40Y-76-4	ASI-35-41B		CABLE: REAR 36 PIN EXTENDER FOR APC-65/FGC-65	ASI DEALER
ASI-40Y-76-5	ASI-35-41C		CABLE: REAR 30 PIN EXTENDER FOR APC-65/FGC-65	ASI DEALER
ASI-40Y-76-6	ASI-35-41D		CABLE: REAR 26 PIN EXTENDER FOR APC-65/FGC-65	ASI DEALER
ASI-40Y-76-7	ASI-35-41A		CABLE: 440Y-76 TO PRO LINE II CARD (APC-65/FGC-65)	ASI DEALER
ASI-40Y-76-8			APC-65E TRIM INTERFACE PANEL	ASI DEALER
ASI-40Y-76-81			MAP-65 TEST FIXTURE	ASI DEALER
ASI-40Y-76-9			CWC-65 TEST SET (CWC-65 MAN FIG 5-2 - 5-3)	ASI DEALER
ASI-40Y-76-10		827-9736-001	APC-65 GYRO MONITOR TEST SET	ASI DEALER
ASI-41-2A		634-3381-001	CABLE: ASI-412 (CTS-64) P1	ASI DEALER
ASI-41-2B		634-3474-001	CABLE: ASI-412 (CTS-64) P2	ASI DEALER
ASI-41-2C		634-7452-001	CABLE: ASI-412 (CTS-64) EMULATOR	ASI DEALER
ASI-41-2D		634-3476-001	CABLE: ASI-412 (CTS-64) P4	ASI DEALER
ASI-41-2E		634-3477-001	CABLE: ASI-412 (CTS-64) P5	ASI DEALER
ASI-41-2F		634-3478-001	CABLE: ASI-412 (CTS-64) P6	ASI DEALER
ASI-41-2G		634-3480-001	CABLE: ASI-412 (CTS-64) P7	ASI DEALER
ASI-41-2H		634-3482-001	CABLE: ASI-412 (CTS-64) P9	ASI DEALER
ASI-41-2I		653-1078-001	CABLE: ASI-412 (CTS-64) P10	ASI DEALER
ASI-41-2J		634-3483-001	CABLE: ASI-412 (CTS-64) J1	ASI DEALER
ASI-41-3A		2038683-0505	CABLE: ASI-413-1 (RIT-32A) W101	ASI DEALER
ASI-41-5A			ADC POWER SUPPLY LOAD FIXTURE	ASI DEALER
ASI-41-5B			ALI/MSI/VLI POINTER ALIGNMENT FIXTURE	ASI DEALER
ASI-41-6A			CABLE: ASI-416 TO SQUWAK NAUT	ASI DEALER
ASI-41-9A			CABLE: ASI-419 P20/21-P40	ASI DEALER
ASI-41-9B			CABLE: ASI-419 P30-P50	ASI DEALER
ASI-41-9C			CABLE: ASI-419 J10-PWR	ASI DEALER
ASI-41-22D			DGS-65 GYRO COVER REMOVAL TOOL (DGS-65 MAN FIG 5-16)	ASI DEALER
ASI-41-22E			DGS-65 END CAP PULLER (DGS-65 MAN FIG 5-17)	ASI DEALER
ASI-41-22F			DGS-65 FAN PULLER (DGS-65 MAN FIG 5-18)	ASI DEALER
ASI-41-22G			DGS-65 BALANCING FIXTURE (DGS-65 MAN FIG 5-19)	ASI DEALER
ASI-41-22H			DGS-65 CALIBRATED MOTOR (DGS-65 MAN FIG 5-20)	ASI DEALER
ASI-41-22J			DGS-65 MODIFIED DRILL BIT (DGS-65 MAN FIG 5-21)	ASI DEALER
ASI-41-22K			DGS-65 DEGREE TAPE (DGS-65 MAN FIG 5-22)	ASI DEALER
ASI-41-22L			DGS-65 MOTOR RUN-IN STAND (DGS-65 MAN FIG 5-23)	ASI DEALER
ASI-41-22M			DGS-65 PRELOAD FIXTURE (DGS-65 MAN FIG 5-24)	ASI DEALER
ASI-41-22N			DGS MODIFIED CAP (DGS-65 MAN FIG 5-25)	ASI DEALER
ASI-41-22P			DGS-65 RUNDOWN FIXTURE (DGS-65 MAN FIG 5-26)	ASI DEALER
ASI-41-22Q			DGS-65 SLIPRING REMOVAL TOOL (DGS-65 MAN FIG 5-27)	ASI DEALER
ASI-42-01A		2039388-0501	CABLE: ASI-420-1 (RNT-34A) W1	ASI DEALER
ASI-42-01B		2039389-0501	CABLE: ASI-420-1 (RNT-34A) W2	ASI DEALER
ASI-42-01C		2039446-0501	CABLE: ASI-420-1 (RNT-34A) W3	ASI DEALER
ASI-42-4A		2038692-0501	CABLE: ASI-424-1 (RVT-33A) W101	ASI DEALER
ASI-42-6A		8072585-0501	CABLE: ASI-426 TO DA-1503A (W1)	ASI DEALER
ASI-42-6B		8072586-0501	CABLE: ASI-426 TO DC POWER (W2)	ASI DEALER
ASI-42-6C		8072587-0501	CABLE: ASI-426 TO IU-1507A (W3)	ASI DEALER
ASI-42-6D		8072588-0501	CABLE: ASI-426 TO MT-1508A (W4)	ASI DEALER
ASI-42-6E		8072589-0501	CABLE: ASI-426 TO DA-1203A (W5)	ASI DEALER
ASI-42-6F		8072590-0501	CABLE: ASI-426 TO CC-2024 (W6)	ASI DEALER
ASI-42-6G		8072591-0501	CABLE: ASI-426 TO IN-1502A (W7)	ASI DEALER
ASI-42-6H		2040020-0501	CABLE: ASI-426 TO AC POWER (W8)	ASI DEALER
ASI-42-6J		8072594-0501	CABLE: ASI-426 TO RT-1501A (W9)	ASI DEALER
ASI-42-6K		8072622-0501	CABLE: ASI-426 TO IN-1502B (W10)	ASI DEALER
ASI-42-6L			IN-1502A LVPS LOAD	ASI DEALER
ASI-42-6M			MUMETAL SHIELD	ASI DEALER
ASI-42-31A		2040661-0501	CABLE: ASI-423-1 (IUT-1SB) W4	ASI DEALER
ASI-42-31B		2040662-0501	CABLE: ASI-423-1 (IUT-1SB) W6	ASI DEALER
ASI-42-31C		2040663-0501	CABLE: ASI-423-1 (IUT-1SB) W7	ASI DEALER
ASI-42-31D		2040840-0501	CABLE: ASI-423-1 (IUT-1SB) W8	ASI DEALER
ASI-48-8A			CABLE: ASI-488 RF	ASI DEALER
ASI-49-94A		545-4559-003	CABLE: ASI-499-1/2/4 TO EXTERNAL POWER	COLLINS
ASI-49-94B		545-4604-004	CABLE: ASI-499-1/2/4 TO HSI AMPLIFIER	COLLINS
ASI-49-94C		545-4605-004	CABLE: ASI-499-1/2/4 TO AIRCRAFT INSTRUMENT WIRING	COLLINS
ASI-49-94D		545-4607-004	CABLE: ASI-499-1/2/4 TO HSI 1J2	COLLINS
ASI-49-94E		545-4609-004	CABLE: ASI-499-1/2/4 TO HSI 1J1	COLLINS
ASI-49-94F		546-8436-003	CABLE: ASI-499-2/4 TO AIRCRAFT INSTRUMENT WIRING	COLLINS
ASI-49-94G1		548-9600-004	CABLE: ASI-499-2 TO AQU-2/A	COLLINS
ASI-49-94G2		756-7400-001	CABLE: ASI-499-4 TO AQU-2/A / AQU-4/A	COLLINS
ASI-49-96A	NO.1	545-4557-003	CABLE: ASI-499-6 (476E-1A) POWER	COLLINS

**AVAILABILITY:**

ASI DEALER: CONTACT ANY ASI DEALER FOR QUOTE

COLLINS: CONTACT ROCKWELL COLLINS FOR QUOTE

GABLES: CONTACT GABLES ENGINEERING FOR QUOTE

TELEPHONICS: CONTACT TELEPHONICS FOR QUOTE



**ASI SPECIALIZED TEST EQUIPMENT LIST**

**AVAILABILITY SUBJECT TO CHANGE WITHOUT NOTICE**

<b>ASI MN</b>	<b>EQUIV MN</b>	<b>EQUIV PN</b>	<b>DESCRIPTION</b>	<b>AVAILABILITY</b>
ASI-49-96B	NO.2	545-4596-003	CABLE: ASI-499-6 (476E-1A) TO 476C-2	COLLINS
ASI-49-96C	NO.3	545-4615-004	CABLE: ASI-499-6 (476E-1A) TO CPU-4A	COLLINS
ASI-49-96D	NO.4	545-4616-004	CABLE: ASI-499-6 (476E-1A) TO CPU-4A AND INDICATOR	COLLINS
ASI-49-96E	NO.5	545-2501-003	CABLE: ASI-49-96C CABLE TO CPU-4A (NON-COLLINS)	COLLINS
ASI-50-2A			ADAPTER: ASI-502 TO ASI-500-1/2 COMM/DME/NAV CABLE	ASI DEALER
ASI-50-2B			ADAPTER: ASI-502 TO ASI-500-1 ADF/ATC/613L-3 CABLE	ASI DEALER
ASI-50-2C			ADAPTER: ASI-502 TO CTL-20 CABLE	ASI DEALER
ASI-50-2D			ADAPTER: ASI-502 TO CTL-30 CABLE	ASI DEALER
ASI-50-2E			ADAPTER: ASI-502 TO CTL-60 CABLE	ASI DEALER
ASI-50-2F			ADAPTER: ASI-502 TO CTL-90 CABLE	ASI DEALER
ASI-50-2G			ADAPTER: ASI-502 TO CTL-22/22A/22C CABLE	ASI DEALER
ASI-50-2H			ADAPTER: ASI-502 TO CTL-23/23C/32/32A CABLE	ASI DEALER
ASI-50-2J			ADAPTER: ASI-502 TO CTL-62/62A CABLE	ASI DEALER
ASI-50-2K			ADAPTER: ASI-502 TO CTL-92/92A CABLE	ASI DEALER
ASI-50-2L			ADAPTER: ASI-502 TO CTL-92T CABLE	ASI DEALER
ASI-50-2M			ADAPTER: ASI-502 TO 313N-4D CABLE	ASI DEALER
ASI-50-2N			ADAPTER: ASI-502 TO 614L-11/12/13 CABLE	ASI DEALER
ASI-50-2P			INTERNATIONAL INPUT POWER ADAPTER FOR ASI-502 (90-265 VAC 47-63 Hz)	ASI DEALER
ASI-50-2P1			STANDARD INPUT POWER ADAPTER FOR ASI-502 (115 VAC 60 Hz)	ASI DEALER
ASI-50-2Q			ADAPTER: ASI-502 TO HF-230 (REQUIRES OPTIONAL HF-230 PROGRAM)	ASI DEALER
ASI-52-1			CABLE: 52 PIN 4 FT EXTENDER (LEFT) PART 1 OF 2 CABLE SET	ASI DEALER
ASI-52-2			CABLE: 52 PIN 4 FT EXTENDER (RIGHT) PART 2 OF 2 CABLE SET	ASI DEALER
ASI-52-3			CABLE: 52 PIN 4 FT EXTENDER CABLE (WITHOUT TEST POINTS)	ASI DEALER
ASI-55-0605-13		55-0605-13	CABLE: PSD60-1AF BNC TO TEST CLIP	ASI DEALER
ASI-55-0605-14		55-0605-14	CABLE: PSD60-1AF BNC TO ALIGATOR CLIP	ASI DEALER
ASI-55-0605-15		55-0605-15	CABLE: PSD60-1AF BNC TO BNC (48")	ASI DEALER
ASI-55-0605-16		55-0605-16	CABLE: PSD60-1AF BNC TO BNC (36")	ASI DEALER
ASI-55-7002-00		55-7002-00	CABLE: PSD60-1AF BANANA PLUG TO ALIGATOR CLIP	ASI DEALER
ASI-60-1			CABLE: 60 PIN 4 FT EXTENDER (LEFT) PART 1 OF 3 CABLE SET (CTS-10)	ASI DEALER
ASI-60-2			CABLE: 60 PIN 4 FT EXTENDER (RIGHT) PART 2 OF 3 CABLE SET (CTS-10)	ASI DEALER
ASI-60-3			CABLE: 60 PIN 4 FT EXTENDER (30 LEFT,30 RIGHT) PART 3 OF 3 CABLE SET	ASI DEALER
ASI-60-4			CABLE: 60 PIN 4 FT EXTENDER CABLE (WITHOUT TEST POINTS)	ASI DEALER
ASI-60-33A		988-8192-001	CABLE: ASI-603-3 (964B-3) SPECIAL PURPOSE	ASI DEALER
ASI-60-33B		988-8193-001	CABLE: ASI-603-3 (964B-3) SPECIAL PURPOSE	ASI DEALER
ASI-60-33C		988-8194-001	CABLE: ASI-603-3 (964B-3) SPECIAL PURPOSE	ASI DEALER
ASI-60-41A			CABLE: ASI-604-1 TO 263BC101 J1	ASI DEALER
ASI-60-41B			CABLE: ASI-604-1 TO 263BC101 TB1	ASI DEALER
ASI-60-41C			CABLE: ASI-604-1 TO BATTERY SIMULATOR	ASI DEALER
ASI-60-41D		263TS302-1	CABLE: 263BC101 A2P1 EXTENDER	ASI DEALER
ASI-60-41E		263TS303-1	CABLE: 263BC101 A2J1 EXTENDER	ASI DEALER
ASI-60-5			60 PIN BREAKOUT BOX FOR EFIS 85/86 AND APS-85 (REQ ASI-60-5-XX CABLE KITS)	ASI DEALER
ASI-60-5-15			DA-15 BREAKOUT CABLE KIT FOR USE WITH ASI-60-5 (INCLUDES 2 CABLES)	ASI DEALER
ASI-60-5-25			DB-25 BREAKOUT CABLE KIT FOR USE WITH ASI-60-5 (INCLUDES 2 CABLES)	ASI DEALER
ASI-60-5-37			DC-37 BREAKOUT CABLE KIT FOR USE WITH ASI-60-5 (INCLUDES 2 CABLES)	ASI DEALER
ASI-60-5-50			DD-50 BREAKOUT CABLE KIT FOR USE WITH ASI-60-5 (INCLUDES 2 CABLES)	ASI DEALER
ASI-60-4984-1		60-4984-1	CABLE, 60-4983-3 / -5 STROBE POWER SUPPLY TO TEST LIGHT	ASI DEALER
ASI-60-4984-2			CABLE, 60-4983-3 / -5 STROBE POWER SUPPLY TO TEST POWER	ASI DEALER
ASI-61	HTS-61	2900-00061-000	ADF ANTENNA SIMULATOR (19 INCH RACK MOUNT CASE)	ASI DEALER
ASI-61W	970W-1	622-3099-001	ADF ANTENNA SIMULATOR (CONTROL HEAD CASE) / REPLACES ASI-186	ASI DEALER
ASI-70-1			CABLE: PRO LINE 21 (66 CONTACT / 4 COAX) EXTENDER	ASI DEALER
ASI-70-0XA			CABLE: ASI-700-2/-3/-4 TO T1200( )	ASI DEALER
ASI-70-02A			CABLE: ASI-700-2 TO ADF-700 / ADF-900 / DFA-75A	ASI DEALER
ASI-70-02A1			OVERLAY: ADF-700	ASI DEALER
ASI-70-02A2			OVERLAY: ADF-900	ASI DEALER
ASI-70-02A3			OVERLAY: DFA-75A	ASI DEALER
ASI-70-02B			CABLE: ILS-700 / ILS-720 / ILS-900 / RIA-35A	ASI DEALER
ASI-70-02B1			OVERLAY: ILS-700 / ILS-720	ASI DEALER
ASI-70-02B2			OVERLAY: ILS-900	ASI DEALER
ASI-70-02B3			OVERLAY: RIA-35A	ASI DEALER
ASI-70-02C			CABLE: VOR-700 / VOR-900 / RVA-36A	ASI DEALER
ASI-70-02C1			OVERLAY: VOR-700	ASI DEALER
ASI-70-02C2			OVERLAY: VOR-900	ASI DEALER
ASI-70-02C3			OVERLAY: RVA-36A	ASI DEALER
ASI-70-02D			CABLE: GLU-910 (WITHOUT RF)	ASI DEALER
ASI-70-02D1			OVERLAY: GLU-9X0	ASI DEALER
ASI-70-02E			CABLE: GLU-920 (WITH RF)	ASI DEALER
ASI-70-02F			ILS-700/720 GLIDESLOPE FILTER (FIG 903)	ASI DEALER
ASI-70-02G			ILS-700/720 POWER SUPPLY A8 EXTENSIONS	ASI DEALER
ASI-70-02H		628-8209-001	ILS-700 LOADING TOOL (FIG. 908)	COLLINS
ASI-70-02J			ILS-720 A1A18 EXTENSION BLOCK (FIG 905)	ASI DEALER

**AVAILABILITY:**

ASI DEALER: CONTACT ANY ASI DEALER FOR QUOTE  
 COLLINS: CONTACT ROCKWELL COLLINS FOR QUOTE  
 GABLES: CONTACT GABLES ENGINEERING FOR QUOTE  
 TELEPHONICS: CONTACT TELEPHONICS FOR QUOTE

**ASI SPECIALIZED TEST EQUIPMENT LIST**

**AVAILABILITY SUBJECT TO CHANGE WITHOUT NOTICE**

<b>ASI MN</b>	<b>EQUIV MN</b>	<b>EQUIV PN</b>	<b>DESCRIPTION</b>	<b>AVAILABILITY</b>
ASI-70-02K			DFA-701/901 INTERCONNECT TEST CABLE (FIG 103)	ASI DEALER
ASI-70-02L			CABLE: 115 VAC 400 HZ INPUT POWER ISOLATION (REQUIRED FOR ADF-900 TESTING)	ASI DEALER
ASI-70-03A			CABLE: DME-700 / DME-900	ASI DEALER
ASI-70-03A1			OVERLAY: DME-700	ASI DEALER
ASI-70-03A2			OVERLAY: DME-900	ASI DEALER
ASI-70-03A3			OVERLAY: DMA-37A	ASI DEALER
ASI-70-03B			CABLE: LRA-700 / LRA-900	ASI DEALER
ASI-70-03B1			OVERLAY: LRA-700	ASI DEALER
ASI-70-03B2			OVERLAY: LRA-900	ASI DEALER
ASI-70-03C			CABLE: ERT-530	ASI DEALER
ASI-70-03C1			OVERLAY: ERT-530	ASI DEALER
ASI-70-03D			LRA-900 RF TRANSMITTER TOOL	ASI DEALER
ASI-70-04A			CABLE: VHF-700 / VHF-700A	ASI DEALER
ASI-70-04A1			OVERLAY: VHF-700 / VHF-700A	ASI DEALER
ASI-70-04A2			OVERLAY: RTA-44A	ASI DEALER
ASI-70-04B			CABLE: HFS-700/900 / 628T-2/2A	ASI DEALER
ASI-70-04B1			OVERLAY: HFS-700/900 / 628T-2/2A	ASI DEALER
ASI-70-04C			ARINC 753 INTERFACE PANEL: ASI-700-4 TO 628T-2D / HFS-700D/900D	ASI DEALER
ASI-70-04C1			CABLE: CPL-920D / 490S-1 J1 (INCLUDED WITH ASI-70-04C)	ASI DEALER
ASI-70-04D			CABLE: VHF-900 (TEST POINT OVERLAY NOT REQUIRED)	ASI DEALER
ASI-70-04D1			OVERLAY	ASI DEALER
ASI-70-04E			CABLE: 628T-1	ASI DEALER
ASI-70-04E1			OVERLAY: 628T-1	ASI DEALER
ASI-70-04F			CABLE: 490S-1 (REPLACED BY ASI-70-04C1)	ASI DEALER
ASI-70-04G			CABLE: 714E-1	ASI DEALER
ASI-70-04H			CABLE: 714E-2	ASI DEALER
ASI-70-04J			CABLE: 714E-3/6	ASI DEALER
ASI-70-04K			CABLE: ASI-700-4 ARINC INTERFACE PLUG TO ASI-502	ASI DEALER
ASI-70-04L			CABLE: HFS-900 (REPLACED BY ASI-70-04B)	ASI DEALER
ASI-70-04L1			OVERLAY: HFS-900 (REPLACED BY ASI-70-04B1)	ASI DEALER
ASI-70-04M			HFS-700D VOLTAGE REGULATOR A6A3 TESTER (REPLACED BY ASI-700-4-07)	ASI DEALER
ASI-70-04N			CABLE: HFS-900D (REPLACED BY ASI-70-04C)	ASI DEALER
ASI-70-04N1			OVERLAY: HFS-900D	ASI DEALER
ASI-70-04P			628T-2/2A/HFS-700 A5 ALIGNMENT FIXTURE (628T-2/2A MAN FIG 911-913)	ASI DEALER
ASI-70-04Q1		628-5274-001	VHF-700 ADJUSTMENT COVER	COLLINS
ASI-70-04Q2		628-8351-001	VHF-700 ADJUSTMENT COVER	COLLINS
ASI-70-04R			RTA-44A SERIES DETECTOR CIRCUIT	ASI DEALER
ASI-70-04S			HFS-900D HFDR DATA LOAD CABLE	ASI DEALER
ASI-70-04T			CABLE: ASI-700-4 TO HFP-712	ASI DEALER
ASI-70-04U		315-5167-001	CABLE: RTA-83A	ASI DEALER
ASI-70-04U1			OVERLAY: RTA-83A	ASI DEALER
ASI-70-04V			CABLE: ASI-700-4 TO VHF-920 (ASI-700-4 MUST SN 110 OR ABOVE OR HAVE SB5)	ASI DEALER
ASI-70-1A			CABLE: ASI-CTS-700-1 TO DDI-713	ASI DEALER
ASI-70-1B			CABLE: ASI-CTS-700-1 TO RMI-733	ASI DEALER
ASI-70-1C			CABLE: ASI-CTS-700-1 TO RMI-733A	ASI DEALER
ASI-70-1D			CABLE: ASI-CTS-700-1 TO RDMI-743	ASI DEALER
ASI-70-1E			CABLE: ASI-CTS-700-1 TO RDMI-743 (CPN-622-5001-112)	ASI DEALER
ASI-70-1F			CABLE: ASI-CTS-700-1 TO RDMI-743 (CPN-622-5001-003), RDMI-743A	ASI DEALER
ASI-70-1G			CABLE: ASI-CTS-700-1 TO RAI-742	ASI DEALER
ASI-70-1HA			RDMI-743 EXTENDER KIT (INCLUDES ASI-70-1H1/2/3/4/5/6/7/8/9)	ASI DEALER
ASI-70-1HB			DDI-743 EXTENDER KIT (INCLUDES ASI-70-1H10/11/12/13/14)	ASI DEALER
ASI-70-1HC			RMI-733 EXTENDER KIT (INCLUDES ASI-70-1H20/20/21/22/23/24/25/26/27/28)	ASI DEALER
ASI-70-1HD			RAI-742 EXTENDER KIT (INCLUDES ASI-70-1H30/31)	ASI DEALER
ASI-70-1H1			CABLE: 46 PIN EXTENDER FOR RDMI-743 A1 TO A7	ASI DEALER
ASI-70-1H2			CABLE: 40 PIN EXTENDER FOR RDMI-743 A1 TO A6	ASI DEALER
ASI-70-1H3			CABLE: 64 PIN EXTENDER FOR RDMI-743 A2/A3 TO A7	ASI DEALER
ASI-70-1H4			CABLE: 52 PIN EXTENDER FOR RDMI-743 A4 TO A7	ASI DEALER
ASI-70-1H5			CABLE: 14 PIN EXTENDER FOR RDMI-743 A5 TO TB1	ASI DEALER
ASI-70-1H6			CABLE: 14 PIN EXTENDER FOR RDMI-743 A5 TO A7	ASI DEALER
ASI-70-1H7			CABLE: 6 PIN EXTENDER FOR RDMI-743 A5 TO A6	ASI DEALER
ASI-70-1H8			CABLE: 50 PIN EXTENDER FOR RDMI-743 A8 TO A7	ASI DEALER
ASI-70-1H9			CABLE: 50 PIN EXTENDER FOR RDMI-743 A9 TO A7	ASI DEALER
ASI-70-1H10			CABLE: 8 PIN EXTENDER FOR DDI-713 A2A1P1 TO A3J1A OR A3P1A TO A4A1J1B	ASI DEALER
ASI-70-1H11			CABLE: 8 PIN EXTENDER FOR DDI-713 A2A1P2 TO A3J2A OR A3P2A TO A4A1J2B	ASI DEALER
ASI-70-1H12			CABLE: 10 PIN EXTENDER FOR DDI-713 A3J6A TO A4A1P6A	ASI DEALER
ASI-70-1H13			CABLE: 10 PIN EXTENDER FOR DDI-713 A3J6B TO A4A1P6B	ASI DEALER
ASI-70-1H14			CABLE: 12 PIN EXTENDER FOR DDI-713 A3J6C TO A2TB1	ASI DEALER
ASI-70-1H20			CABLE: 18 PIN EXTENDER FOR RMI-733 A1 TO A6A1	ASI DEALER
ASI-70-1H21			CABLE: 4 PIN EXTENDER FOR RMI-733 A4A1 TO A6A1	ASI DEALER
ASI-70-1H22			CABLE: 50 PIN EXTENDER FOR RMI-733 A2 TO A7	ASI DEALER

**AVAILABILITY:**

ASI DEALER: CONTACT ANY ASI DEALER FOR QUOTE  
 COLLINS: CONTACT ROCKWELL COLLINS FOR QUOTE  
 GABLES: CONTACT GABLES ENGINEERING FOR QUOTE  
 TELEPHONICS: CONTACT TELEPHONICS FOR QUOTE

**ASI SPECIALIZED TEST EQUIPMENT LIST**

**AVAILABILITY SUBJECT TO CHANGE WITHOUT NOTICE**

<b>ASI MN</b>	<b>EQUIV MN</b>	<b>EQUIV PN</b>	<b>DESCRIPTION</b>	<b>AVAILABILITY</b>
ASI-70-1H23			CABLE: 50 PIN EXTENDER FOR RMI-733 A3 TO A7	ASI DEALER
ASI-70-1H24			CABLE: 14 PIN EXTENDER FOR RMI-733 A4A1 TO A7	ASI DEALER
ASI-70-1H25			CABLE: 34 PIN EXTENDER FOR RMI-733 A1 TO A9	ASI DEALER
ASI-70-1H26			CABLE: 20 PIN EXTENDER FOR RMI-733 A8 TO A9	ASI DEALER
ASI-70-1H27			CABLE: 28 PIN EXTENDER FOR RMI-733 A8 TO A7	ASI DEALER
ASI-70-1H28			CABLE: 12 PIN EXTENDER FOR RMI-733 A4A1 TO A4TB1	ASI DEALER
ASI-70-1H30			CABLE: MAIN EXTENDER FOR RAI-742	ASI DEALER
ASI-70-1H31			CABLE: POWER SUPPLY EXTENDER FOR RAI-743	ASI DEALER
ASI-70-1J1			RDMI-743 VARIABLE POWER INTERRUPT TESTER FOR STANDARD TEST EQUIPMENT	ASI DEALER
ASI-70-1J2			RDMI-743 VARIABLE POWER INTERRUPT TESTER FOR T1200/T1204	ASI DEALER
ASI-70-1K			RAI-742 ONE-TO-ONE BREAKOUT BOX	ASI DEALER
ASI-70-8A		071-5078-00	CABLE: ASI-708-1 (KTS-157) TO KA-594/KFS-594	ASI DEALER
ASI-70-8B		071-5045-00	ANTENNA SIMULATOR LOAD (INCLUDES 200-6410-00)	ASI DEALER
ASI-70-8C		071-0123-00	CABLE: ASI-708-1 (KTS-157) TO KTR-953	ASI DEALER
ASI-70-8D		155-J082-01	CABLE: ASI-708-1 (KTS-157) TO KCU-1051	ASI DEALER
ASI-71	KA-579A	064-1034-01	TEST POWER SUPPLY FOR KING KFS CONTROLS	ASI DEALER
ASI-72-5A			WMA-701/702X ALIGNMENT PINS (QTY-2)	ASI DEALER
ASI-72-5B	40068		BUBBLE LEVEL FOR ASI-725 LEVELING BASE	ASI DEALER
ASI-72-7A			CABLE: WXI-711 CPU/CONVERTER A7 EXTENDER (50 PIN)	ASI DEALER
ASI-72-7B			CABLE: WXI-711 LVPS A9 EXTENDER (24 PIN)	ASI DEALER
ASI-72-7C			CABLE: WXI-711 VIDEO DEFLECTION A8 EXTENDER (46 PIN)	ASI DEALER
ASI-72-7D			CABLE: WXI-711 FACEPLATE EXTENDER (34 PIN)	ASI DEALER
ASI-72-8A			ALTERNATE FLANGE FOR ASI-728 WEIGHT SIMULATOR	ASI DEALER
ASI-73-8A			CABLE: DF-7708/INDICATOR INTERFACE	ASI DEALER
ASI-73-8B			CABLE: WRT-701X(FLW) RS-232	ASI DEALER
ASI-73-9A			CABLE: DF-7708/WXI-7X1 INTERFACE (WRT-701X MAN FIG 906)	ASI DEALER
ASI-74-0A		647-2036-001	CABLE: ASI-740 TO EDU-766/776	ASI DEALER
ASI-74-0B		647-8158-001	CABLE: ASI-740 TO RED LABEL POWER SUPPLIES	ASI DEALER
ASI-74-0C		647-4868-001	CABLE: ASI-740 TO BLACK LABEL POWER SUPPLIES	COLLINS
ASI-74-2A		2039994-0501	CABLE: ASI-742 (RCT-4A) W1	ASI DEALER
ASI-74-2B		2039995-0501	CABLE: ASI-742 (RCT-4A) W2	ASI DEALER
ASI-74-2C		2039996-0501	CABLE: ASI-742 (RCT-4A) W3	ASI DEALER
ASI-74-2D		2039997-0501	CABLE: ASI-742 (RCT-4A) W4	ASI DEALER
ASI-74-2E		2039998-0501	CABLE: ASI-742 (RCT-4A) W5	ASI DEALER
ASI-74-2F		2039999-0501	CABLE: ASI-742 (RCT-4A) W6	ASI DEALER
ASI-74-2G		2040000-0501	CABLE: ASI-742 (RCT-4A) W7	ASI DEALER
ASI-74-2H			BNC-T 150 OHM LOAD	ASI DEALER
ASI-74-2J			CABLE: SMB/BNC ADAPTER	ASI DEALER
ASI-74-2K		2040904-0501	CABLE: ASI-742 W4 (ASI-74-2D) TO DAA-4B	ASI DEALER
ASI-74-3A		8072626-0502	CABLE: ASI-743 (AIT-4A) TO PPI-1T W1	ASI DEALER
ASI-74-3B		8072628-0502	CABLE: ASI-743 (AIT-4A) TO PPI-1U W2	ASI DEALER
ASI-74-3C		8072625-0502	CABLE: ASI-743 (AIT-4A) TO PPI-4B W3	ASI DEALER
ASI-74-3D		8057438-0501	CABLE: ASI-743 (AIT-4A) TO ITA W4	ASI DEALER
ASI-74-5A		830-3835-001	CABLE: ASI-745-1 TO DLM-900 PWR SUPPLY	ASI DEALER
ASI-74-5B		830-3835-003	CABLE: ASI-745-3 TO SDU-906 PWR SUPPLY	ASI DEALER
ASI-74-5C		830-3835-002	CABLE: ASI-745-2 TO TTR-920 PWR SUPPLY	ASI DEALER
ASI-74-6A		830-1643-001	CABLE: ASI-746 RIBBON	ASI DEALER
ASI-74-6B		830-1644-001	CABLE: ASI-746 RIBBON	ASI DEALER
ASI-74-6C		830-1645-001	CABLE: ASI-746 RIBBON	ASI DEALER
ASI-76-0A		2040030-0501	CABLE: ASI-760 (PPT-4A) TO PPI-4B W1	ASI DEALER
ASI-76-0B		8073780-0001	CABLE: ASI-760 TO CCA-4A	ASI DEALER
ASI-76-0C			POWER SUPPLY LOAD FOR PPI-1T, PPI-1U, PPI-4B (TCAS AND NON-TCAS)	ASI DEALER
ASI-76-2A		830-6309-009	CABLE: ASI-762 NO. 1	ASI DEALER
ASI-76-2A1			CABLE: ASI-762 TO CIU-906 (4 FT LONG)	ASI DEALER
ASI-76-2A2			CABLE: ASI-762 TO CIU-906 (12 FT LONG)	ASI DEALER
ASI-76-2B		830-6309-010	CABLE: ASI-762 NO. 2	ASI DEALER
ASI-76-2C		830-6309-011	CABLE: ASI-762 NO. 3	ASI DEALER
ASI-76-2D		830-6309-012	CABLE: ASI-762 NO. 4	ASI DEALER
ASI-76-2E		830-6309-013	CABLE: ASI-762 NO. 5	ASI DEALER
ASI-76-2F		830-6309-014	CABLE: ASI-762 NO. 6	ASI DEALER
ASI-76-6E			CABLE: RS-232	ASI DEALER
ASI-76-6F			CABLE: DATA LOAD	ASI DEALER
ASI-76-7B			CABLE: CMU-APM TEST-P4	ASI DEALER
ASI-77-0A		2040331-0501	CABLE: ASI-770 (AST-4A) W101	ASI DEALER
ASI-77-0B		2040020-0501	CABLE: ASI-770 (AST-4A) W108	ASI DEALER
ASI-77-1A		2040083-0501	CABLE: ASI-771 (ATT-4A) W1	ASI DEALER
ASI-77-1B		2040082-0501	CABLE: ASI-771 (ATT-4A) W2	ASI DEALER
ASI-77-1C		2040981-0501	CABLE: ASI-771 (ATT-4A) W3	ASI DEALER
ASI-77-1D		2040020-0501	CABLE: ASI-771 (ATT-4A) W4	ASI DEALER
ASI-77-1E		649-0970-000	DAA-4A DUMMY ANTENNA WEIGHT (INCLUDES ASI-77-1E1 AND ASI-77-1E2)	ASI DEALER

**AVAILABILITY:**

ASI DEALER: CONTACT ANY ASI DEALER FOR QUOTE  
 COLLINS: CONTACT ROCKWELL COLLINS FOR QUOTE  
 GABLES: CONTACT GABLES ENGINEERING FOR QUOTE  
 TELEPHONICS: CONTACT TELEPHONICS FOR QUOTE

**ASI SPECIALIZED TEST EQUIPMENT LIST**

**AVAILABILITY SUBJECT TO CHANGE WITHOUT NOTICE**

ASI MN	EQUIV MN	EQUIV PN	DESCRIPTION	AVAILABILITY
ASI-77-1E1		649-0970-001	DAA-4A DUMMY ANTENNA WEIGHT 1 (PART OF ASI-77-1E)	ASI DEALER
ASI-77-1E2		649-0970-002	DAA-4A DUMMY ANTENNA WEIGHT 2 (PART OF ASI-77-1E)	ASI DEALER
ASI-77-1F			DAA-4A AZIMUTH AND ELEVATION GEAR SHAFT LOCKING PLATE (2 REQUIRED)	ASI DEALER
ASI-77-1G			DAA-4A DRIVE UNIT BACKLASH/SYNCHRO XMTR ALIGNMENT FIXTURE	ASI DEALER
ASI-77-2A			CABLE: ASI-772 (KTS-152) TO MAIN UNIT (CABLE 1)	ASI DEALER
ASI-77-2B			CABLE: ASI-772 (KTS-152) TO GYRO (CABLE 2)	ASI DEALER
ASI-77-3A		155-2058-01	CABLE: ASI-773 (KTS-153) TO KI-525/525A TOP PLUG (CABLE 1)	ASI DEALER
ASI-77-3B		155-2058-02	CABLE: ASI-773 (KTS-153) TO KI-525/525A BOTTOM PLUG (CABLE 2)	ASI DEALER
ASI-77-7A		988-9774-001	CABLE: ASI-777 (TE-9210) W1	ASI DEALER
ASI-77-7B		988-9775-001	CABLE: ASI-777 (TE-9210) W2	ASI DEALER
ASI-77-7C		988-9776-001	CABLE: ASI-777 (TE-9210) W3	ASI DEALER
ASI-77-7D		988-9777-001	CABLE: ASI-777 (TE-9210) W4	ASI DEALER
ASI-77-7E		988-9778-001	CABLE: ASI-777 (TE-9210) W5	ASI DEALER
ASI-77-7F		988-9779-001	CABLE: ASI-777 (TE-9210) W6	ASI DEALER
ASI-77-7G		751-7477-001	CABLE: ASI-777 (TE-9210) FIBER OPTIC	ASI DEALER
ASI-77-8A		751-3081-001	EXTENDER CARD: ASI-778 (TE-9400) A1	ASI DEALER
ASI-77-8A1		751-3082-001	EXTENDER CARD: ASI-778 (TE-9400) A3	ASI DEALER
ASI-77-8A2		751-3082-002	EXTENDER CARD: ASI-778 (TE-9400) A3	ASI DEALER
ASI-77-8B		751-3083-001	EXTENDER CARD: ASI-778 (TE-9400) A2	ASI DEALER
ASI-77-8C		751-0998-001	EXTENDER CARD: ASI-778 (TE-9400) A3	ASI DEALER
ASI-77-8D		751-2412-001	CABLE: ASI-778 (TE-9400) W1	ASI DEALER
ASI-77-8E		751-2412-002	CABLE: ASI-778 (TE-9400) W13	ASI DEALER
ASI-77-8F		751-2412-003	CABLE: ASI-778 (TE-9400) W14	ASI DEALER
ASI-77-8G		751-2413-001	CABLE: ASI-778 (TE-9400) W2	ASI DEALER
ASI-77-8H		751-2413-002	CABLE: ASI-778 (TE-9400) W15	ASI DEALER
ASI-77-8J		751-2414-001	CABLE: ASI-778 (TE-9400) W3	ASI DEALER
ASI-77-8K		751-2415-001	CABLE: ASI-778 (TE-9400) W4	ASI DEALER
ASI-77-8L		751-2416-001	CABLE: ASI-778 (TE-9400) W5	ASI DEALER
ASI-77-8M		751-2417-001	CABLE: ASI-778 (TE-9400) W6	ASI DEALER
ASI-77-8N		751-2417-002	CABLE: ASI-778 (TE-9400) W16	ASI DEALER
ASI-77-8P		751-2422-001	CABLE: ASI-778 (TE-9400) W7	ASI DEALER
ASI-77-8Q		751-2423-001	CABLE: ASI-778 (TE-9400) W8	ASI DEALER
ASI-77-8R		751-2424-001	CABLE: ASI-778 (TE-9400) W9	ASI DEALER
ASI-77-8S		751-2425-001	CABLE: ASI-778 (TE-9400) W10	ASI DEALER
ASI-77-8T		751-2426-001	CABLE: ASI-778 (TE-9400) W11	ASI DEALER
ASI-77-8U		751-2427-001	CABLE: ASI-778 (TE-9400) W12	ASI DEALER
ASI-77-8V		751-5126-001	CABLE: ASI-778 (TE-9400) W17	ASI DEALER
ASI-78-01A	W1	4007102-0501	CABLE: ASI-780-1 (P1/P2) TO COMPUTER WITH AMP CONNECTORS (TS-810A-02 SB)	ASI DEALER
ASI-78-01B	W2	4007114-0501	CABLE: ASI-780-1 (P6) TO ROLL SERVO WITH AMP CONNECTORS (TS-810A-02 SB)	ASI DEALER
ASI-78-01C	W3	4007114-0502	CABLE: ASI-780-1 (P7) TO PITCH SERVO WITH AMP CONNECTORS (TS-810A-02 SB)	ASI DEALER
ASI-78-01D	W4	4007114-0503	CABLE: ASI-780-1 (P8) TO TRIM SERVO WITH AMP CONNECTORS (TS-810A-02 SB)	ASI DEALER
ASI-78-01E	W5	4007107-0501	CABLE: ASI-780-1 (P5) TO PWR SUPPLY WITH AMP CONNECTORS (TS-810A-02 SB)	ASI DEALER
ASI-78-5A			CABLE: ASI-785 TO KLN-89/KLN-89A/KLN-94	ASI DEALER
ASI-78-5B			CABLE: ASI-785 TO KLN-90/KLN-90A/KLN-90B	ASI DEALER
ASI-78-5C			CABLE: ASI-785 TO KLN-35A	ASI DEALER
ASI-78-9A	W1	522-4855-001	CABLE	ASI DEALER
ASI-78-9B	W2	522-4856-001	CABLE	ASI DEALER
ASI-78-9C	W3	522-4857-001	CABLE	ASI DEALER
ASI-78-9D	W4	522-4939-001	CABLE	ASI DEALER
ASI-79-9A		8057258-0501	CABLE, ASI-799 (ACT-4A) TO RDR-4 CABLE (MUST BE WIRED TO RDR-4 CABLE)	ASI DEALER
ASI-80-XA		44127-001	CABLE: POWER 115 VAC 60 HZ	ASI DEALER
ASI-80-XB		2040020-0502	CABLE: POWER 115 VAC 400 HZ	ASI DEALER
ASI-80-XC1		2040410-0501	WRAP-AROUND TEST CONNECTOR	ASI DEALER
ASI-80-XC2		2040903-0501	WRAP-AROUND TEST CONNECTOR	ASI DEALER
ASI-80-XD			CABLE: IEEE488	ASI DEALER
ASI-80-XE		2039835-0501	EXTENDER BOARD: TEST SET MODULE	ASI DEALER
ASI-80-XF		2040179-0501	EXTENDER CABLE: TEST SET MODULE	ASI DEALER
ASI-80-XG		2040692-0501	POWER CABLE, 28VDC	ASI DEALER
ASI-80-1			CABLE: THINLINE 160 PIN EXTENDER/BREAKOUT BOX FOR EFIS-85/86 AND APS-85	ASI DEALER
ASI-80-2			CABLE: THINLINE 160 PIN EXTENDER CABLE FOR EFIS-85/86 AND APS-85	ASI DEALER
ASI-80-1A	W101	2040065-0501	CABLE, ASI-801 TO DMA-37A	ASI DEALER
ASI-80-2A	W101	2040070-0501	CABLE: ASI-802 (ALT-52A) TO ALA-52A	ASI DEALER
ASI-80-3A	W101	2040282-0504	CABLE: ASI-803 (RTT-44A) TO RTA-44A AND RTA-83B	ASI DEALER
ASI-80-3B		747-0446-001	CABLE: ASI-803 (RTT-44A) TO RTA-83A	ASI DEALER
ASI-80-4A		2040300-0501	CABLE: ASI-804-1 (DFT-75A) TO DFA-75A	ASI DEALER
ASI-80-5A	W101	2040085-0501	CABLE: ASI-805-X (RNT-30A) TO RIA-35A AND RIA-35B	ASI DEALER
ASI-80-5B	W102	2041779-0501	CABLE: ASI-805-X (RNT-30A) TO RVA-36A	ASI DEALER
ASI-81-01A		55-0215-15	CABLE: ASI-810-1 TO DF-431B / AT-434A	ASI DEALER
ASI-81-01B			SWITCHBOX: AT-434A	ASI DEALER
ASI-81-01C		55-0215-05	CABLE: ASI-810-1 TO DF-431A / AT-434A	ASI DEALER

**AVAILABILITY:**

ASI DEALER: CONTACT ANY ASI DEALER FOR QUOTE  
 COLLINS: CONTACT ROCKWELL COLLINS FOR QUOTE  
 GABLES: CONTACT GABLES ENGINEERING FOR QUOTE  
 TELEPHONICS: CONTACT TELEPHONICS FOR QUOTE

**ASI SPECIALIZED TEST EQUIPMENT LIST**

**AVAILABILITY SUBJECT TO CHANGE WITHOUT NOTICE**

<u>ASI MN</u>	<u>EQUIV MN</u>	<u>EQUIV PN</u>	<u>DESCRIPTION</u>	<u>AVAILABILITY</u>
ASI-81-01D			ISOLATION TRANSFORMER	ASI DEALER
ASI-81-01E		005-02101-0070	TEST PROM FOR DF-431B	ASI DEALER
ASI-81-02A		55-0215-11	CABLE: ASI-810-2 TO VC-401B	ASI DEALER
ASI-81-02B		55-0215-12	CABLE: ASI-810-2 TO VN-411B / KI-227	ASI DEALER
ASI-81-02C		55-0215-06	HSI SUBSTITUTION PLUG	ASI DEALER
ASI-81-02D			CABLE: ASI-810-2 TO KI-206	ASI DEALER
ASI-81-02E1			HIGH IMPEDANCE DETECTOR PROBE FOR VC-401( )	ASI DEALER
ASI-81-02E2			HIGH IMPEDANCE DETECTOR PROBE FOR VN411( )	ASI DEALER
ASI-81-02E3			LINEARDETECTOR FOR VC-401( )	ASI DEALER
ASI-81-02F		55-0215-01	CABLE: ASI-810-2 TO VC-401A	ASI DEALER
ASI-81-02G		55-0215-02	CABLE: ASI-810-2 TO VN-411A / KI-227	ASI DEALER
ASI-81-03A		55-0215-13	CABLE: ASI-801-3 TO TR-421B	ASI DEALER
ASI-81-03B		55-0215-14	CABLE: ASI-801-3 TO DM-441B	ASI DEALER
ASI-81-03C		55-0215-03	CABLE: ASI-801-3 TO TR-421A	ASI DEALER
ASI-81-03D		55-0215-04	CABLE: ASI-801-3 TO DM-441A	ASI DEALER
ASI-81-22A			CABLE: RS-422 INPUT	ASI DEALER
ASI-81-22B			CABLE: RS-485 INPUT	ASI DEALER
ASI-81-22C			CABLE: ARINC 429 INPUT	ASI DEALER
ASI-83C	HTS-83C	2900-00083-003	AUDIO WATT METER (2mW to 200W)	ASI DEALER
ASI-84-1A		628-8847-001	CABLE: ASI-CTS-841 TO DSP	ASI DEALER
ASI-84-1B		628-8847-002	CABLE: ASI-CTS-841 TO POWER SUPPLY	ASI DEALER
ASI-84-1C		628-8847-003	CABLE: ASI-CTS-841 RF CABLE	ASI DEALER
ASI-84-1D		628-8847-004	CABLE: ASI-CTS-841 TO RF BASE	ASI DEALER
ASI-84-1E		628-8847-005	CABLE: ASI-CTS-841 TO INDICATOR	ASI DEALER
ASI-84-1F		628-8847-006	CABLE: ASI-CTS-841 TO TERMINAL	ASI DEALER
ASI-84-1G		628-8847-007	CABLE: ASI-CTS-841 TO MODULATOR	ASI DEALER
ASI-84-1H		628-8847-008	CABLE: ASI-CTS-841 TO DIGITAL ATTITUDE SOURCE	ASI DEALER
ASI-84-1J		628-8847-009	CABLE: ASI-CTS-841 TO WXP-850	ASI DEALER
ASI-84-1K		628-8847-010	CABLE: ASI-CTS-841 TO IMPATT	ASI DEALER
ASI-84-1L		628-8847-011	CABLE: ASI-CTS-841 RF CABLE	ASI DEALER
ASI-84-1M		628-8847-012	CABLE: ASI-CTS-841 TRF BASE	ASI DEALER
ASI-84-1N		628-8847-013	CABLE: ASI-CTS-841 RF CABLE	ASI DEALER
ASI-84-1P		628-8847-014	CABLE: ASI-CTS-841 TO RF BASE	ASI DEALER
ASI-84-1Q		628-8847-015	CABLE: ASI-CTS-841 TO POWER SUPPLY	ASI DEALER
ASI-94-0A		628-8752-001	CABLE: ASI-CTS-940 TO TDR-94/94D	ASI DEALER
ASI-94-0A1		628-8752-001	CABLE: ASI-CTS-940 TO TDR-94/94D (9 FEET LONG)	ASI DEALER
ASI-94-0B		628-8753-001	CABLE: ASI-CTS-940 TO ARINC SMART CARD	ASI DEALER
ASI-94-0C		628-8754-001	CABLE: ASI-CTS-940 TO CONTEC I/O CARD	ASI DEALER
ASI-94-0F			CABLE: ASI-94-0C TO I/O CARD (PREFERED METHOD ONLY)	ASI DEALER
ASI-94-0G			CABLE: ASI-94-0B TO ARINC/CSDB CARDS (PREFERED METHOD ONLY)	ASI DEALER
ASI-94-1A			CABLE: ASI-CTS-941/AR TO COLLINS RTU-870A	ASI DEALER
ASI-94-1B			CABLE: ASI-CTS-941/AR TO COLLINS CTL-92/92A	ASI DEALER
ASI-94-1C			CABLE: ASI-CTS-941/AR TO GABLES 816	ASI DEALER
ASI-94-1D			CABLE: ASI-CTS-941/AR TO COLLINS TDR-94/94D	ASI DEALER
ASI-94-1E			CABLE: ATC-601 TO COLLINS TDR-94/94D ANTENNA	ASI DEALER
ASI-94-1F			CABLE: ASI-CTS-941/AR TO COLLINS TDR-94/94D WITH DATA LINK	ASI DEALER
ASI-94-1G			TEST FIXTURE: TDR-94/94D IF RECEIVER/LVPS/HVPS	ASI DEALER
ASI-94-1H			TEST FIXTURE: TDR-94/94D MODULATOR MODULE A3	ASI DEALER
ASI-94-1I			CABLE: RFPA TO IF RECEIVER RF EXTENDER CABLE	ASI DEALER
ASI-94-1J			CABLE: ASI-CTS-941AR TO COLLINS TTR-920G CONTROL	ASI DEALER
ASI-94-1K			CABLE: ATC-1400A AND S-1403C TO TDR-94D ANTENNA	ASI DEALER
ASI-94-1L			TEST FIXTURE: TDR-94/94D SYNTHESIZER MODULE A4	ASI DEALER
ASI-94-1M			HIGH CURRENT LOAD: MODULATOR PEAK CURRENT DETECTOR	ASI DEALER
ASI-94-1N			SYNTHESIZER ALIGNMENT TOOLS (SET OF 4)	ASI DEALER
ASI-94-1O			TEST PROBE HOLDER AND CLIP RAIL ASSY	ASI DEALER
ASI-94-1P			RF PROBE FOR PWR METER, SPECTRUM ANALYZER, OR SCOPE	ASI DEALER
ASI-94-1Q			ALIGNMENT COVER: IF RECEIVER MODULE COVER A	ASI DEALER
ASI-94-1R			ALIGNMENT COVER: IF RECEIVER MODULE COVER B	ASI DEALER
ASI-94-1S			ALIGNMENT COVER: TRANSMITTER AND RECEIVER FRONT END	ASI DEALER
ASI-94-1T			CABLE: ASI-CTS-941AR TO BENDIX MST-67A TRANSPONDER	ASI DEALER
ASI-94-1T			CABLE: ADAPTER FOR TDR-94D (-004)	ASI DEALER
ASI-94-2A			CABLE: TEST STATION WITH HIGH LEVEL SWITCH BOX	COLLINS
ASI-94-3A			CABLE: ASI-CTS-943 TO UUT J1	COLLINS
ASI-94-3B			CABLE: ASI-CTS-943 TO UUT J2	COLLINS
ASI-94-3C			CABLE: SMART CARD TO MASS XFER SWITCH	COLLINS
ASI-94-3D			CABLE: ASI-CTS-943 POWER CABEL	COLLINS
ASI-94-5A			CABLE: SMART CARD/A453	COLLINS
ASI-94-5B			CABLE: UUT J1	COLLINS
ASI-94-5C			CABLE: MASS XFER	COLLINS
ASI-94-5D			CABLE: 28 VDC POWER	COLLINS

**AVAILABILITY:**

ASI DEALER: CONTACT ANY ASI DEALER FOR QUOTE

COLLINS: CONTACT ROCKWELL COLLINS FOR QUOTE

GABLES: CONTACT GABLES ENGINEERING FOR QUOTE

TELEPHONICS: CONTACT TELEPHONICS FOR QUOTE

**ASI SPECIALIZED TEST EQUIPMENT LIST**

**AVAILABILITY SUBJECT TO CHANGE WITHOUT NOTICE**

ASI MN	EQUIV MN	EQUIV PN	DESCRIPTION	AVAILABILITY
ASI-94-5E			CABLE: 115 VAC POWER	COLLINS
ASI-95-4A			CABLE, ASI-CTS-954 TO TDR-94/94D A3-J8	COLLINS
ASI-95-4B			CABLE, ASI-CTS-954 TO TDR-94/94D A3-J24	COLLINS
ASI-95-4C			CABLE: ASI-CTS-954 TO TDR-94/94D A3-J5	COLLINS
ASI-95-4D			CABLE: ASI-CTS-954 POWER INPUT	COLLINS
ASI-96-9D			CABLE: ASI-CTS-969 TO VXI	COLLINS
ASI-97-6A	W1	932500-400-W1	CABLE: ASI-CTS-976	COLLINS
ASI-97-6B	W4	932500-400-W4	CABLE: ASI-CTS-976	COLLINS
ASI-97-6C	W16	932500-400-W16	CABLE: ASI-CTS-976	COLLINS
ASI-97-6D	W31	932500-400-W31	CABLE: ASI-CTS-976	COLLINS
ASI-97-6E			CABLE: ATP	COLLINS
ASI-97-9A			CABLE: RIU-4000 ESS UUT	COLLINS
ASI-97-9B			CABLE: RIU-4000 ESS PWR SPLY	COLLINS
ASI-97-9C			CABLE: RIU-4000 ESS CYTECH I/O	COLLINS
ASI-97-9D			CABLE: RIU-4000 ESS T/L PWR SPLY	COLLINS
ASI-98-1A			CABLE: ASI-CTS-981 TO UUT	COLLINS
ASI-98-1B			CABLE: ASI-CTS-981 TO POWER SUPPLY	COLLINS
ASI-98-1C			CABLE: ASI-CTS-981 TO CYTEC I/O	COLLINS
ASI-101D			DIGITAL SIGNAL GENERATOR	ASI DEALER
ASI-110-1	HTS-110	2900-001110-000	SOLID STATE DIGITAL SYNCHRO (ACCURACY +/- 0.067 DEGREES / 4 MIN)	ASI DEALER
ASI-110-2	HTS-110	2900-001110-001	SOLID STATE DIGITAL SYNCHRO (ACCURACY +/- 0.033 DEGREES / 2 MIN)	ASI DEALER
ASI-110-344	W4	110-344	CABLE, TEST SET J4 TO INTERFACE P1	ASI DEALER
ASI-110-0440-201		110-0440-201	CABLE, ARA-02 TO 860F-1/-4	ASI DEALER
ASI-110-0440-202		110-0440-202	CABLE, ARA-02 TO 339H-1/-2	ASI DEALER
ASI-110-0440-203		110-0440-203	CABLE, ARA-02 TO 860F-1/-4 J9	ASI DEALER
ASI-115	HTS-1101		INDICATOR TEST PANEL FOR C-6( )	ASI DEALER
ASI-116			GPS TEST PANEL FOR KLX-135	ASI DEALER
ASI-119			PRO LINE: MANUAL TEST PANEL FOR VIR-30/-31/-32/-33	ASI DEALER
ASI-120			PRO LINE: BRG TEST PANEL FOR TCN-40 (DME-40A / BRG-40)	ASI DEALER
ASI-121			PRO LINE: BIA TEST PANEL FOR BIA-32	ASI DEALER
ASI-122			PRO LINE: DDA TEST PANEL FOR DDA-42	ASI DEALER
ASI-123			PRO LINE: BDI TEST PANEL FOR BDI-36 (DME SECTION)	ASI DEALER
ASI-124			PRO LINE: CAD TEST PANEL FOR CAD-870G	ASI DEALER
ASI-125			PRO LINE: COM TEST PANEL FOR VHF-21( ), VHF-22( ), VHF-422( )	ASI DEALER
ASI-126			PRO LINE: CONTROL HEAD TEST PANEL FOR CTL-X2/X2A, CTL-23	ASI DEALER
ASI-127			PRO LINE: NAV TEST PANEL FOR VIR-30/-31 (SUGGESTED REPLACEMENT: ASI-127-1)	ASI DEALER
ASI-127-1			PRO LINE: MANUAL TEST PANEL FOR VIR-30/-31/-32/-33 (NON-COMPUTER TESTING)	ASI DEALER
ASI-128			PRO LINE: COMPUTER ASSISTED TEST PANEL FOR VIR-32/-33/-432/-433	ASI DEALER
ASI-129			PRO LINE: CONTROL ADAPTER TEST PANEL FOR CAD-31, CAD-62, CAD-92	ASI DEALER
ASI-130			PRO LINE: TRANSPONDER TEST PANEL FOR TDR-90	ASI DEALER
ASI-131			PRO LINE: HF CONTROL HEAD TEST PANEL FOR CTL-230	ASI DEALER
ASI-132			PRO LINE: RAC/CAD TEST PANEL FOR RAC-870, CAD-870	ASI DEALER
ASI-133			PRO LINE: RTU TEST PANEL FOR RTU-870A, RTU-870T	ASI DEALER
ASI-134			PRO LINE: DME TEST PANEL FOR DME-42/-442 (INCLUDES INTERNAL DME SIM BOARD)	ASI DEALER
ASI-135			PRO LINE: ADF TEST PANEL FOR ADF-462 (REQUIRES ASI-185 OR 970G-1)	ASI DEALER
ASI-136			PROLINE: VHF TEST PANEL FOR VHF-4000	ASI DEALER
ASI-137			PROLINE: VHF TEST PANEL FOR NAV-4000	ASI DEALER
ASI-138			PROLINE: VHF TEST PANEL FOR DME-4000	ASI DEALER
ASI-140			HEADING SELECTOR SYNCHRO	ASI DEALER
ASI-141			HEADING CONTROL TRANSFORMER	ASI DEALER
ASI-142-1	477L-1	522-1147-004	COMPASS SIMULATOR	ASI DEALER
ASI-142-2			COMPASS SIMULATOR (19 INCH RACK MOUNT VERSION)	ASI DEALER
ASI-142-3			VOR SIN-COS GENERATOR	ASI DEALER
ASI-143-1	477K-1	522-1146-004	GYRO SIMULATOR	ASI DEALER
ASI-143-2			GYRO SIMULATOR (19 INCH RACK VERSION)	ASI DEALER
ASI-145		023-0127-00	TO-FROM METER (500-0-500 uA)	ASI DEALER
ASI-146		023-0114-00	FLAG METER (0-500 uA)	ASI DEALER
ASI-147		023-0113-00	DEVIATION METER (100-0-100 uA)	ASI DEALER
ASI-150			UNIVERSAL TRACK SELECTOR	ASI DEALER
ASI-150-1		050-1571-01	UNIVERSAL TRACK SELECTOR WITH (30HZ / 400 HZ SWITCH PER KING SM105)	ASI DEALER
ASI-151			AIR DATA CONTROL TEST SET FOR COLLINS 590A-3H/3J/3K/3K1	ASI DEALER
ASI-152-1	RDT-1F	2038139-0501	BENDIX RDR-1F R/T TEST PANEL	ASI DEALER
ASI-152-2	RDT-1FB	2041351-0102	BENDIX RDR-1FB R/T TEST PANEL	ASI DEALER
ASI-153-1	ATT-1F	2038070-0501	BENDIX ANT-1T TEST PANEL	ASI DEALER
ASI-153-2	ATT-1FB	2038270-0502	BENDIX ANT-1TB TEST PANEL	ASI DEALER
ASI-153-3	ATT-1FB	2038270-0503	BENDIX ANT-1TB TEST PANEL WITH SECTOR SCAN TEST ADAPTER (ASI-153-4)	ASI DEALER
ASI-153-4	ANT-1FBM	8056275-0501	SECTOR SCAN ANTENNA TEST ADAPTER	ASI DEALER
ASI-154-1	RCT-1F	2038326-0501	BENDIX RDR-1F SYSTEM TEST PANEL	ASI DEALER
ASI-154-2	RCT-1FB	2041349-0102	BENDIX RDR-1FB / RDR-1FB(M) SYSTEM TEST PANEL	ASI DEALER
ASI-155			UNIVERSAL DIGITAL INTERFACE (UDI) FOR DIGITAL SPERRY INDICATORS	ASI DEALER
ASI-156		685-6581-001	AHRS MONITOR INTERFACE PANEL FOR COLLINS AHC-85	ASI DEALER

**AVAILABILITY:**

ASI DEALER: CONTACT ANY ASI DEALER FOR QUOTE  
 COLLINS: CONTACT ROCKWELL COLLINS FOR QUOTE  
 GABLES: CONTACT GABLES ENGINEERING FOR QUOTE  
 TELEPHONICS: CONTACT TELEPHONICS FOR QUOTE

**ASI SPECIALIZED TEST EQUIPMENT LIST**

**AVAILABILITY SUBJECT TO CHANGE WITHOUT NOTICE**

ASI MN	EQUIV MN	EQUIV PN	DESCRIPTION	AVAILABILITY
ASI-158		637-7656-001	UNIVERSAL HIGH POT TESTER (REQUIRES USER SUPPLIED FLUKE 8000A OR EQUIV)	ASI DEALER
ASI-158-1		637-7656-100	UNIVERSAL HIGH POT TESTER (REQUIRES USER SUPPLIED FLUKE 8000A OR EQUIV)	ASI DEALER
ASI-159			ARC-159 MODULE TESTER (BUILT TO LSI PRINTS)	ASI DEALER
ASI-160			UNIVERSAL HEAD & TRK SEL (REQ 36105 OR EQU RMI KDA-697)	ASI DEALER
ASI-160B			UNIVERSAL HEADING & TRACK SELECTOR (REQ 332C-10 OR EQU RMI)	ASI DEALER
ASI-160C			UNIVERSAL HDG & TRACK SELECTOR WITH METERS (REQ 332C-10 OR EQU)	ASI DEALER
ASI-161	479V-3	522-1339-000	PRECISION TRACK SELECTOR	ASI DEALER
ASI-162			RADIO SET CONTROL TEST PANEL (714E-1, 714E-2(), 714E-3(), 714E-6())	ASI DEALER
ASI-163			PRIMUS-90 RADAR TEST SET	ASI DEALER
ASI-164			RADIO ALTIMETER INDICATOR TEST SET: COLLINS 339H-X SERIES INDICATORS	ASI DEALER
ASI-165	CSS-10	622-5330-001	UNIVERSAL HEADING SELECTOR	ASI DEALER
ASI-166	479X-2	522-0167-001	RESOLVER ZEROING PANEL	ASI DEALER
ASI-166A			TEST PANEL FOR ASI-161 / 479V-3 / 79V-3	ASI DEALER
ASI-167	978F-2S	522-3498-000	SYNCHRO SIMULATOR	ASI DEALER
ASI-168			COLLINS 332D-11( ) GYRO TEST SET	ASI DEALER
ASI-168-1	ASI-168A		NOISE TEST FIXTURE FOR 332D-11	ASI DEALER
ASI-169	RST-1A	2064746-0501	BENDIX RDR-1E STABILIZATION RAMP TEST SET	ASI DEALER
ASI-169-2	RST-4A	2041797-0401	RTA-4A RADAR TEST SET	ASI DEALER
ASI-170	RFT-1A	2038142-0501	BENDIX RDR-1F RADAR RAMP RADAR TEST SET	ASI DEALER
ASI-171	RDT-1A	2037736-0501	BENDIX RDR-1E RADAR TEST PANEL	ASI DEALER
ASI-172	RDT-1B	2037737-0501	BENDIX ANT-1( ) RADAR ANTENNA TEST SET	ASI DEALER
ASI-173	PPT-1A	2037738-0501	BENDIX PPI-1( ) RADAR INDICATOR TEST SET	ASI DEALER
ASI-174	PPT-1B	2038141-0501	BENDIX PPI-1( ) RADAR INDICATOR TEST SET	ASI DEALER
ASI-175	AMT-51A	2037028-5103	RADIO ALTIMETER RAMP TEST SET (MOD 2)	ASI DEALER
ASI-175-2	AMT-52A	2041595-5201	PORTABLE ALTIMETER TEST SET	ASI DEALER
ASI-176A			ARINC 568 DME IND TEST SET (REPLACED BY ASI-176-1)	ASI DEALER
ASI-176BR			ARINC 568 DME IND TEST SET W/MASTER IND (REPLACED BY ASI-176-1)	ASI DEALER
ASI-176-1			ARINC 568 DME IND TEST SET.	ASI DEALER
ASI-177-1	RNT-26A	2064139-0501	VHF-NAV TEST SET FOR BENDIX RNA-26C / RNA-34A	ASI DEALER
ASI-177-2	RNT-260A	4000951-6004	TEST PANEL FOR AN/ARN-123 / AN/ARN-127 / AN/ARM-147 / RN-260A	ASI DEALER
ASI-178	477Q-1A	522-3330-000	COLLINS 331A-3F/3G/6D TEST SET (ALSO REPLACES 477Q-1)	ASI DEALER
ASI-178-1	477Q-1	522-1151-000	COLLINS 331A-3F/3G TEST SET (REPLACED ASI-178 / 477Q-1A)	ASI DEALER
ASI-179	476E-7	522-2078-000	COLLINS 332E-4 TEST SET (REQUIRES ASI-17-9A CABLE)	ASI DEALER
ASI-180			328A-3G TEST PANEL	ASI DEALER
ASI-181	975D-1	787-6842-001	COLLINS DME TEST SET (REPLACED BY ASI-182)	ASI DEALER
ASI-182	975D-2	622-3582-001	COLLINS DME TEST SET	ASI DEALER
ASI-183-1	971F-1	622-2013-001	AUTO PILOT TEST SET (12 CABLES INCLUDED WITH TEST SET)	ASI DEALER
ASI-183-2	971F-1	622-2013-002	AUTO PILOT TEST SET (CABLES NOT INCLUDED)	ASI DEALER
ASI-184	477V-3	792-6209-001	FAULT ISOLATION PANEL	ASI DEALER
ASI-185	970G-1	622-2854-001	ADF-60 TEST SET	ASI DEALER
ASI-186	970W-1	622-3099-001	ADF ANTENNA SIMULATOR (SEE ASI-61W FOR EQUIVALENT)	ASI DEALER
ASI-187	970E-1	622-2914-001	RMI TEST SET	ASI DEALER
ASI-187-PS1			POWER SUPPLY FOR ASI-187/970E-1	ASI DEALER
ASI-188-1		635-3127-001	RADAR TEST PANEL FOR WXR-150/200/220/250/270/300/350	ASI DEALER
ASI-188-2			ANTENNA CALIBRATION/TEST FIXTURE FOR ANT-310/312/318	ASI DEALER
ASI-188-3			COLLINS RADAR SYSTEMS FLIGHT LINE TEST FIXTURE	ASI DEALER
ASI-188-4			IND-270A TEST PANEL (WXR-270A MAN FIG 2-31 THRU 2-35)	ASI DEALER
ASI-188-7			WXP-85 BREAKOUT BOX	ASI DEALER
ASI-189	960M-3	622-2741-001	THIS ITEM HAS BEEN RE-NUMBERED TO ASI-212-3 (SEE ASI-212-3 FOR LIST PRICE)	ASI DEALER
ASI-190			UNIVERSAL TRACK SELECTOR	ASI DEALER
ASI-190B			UNIVERSAL TRACK SELECTOR WITH METERS	ASI DEALER
ASI-191	978F-1D	522-3424-000	INSTRUMENT TEST SET (COMES WITH GENERAL OVERLAY ONLY)	ASI DEALER
ASI-191-001		757-0544-001	ASI-191 (978F-1D) OVERLAY FOR TESTING 329B-7	ASI DEALER
ASI-191-002		757-0544-002	ASI-191 (978F-1D) OVERLAY FOR TESTING 331A-7	ASI DEALER
ASI-191-003		757-0544-003	ASI-191 (978F-1D) OVERLAY FOR TESTING 329B-7A	ASI DEALER
ASI-191-004		757-0544-004	ASI-191 (978F-1D) OVERLAY FOR TESTING 329B-7C	ASI DEALER
ASI-191-005		757-0544-005	ASI-191 (978F-1D) OVERLAY FOR TESTING 329B-6D	ASI DEALER
ASI-191-006		757-0544-006	ASI-191 (978F-1D) OVERLAY FOR TESTING 331A-6A	ASI DEALER
ASI-191-007		757-0544-007	ASI-191 (978F-1D) OVERLAY FOR TESTING 331A-6D	ASI DEALER
ASI-191-008		757-0544-008	ASI-191 (978F-1D) OVERLAY FOR TESTING 331A-7A	ASI DEALER
ASI-191-009		757-0544-009	ASI-191 (978F-1D) OVERLAY FOR TESTING 329B-7F	ASI DEALER
ASI-191-010		757-0544-010	ASI-191 (978F-1D) OVERLAY FOR TESTING 329B-7F-1	ASI DEALER
ASI-191-011		757-0544-011	ASI-191 (978F-1D) OVERLAY FOR TESTING 329B-7G	ASI DEALER
ASI-191-012		757-0544-012	ASI-191 (978F-1D) OVERLAY FOR TESTING 331A-6E	ASI DEALER
ASI-191-013		757-0544-013	ASI-191 (978F-1D) OVERLAY FOR TESTING 329B-7J	ASI DEALER
ASI-191-014		757-0544-014	ASI-191 (978F-1D) OVERLAY FOR TESTING 329B-7K	ASI DEALER
ASI-191-015		757-0544-015	ASI-191 (978F-1D) OVERLAY FOR TESTING 329B-8C	ASI DEALER
ASI-191-016		757-0544-016	ASI-191 (978F-1D) OVERLAY FOR TESTING 331A-6K	ASI DEALER
ASI-191-017		757-0544-017	ASI-191 (978F-1D) OVERLAY FOR TESTING 329B-6E	ASI DEALER
ASI-191-018		757-0544-018	ASI-191 (978F-1D) OVERLAY FOR TESTING 329B-8A	ASI DEALER

**AVAILABILITY:**

ASI DEALER: CONTACT ANY ASI DEALER FOR QUOTE  
 COLLINS: CONTACT ROCKWELL COLLINS FOR QUOTE  
 GABLES: CONTACT GABLES ENGINEERING FOR QUOTE  
 TELEPHONICS: CONTACT TELEPHONICS FOR QUOTE

**ASI SPECIALIZED TEST EQUIPMENT LIST**

**AVAILABILITY SUBJECT TO CHANGE WITHOUT NOTICE**

<b>ASI MN</b>	<b>EQUIV MN</b>	<b>EQUIV PN</b>	<b>DESCRIPTION</b>	<b>AVAILABILITY</b>
ASI-191-019		757-0544-019	ASI-191 (978F-1D) OVERLAY FOR TESTING 329B-8B	ASI DEALER
ASI-191-020		757-0544-020	ASI-191 (978F-1D) OVERLAY FOR TESTING 329B-8F	ASI DEALER
ASI-191-021		757-0544-021	ASI-191 (978F-1D) OVERLAY FOR TESTING 329B-7M	ASI DEALER
ASI-191-022		757-0544-022	ASI-191 (978F-1D) OVERLAY FOR TESTING 329B-8G	ASI DEALER
ASI-191-023		757-0544-023	ASI-191 (978F-1D) OVERLAY FOR TESTING 329B-8N	ASI DEALER
ASI-191-024		761-5230-006	ASI-191 (978F-1D) OVERLAY FOR TESTING 331A-3G/6P/HSI-70	ASI DEALER
ASI-191-025			ASI-191 (978F-1D) OVERLAY FOR ADI-84/329B-7R	ASI DEALER
ASI-191-1			ADAPTER PANEL, 978F-1D TO ADI-84 / 329B-7R (REQUIRES ASI-19-11A, ASI-19-11B)	ASI DEALER
ASI-191-2			BREAKOUT BOX, ADI-84 / 329B-7R	ASI DEALER
ASI-191-3			ADAPTER BOX, 978F-1D TO HSI-70( )	ASI DEALER
ASI-192	477U-2	522-2710-000	ADF ANTENNA SIMULATOR (WITH 3 CABLES)	ASI DEALER
ASI-193	477V-2	522-2711-002	ADF-TEST SET (WITH 3 CABLES)	ASI DEALER
ASI-194			860F-1/4 RADIO ALTIMETER TEST PANEL	ASI DEALER
ASI-195			TEST SET FOR JET PS-823( ) EMERGENCY POWER SUPPLY (WITH 1 CABLE)	ASI DEALER
ASI-196			TEST SET FOR JET PS-835( ) EMERGENCY POWER SUPPLY (WITH 2 CABLES)	ASI DEALER
ASI-196-1	JT-138A	570-7996-01	TEST SET FOR PS-850( ) / PS-855( )	ASI DEALER
ASI-196-2	JT-135A	570-7936-01	TEST SET FOR PS-834( ) (WITH 1 CABLE)	ASI DEALER
ASI-197	PPT-1CG	2041323-0101	PPI-1U TEST PATTERN GENERATOR	ASI DEALER
ASI-198		2039597-0501	PP1-1U RADAR TEST ADAPTER	ASI DEALER
ASI-199	ALT-51A	2037120-0501	ALA-51A/INA-51A TEST PANEL WITH DELAY LINE	ASI DEALER
ASI-199-1			ALA-51A/INA-51A TEST PANEL WITHOUT DELAY LINE	ASI DEALER
ASI-199-3		2068256-0701	650 nS DELAY LINE (P/O ASI-199)	ASI DEALER
ASI-199-4			ALA-51A TRANSMITTER TEST MODULATOR	ASI DEALER
ASI-199-5			ALA-51A TRANSMITTER TEST FIXTURE	ASI DEALER
ASI-200-1			ASI-2000 PLUG IN FOR CTL-22, 32, 62, 92	ASI DEALER
ASI-200-2A			ASI-2000 PLUG IN FOR VIR-32 (WITH HEADING SYNCHRO ONLY)	ASI DEALER
ASI-200-2B			ASI-2000 PLUG IN FOR VIR-32 (WITH HDG SYNC, TO-FR MTR, OBS, RESOLVER)	ASI DEALER
ASI-200-2C			ASI-2000 PLUG IN FOR VIR-32 (WITH TO-FROM METER ONLY)	ASI DEALER
ASI-200-2D			ASI-2000 PLUG IN VIR-32 FOR USE WITH ASI-160( ) OR ASI-161 (479V-3)	ASI DEALER
ASI-200-3			ASI-2000 PLUG IN FOR VHF-21 / VHF-22	ASI DEALER
ASI-200-4			ASI-2000 PLUG IN FOR CAD-31 / CAD-62	ASI DEALER
ASI-200-5			ASI-2000 PLUG IN FOR DME-42 / IND-42	ASI DEALER
ASI-200-5A1		647-6787-001	DME SIM CARD AND CASE	ASI DEALER
ASI-200-6			ASI-2000 PLUG IN FOR CTL-230	ASI DEALER
ASI-200-7			ASI-2000 PLUG IN FOR KING KFS	ASI DEALER
ASI-200-8			ASI-2000 PLUG IN FOR ARINC COMM	ASI DEALER
ASI-200-9			ASI-2000 PLUG IN FOR ARINC NAV	ASI DEALER
ASI-200-10			ASI-2000 PLUG IN FOR ADF-60A, ADF-60B, ADF-462	ASI DEALER
ASI-200-11			ASI-2000 PLUG IN FOR VHF-422	ASI DEALER
ASI-200-12			ASI-2000 PLUG IN FOR VIR-432	ASI DEALER
ASI-200-13			ASI-2000 PLUG IN FOR DME-442	ASI DEALER
ASI-200-14			ASI-2000 PLUG IN FOR TDR-90 AND CAD-870G	ASI DEALER
ASI-200-15			ASI-2000 PLUG IN FOR DDA-42	ASI DEALER
ASI-200-16			ASI-2000 PLUG IN FOR KDM-706A	ASI DEALER
ASI-200-17			ASI-2000 PLUG IN FOR RTU-870 (THIS ITEM HAS BE REPLACED BY THE ASI-200-17A)	ASI DEALER
ASI-200-17A			ASI-2000 PLUG IN FOR RTU-870A	ASI DEALER
ASI-200-18			ASI-2000 PLUG IN FOR CAD-870/RAC-870	ASI DEALER
ASI-200-19			ASI-2000 PLUG IN FOR BIA-32	ASI DEALER
ASI-200-20			ASI-2000 PLUG IN FOR ALT-50A, 55B, 860F-2	ASI DEALER
ASI-200-21			ASI-2000 PLUG IN FOR CTL-X0 AND CTL-X1	ASI DEALER
ASI-200-22			ASI-2000 PLUG IN FOR BRG-40	ASI DEALER
ASI-200-23			ASI-2000 PLUG IN FOR ARINC GLIDE SLOPE	ASI DEALER
ASI-200-24			ASI-2000 PLUG IN FOR ARINC DME	ASI DEALER
ASI-200-25			ASI-2000 PLUG IN FOR ARINC TRANSPONDER	ASI DEALER
ASI-200-26			ASI-2000 PLUG IN FOR ARINC MARKER BEACON	ASI DEALER
ASI-200-27			ASI-2000 PLUG IN FOR CTL-92T	ASI DEALER
ASI-200-28			ASI-2000 PLUG-IN PROLINE CARD SELF-TEST MODULE	ASI DEALER
ASI-200-29			ASI-2000 PLUG-IN FOR VHF-4000	ASI DEALER
ASI-200-30			ASI-2000 PLUG-IN FOR NAV-4000	ASI DEALER
ASI-200-31			ASI-2000 PLUG-IN FOR DME-4000	ASI DEALER
ASI-200-32			ASI-2000 PLUG-IN FOR CMU-4000	ASI DEALER
ASI-200-33			ASI-2000 PLUG-IN FOR ALT-4000	ASI DEALER
ASI-2000			MAINFRAME (REQUIRES ASI-200-X PLUG-INS)	ASI DEALER
ASI-2001			PRO LINE COMPUTER SYSTEM (INCLUDES INTERNAL ASI-CTC-429 AND ASI-401-ISA)	ASI DEALER
ASI-2001-1			PRO LINE COMPUTER SYSTEM (INCLUDES INTERNAL ASI-401-ISA)	ASI DEALER
ASI-2001-2			PRO LINE COMPUTER SYSTEM (INCLUDES INTERNAL ASI-CTC-429)	ASI DEALER
ASI-2001-3			PRO LINE COMPUTER SYSTEM (COMPUTER ONLY)	ASI DEALER
ASI-201-1	AN/ARM-93	522-4458-001	ADF SYSTEM TEST SET FOR ARN-83 (NSN 6625-00-999-5119)	ASI DEALER
ASI-201-1TS	TS-2502/ARM-93	762-1675-001	ADF TEST SET / P/O ASI-201-1 (NSN 6625-00-999-6080)	ASI DEALER
ASI-201-2	477U-3	522-4458-002	ADF SYSTEM TEST SET FOR DF-203 ADF SYSTEM	ASI DEALER

**AVAILABILITY:**

ASI DEALER: CONTACT ANY ASI DEALER FOR QUOTE  
 COLLINS: CONTACT ROCKWELL COLLINS FOR QUOTE  
 GABLES: CONTACT GABLES ENGINEERING FOR QUOTE  
 TELEPHONICS: CONTACT TELEPHONICS FOR QUOTE



**ASI SPECIALIZED TEST EQUIPMENT LIST**

**AVAILABILITY SUBJECT TO CHANGE WITHOUT NOTICE**

<b>ASI MN</b>	<b>EQUIV MN</b>	<b>EQUIV PN</b>	<b>DESCRIPTION</b>	<b>AVAILABILITY</b>
ASI-202-1	DFT-73AA	2064943-0501	ADF SYSTEM TEST PANEL	ASI DEALER
ASI-202-2	DFT-73C1	2070555-0501	ADF SYSTEM TEST SET	ASI DEALER
ASI-203	980N-1	522-4610-004	RADIO ALTIMETER TEST SET	ASI DEALER
ASI-203-A1		622-4055-002	RATE GENERATOR CARD FOR ASI-203 / 980N-1 / 522-4610-004	COLLINS
ASI-203-M1K			980N-1 METER (M1) RETROFIT KIT FOR 458-0815-040	ASI DEALER
ASI-203-TA			980N-1 / ASI-203 TEST ADAPTER (980N-1 MAN FIG 7-24 & 7-25)	ASI DEALER
ASI-204	972S-1	622-1626-001	AUTOPILOT RAMP TEST SET FOR AP-106, AP-107	ASI DEALER
ASI-204-91523-1		204-91523-1	CABLE SET: FIRE WARNING TEST	ASI DEALER
ASI-205	972S-2	622-1628-001	AUTOPILOT BENCH TEST SET FOR AP-106, AP-107	ASI DEALER
ASI-205-2			TEST SET: 454N-3 TRIM SERVO MONITOR	ASI DEALER
ASI-205-3			TEST SET: 454N-2/2D RATE LEVEL SENSOR	ASI DEALER
ASI-205-4			TEST SET: AP-106/107 ANNUNCIATOR UNIT	ASI DEALER
ASI-205-5			TEST SET: 998E-1 ANNUNCIATOR ADAPTER	ASI DEALER
ASI-205-6	999U-1	622-3635-001	TEST SET ADAPTER	ASI DEALER
ASI-206	972S-3	622-2562-001	SERVO TEST SET FOR AP-106, AP-107	ASI DEALER
ASI-207	477W-7	622-0158-001	TEST BENCH HARNESS (INCLUDES 678P-5, 172H-18, AND 7 CABLES)	ASI DEALER
ASI-207-1	172H-18	622-0180-001	DUMMY ANTENNA SHUNT	ASI DEALER
ASI-207-1-220	172H-18	622-0180-002	DUMMY ANTENNA SHUNT (220 VAC)	ASI DEALER
ASI-207-2	678P-5	622-0304-001	RADIO TEST SET HARNESS	ASI DEALER
ASI-207-3			CPL-920D RF HIGH VOLTAGE TEST FIXTURE ( <b>MUST BE CALIBRATED BY COLLINS</b> )	ASI DEALER
ASI-207-4	967R-2	822-1176-001	CPL-920D CONTROL CARD TEST SET	ASI DEALER
ASI-207-5	TE1	752-8896-001	CPL-920D POWER SUPPLY TEST FIXTURE (INCLUDES W1 AND W2)	ASI DEALER
ASI-207-6	TE2	989-2159-001	CPL-920D MIMS/DISCRIMINATOR TEST FIXTURE	ASI DEALER
ASI-207-6-1		989-2159-006	CPL-920D MIMS/SENSOR ASSY TOP TEST COVER (P/O ASI-207-6)	ASI DEALER
ASI-207-6-2		989-2159-007	CPL-920D MIMS/SENSOR ASSY TEST COIL TOP COVER (P/O ASI-207-6)	ASI DEALER
ASI-207-6-3		989-2159-008	CPL-920D MIMS/SENSOR ASSY BOTTOM TEST COVER (P/O ASI-207-6)	ASI DEALER
ASI-207-6-4		989-2159-011	CPL-920D SMB COAX TEST JUMPER (P/O ASI-207-6)	ASI DEALER
ASI-207-6-5		989-2159-012	CPL-920D SMB COAX TEST JUMPER (P/O ASI-207-6)	ASI DEALER
ASI-207-7	TE3	989-2167-001	CPL-920D RF NETWORK TEST FIXTURE	ASI DEALER
ASI-207-8	TE4	989-2168-001	CPL-920D RF NETWORK HOLDING FIXTURE	ASI DEALER
ASI-207-8-1		989-2168-009	CPL-920D RF TEST CABLE (P/O ASI-207-8)	ASI DEALER
ASI-207-8-2		989-2168-010	CPL-920D RF TEST CABLE (P/O ASI-207-8)	ASI DEALER
ASI-207-9	TE5	989-2169-001	CPL-920D CALIBRATION FIXTURE	ASI DEALER
ASI-207-10		989-2146-001	CPL-920D 90 DEGREE PHASE SHIFT NETWORK	ASI DEALER
ASI-207-11		989-2146-002	CPL-920D 0 DEGREE POWER DIVIDER	ASI DEALER
ASI-207-12		989-2146-007	CPL-920D RF TEST CABLE (2 REQUIRED)	ASI DEALER
ASI-207-13		652-2443-001	CPL-920D TEST ADAPTER	COLLINS
ASI-207-14-1			CPL-920D A2 CARD DRILL FIXTURE NO 1	ASI DEALER
ASI-207-14-2			CPL-920D A2 CARD DRILL FIXTURE NO 1	ASI DEALER
ASI-208	980H-5	777-1526-001	ANTENNA COUPLER TEST SET	ASI DEALER
ASI-208-1	878L-19D	622-0226-001	DISCRIMINATOR TEST SET	ASI DEALER
ASI-208-2		617-9736-001	POWER PANEL	ASI DEALER
ASI-208-3	878L-39	622-0227-001	SERVO-POWER SUPPLY TEST SET	ASI DEALER
ASI-208-3-1		609-9498-001	EXTENDER FIXTURE, CARD (P/O ASI-208-3)	ASI DEALER
ASI-208-4	878L-40	622-0228-001	TUNER-CHASSIS TEST SET	ASI DEALER
ASI-208-5	878L-41	622-0229-001	LOGIC CARD TEST SET	ASI DEALER
ASI-208-6	973K-1	622-0337-001	ANTENNA COUPLER GROUP TEST SET (INCL ASI-208-1,-2,-3,-4)	ASI DEALER
ASI-209-1	678P-1	547-3914-00	REPLACED BY ASI-209-1A / 678P-1A	ASI DEALER
ASI-209-1A	678P-1A	547-3914-000	RADIO SET TEST HARNESS (6625-00-674-4860)	ASI DEALER
ASI-209-1B	678P-1B	777-1861-001	RADIO SET TEST HARNESS	COLLINS
ASI-209-1C	678P-1C	622-4211-001	RADIO SET TEST HARNESS	ASI DEALER
ASI-209-2	678P-2	522-3400-005	REPLACED BY ASI-209-2A / 678P-2A	ASI DEALER
ASI-209-2A	678P-2A	522-3400-005	RADIO SET TEST HARNESS (6625-01-064-6671)	ASI DEALER
ASI-209-2B	678P-2B	792-6229-001	RADIO SET TEST HARNESS (6625-00-064-1557 / AN/URM-157A)	ASI DEALER
ASI-209-2C	678P-2C	522-3400-007	REPLACED BY ASI-209-2A / 678P-2A	ASI DEALER
ASI-209-2D	678P-2D	522-3400-006	RADIO SET TEST HARNESS WITH CONTROL (6625-00-766-4685 / AN/URM-157)	ASI DEALER
ASI-209-6		635-6382-001	678P-1/2 (ASI-209-X) TEST SET ADAPTER FOR 628T-1/1B	ASI DEALER
ASI-209-7			628T-1/1B CONNECTOR BREAKOUT BOX (MAN FIG 902)	ASI DEALER
ASI-209-8		642-6964-011	678P-1/2 (ASI-209-X) TEST SET ADAPTER FOR 628T-2/2A (MAN FIG 906)	COLLINS
ASI-209-9		642-6964-010	628T-2/2A TEST POINT BREAKOUT BOX (MAN FIG 908)	COLLINS
ASI-209-10		642-7952-001	678P-1/2 (ASI-209-X) TEST SET ADAPTER FOR 628T-3/3A (MAN FIG 905-906)	COLLINS
ASI-209-11			628T-3/3A/3B ATE CONNECTOR BREAKOUT BOX (MAN FIG 902)	ASI DEALER
ASI-210			AL-101 RADIO ALTIMETER RAMP TEST SET	ASI DEALER
ASI-211			DSA-220/LWA-200 DUAL SYSTEM TEST SET	ASI DEALER
ASI-212-1	960M-1	622-0471-001	TORQUE TESTER FOR 334C-6( ), SVO-80( )	ASI DEALER
ASI-212-2	960M-2	622-2094-001	TORQUE TESTER FOR 334C-9/9A, 334D-6( )	ASI DEALER
ASI-212-3	960M-3	622-2741-001	TORQUE TESTER FOR 334C-9/9A/11/12H, 334D-6( )	ASI DEALER
ASI-212-4	960M-4	622-5434-001	TORQUE TESTER FOR SVO-85( ), SVO-1000( )	ASI DEALER
ASI-212-5	960M-5	622-6454-001	TORQUE TESTER FOR SVO-65, SVO-75, SVT-1000A/B	ASI DEALER
ASI-213-1		608-3617-001	SERVO LOOP TEST SET FOR 334C-6/SVO-80	ASI DEALER

**AVAILABILITY:**

ASI DEALER: CONTACT ANY ASI DEALER FOR QUOTE  
 COLLINS: CONTACT ROCKWELL COLLINS FOR QUOTE  
 GABLES: CONTACT GABLES ENGINEERING FOR QUOTE  
 TELEPHONICS: CONTACT TELEPHONICS FOR QUOTE

**ASI SPECIALIZED TEST EQUIPMENT LIST**

**AVAILABILITY SUBJECT TO CHANGE WITHOUT NOTICE**

ASI MN	EQUIV MN	EQUIV PN	DESCRIPTION	AVAILABILITY
ASI-213-2		637-0789-001	MINIMUM PERFORMANCE TEST SET FOR 334C-6/SVO-80	COLLINS
ASI-214			TDR-94/94D FLIGHT LINE TEST SET (REQUIRES ASI-21-4X TEST KITS)	ASI DEALER
ASI-215			ZEROING AND TRACKING TEST PANEL	ASI DEALER
ASI-216			INTERNAL DATA BUS SIMULATOR	ASI DEALER
ASI-217			VHF-20( ) / VHF-21( ) TEST PANEL	ASI DEALER
ASI-218			DRI-55 TEST PANEL	ASI DEALER
ASI-219			ILS-70 TEST PANEL	ASI DEALER
ASI-220			TEST SET FOR COLLINS CTL-92T	ASI DEALER
ASI-221-1	968Y-1		51R/51RV NAV RECEIVER (ARINC 547 VOR/ILS) TEST PANEL	ASI DEALER
ASI-221-2			618M COM RECEIVER (ARINC 566/566A) TEST PANEL	ASI DEALER
ASI-222-1			346D-1/2/2B TEST PANEL (INCLUDES ALL LOAD RESISTORS AND SPKR PANEL)	ASI DEALER
ASI-223	478A-3	622-3701-001	ZIFOR III VOR RADIAL STANDARD	ASI DEALER
ASI-223-1	478A-3	622-3701-001	ZIFOR III VOR RADIAL STANDARD (WITH ASI-22-3A INSTALLED)	ASI DEALER
ASI-225		687-8450-001	TACAN TEST SET ADAPTER (972V-1 TO 899L-1)	ASI DEALER
ASI-225-1			ALIGNMENT FIXTURE FOR THE 899L-1 / 998J-1	ASI DEALER
ASI-225-2			TACAN DC SUPPLY INTERFACE FIXTURE FOR 374D-1/2	ASI DEALER
ASI-225-3			TACAN AGE CONNECTOR BREAKOUT BOX FOR 374D-1/-2	ASI DEALER
ASI-226	514M-2	622-7082-001	INTERFACE PANEL FOR 972V-1 TACAN TEST SET	ASI DEALER
ASI-227		024-0458-000	TUNING TOOL (GC-8605 / 00-8605-0000)	ASI DEALER
ASI-228		024-0817-010	TUNING TOOL	ASI DEALER
ASI-229			614E-10( ) / FMC-28( ) MODE SEL SWITCH ADJ FIXTURE (614E-10 MAN FIG 1004)	ASI DEALER
ASI-230		229-0223-030	FLUX KEEPER RING (1-1/8" DIA)	COLLINS
ASI-231			339H-1 SPECIAL TEST FIXTURE (339H-1 MAN FIG 1003 - 1006) REPLACED BY ASI-231-1	ASI DEALER
ASI-231R			339H-1 SPECIAL TEST PANEL (339H-1 MAN FIG 1003 - 1006) REPLACED BY ASI-231-1	ASI DEALER
ASI-231-1	974G-1		RADIO ALTIMETER INDICATOR TEST PANEL FOR 339H-1( )	ASI DEALER
ASI-232		229-9515-050	MAGNET KEEPER (1-13/16" DIA)	COLLINS
ASI-233			51Y-7 RF BAL ADJ TEST FIXTURE (51Y-7 MAN FIG 1002 - 1004)	ASI DEALER
ASI-234			51Y-7 50 OHM PROBE (51Y-7 MAN FIG 1005)	ASI DEALER
ASI-235			51Y-7 / 490S-1 SPECIAL SOLDER TIP	ASI DEALER
ASI-236			51Z-4 TEST AND ALIGN JIG (51Z-4 MAN FIG 1002)	ASI DEALER
ASI-237			860F-1/4 RADIO ALTIMETER TEST FIXTURE (860F-4 MAN FIG 903-907)	ASI DEALER
ASI-238			860F-4 TRANSMITTER ALIGHNMENT TOOL (860F-4 MAN FIG 911)	ASI DEALER
ASI-239		635-6254-001	860F-4 SPECIAL WRENCH	ASI DEALER
ASI-240			860F-4 RF CABLE (INCLUDES 2 ATTACHED 15 FT RF CABLES)	ASI DEALER
ASI-241	MST-901	622-6100-001	MICROPROCESSOR SYSTEM TEST SET ADAPTER	ASI DEALER
ASI-242			621A-6( ) TEST FIXTURE (621A-6( ) MAN FIG 1003)	ASI DEALER
ASI-242R			621A-3/6( ) TEST PANEL (621A-6( ) MAN FIG 1003)	ASI DEALER
ASI-243			614L-12 BREAKOUT BOX	ASI DEALER
ASI-244-1	PPT-1FB	2041350-0101	RADAR INDICATOR TEST PANEL	ASI DEALER
ASI-244-2	PPT-1FB	2041350-0102	RADAR INDICATOR TEST PANEL	ASI DEALER
ASI-244-3		2039817-0501	CON-1FB TEST ADAPTER	ASI DEALER
ASI-244-4		8050799-0501	CON-1TB TEST ADAPTER AND CABLE	ASI DEALER
ASI-245	700D-2A	622-0147-001	THRESHOLD DETECTOR FOR 971T-1	ASI DEALER
ASI-246-1		621-9185-001	CAPSTAN TEST FIXTURE FOR 334C-9/9A/11	ASI DEALER
ASI-246-2		621-9185-002	CAPSTAN TEST FIXTURE FOR SVO-65( ) AND SVO-75	ASI DEALER
ASI-247		634-0549-001	YAW DAMPER TEST FIXTURE	ASI DEALER
ASI-248			AIU-4000 TEST PANEL	ASI DEALER
ASI-249		676-1949-001	SVT-1000 TEST PANEL / RUN-IN FIXTURE	ASI DEALER
ASI-250		685-6220-001	590B-2 TEST AID	ASI DEALER
ASI-251		685-6295-001	CTS-859 TERMINAL TO IBM SWITCH UNIT (ALT PN 628-8839-001)	ASI DEALER
ASI-252-1	COT-1FB	2041348-0101	RADAR CONTROL TEST PANEL	ASI DEALER
ASI-252-2	COT-4A	2041593-0401	RADAR CONTROL TEST PANEL	ASI DEALER
ASI-253			JET GYRO TEST PANEL	ASI DEALER
ASI-254			CHP-850( ) TEST SET	ASI DEALER
ASI-255			APP-850 TEST SET	ASI DEALER
ASI-256		652-5939-001	SERVO CALIBRATION FIXTURE	ASI DEALER
ASI-257	CTS-451	622-3882-001	S-TEC DME-451 TEST SET	ASI DEALER
ASI-258-1			339H-6 (-001) TEST FIXTURE (339H-6 MAN FIG 902 - 903)	ASI DEALER
ASI-258-2			339H-6 TEST FIXTURE (339H-6 MAN FIG 904 - 905)	ASI DEALER
ASI-259-L			TAPE WINDING FIXTURE - LEFT (339H-6 MAN FIG 913, 915 - 918)	ASI DEALER
ASI-259-R			TAPE WINDING FIXTURE - RIGHT (339H-6 MAN FIG 914 - 918)	ASI DEALER
ASI-260-1		T321703	TARSYN/VG-14 FINAL TEST FIXTURE	ASI DEALER
ASI-260-2		T321705	TARSYN/VG-14 FIELD TEST FIXTURE	ASI DEALER
ASI-261			AVQ-30 X AND C BAND RADAR SYSTEM TEST PANEL	ASI DEALER
ASI-262			AVQ-10 C BAND RADAR SYSTEM TEST PANEL	ASI DEALER
ASI-263	HWX-650/870	T334612	PRIMUS-450/650/870 RADAR TEST PANEL	ASI DEALER
ASI-263-2	HWX-660/880	T336162	PRIMUS-331/440/660/880 RADAR TEST SET	ASI DEALER
ASI-263-3	ADS-100	7015457-901	AIR DATA SIMULATOR	ASI DEALER
ASI-263-4			RS-232 ADAPTER FOR WU-870 (PRE MOD N UNITS ONLY)	ASI DEALER
ASI-264		T334822	WC-874 EFIS AUX. CONN TEST BOX	ASI DEALER

**AVAILABILITY:**

ASI DEALER: CONTACT ANY ASI DEALER FOR QUOTE

COLLINS: CONTACT ROCKWELL COLLINS FOR QUOTE

GABLES: CONTACT GABLES ENGINEERING FOR QUOTE

TELEPHONICS: CONTACT TELEPHONICS FOR QUOTE

**ASI SPECIALIZED TEST EQUIPMENT LIST**

**AVAILABILITY SUBJECT TO CHANGE WITHOUT NOTICE**

<b>ASI MN</b>	<b>EQUIV MN</b>	<b>EQUIV PN</b>	<b>DESCRIPTION</b>	<b>AVAILABILITY</b>
ASI-265	CBM-100	7012364-902	BUS MONITOR (WR-800 MAN FIG 901)	ASI DEALER
ASI-266	HWX-800	T334714	PRIMUS-800 RADAR TEST PANEL	ASI DEALER
ASI-266-2	HWX-700	7015455-901	PRIMUS-700/701 RADAR TEST PANEL	ASI DEALER
ASI-266-2A	HWX-700A	T337333	PRIMUS-700/700A/701/701A RADAR TEST PANEL (REPLACES ASI-266-2)	ASI DEALER
ASI-266-3	ACI-100	7016068-901	ACCESS INTERFACE FOR PRIMUS-700/701	ASI DEALER
ASI-266-4		7010571-901	MODULATOR DUMMY LOAD FOR PRIMUS RADAR	ASI DEALER
ASI-266-5		7015904-904	DIGITAL PROTRACTOR ADAPTER	ASI DEALER
ASI-267	GSM-100	7010568-901	GYRO SIMULATOR	ASI DEALER
ASI-268			TARGET SIMULATOR (PRIMUS-450/650/870)	ASI DEALER
ASI-269			TWR-850 RADAR TEST PANEL (REPLACED BY ASI-CTS-841)	ASI DEALER
ASI-269-1A		135-3603-026	DIAL INDICATOR MOUNTING POST (3 INCH)	COLLINS
ASI-269-1B		135-3603-027	DIAL INDICATOR MOUNTING POST (6 INCH)	COLLINS
ASI-269-2			TILT ANGLE MOUNTING FIXTURE	ASI DEALER
ASI-269-3			TILT/SCAN ANGLE MEASUREMENT ADAPTER	ASI DEALER
ASI-269-4		827-2780-001	TILT SECTOR GEAR PULLER	COLLINS
ASI-269-5A		827-2781-001	SCAN SECTOR GEAR PULLER	COLLINS
ASI-269-5B		626-4247-001	SCAN SECTOR GEAR PULLER	COLLINS
ASI-269-6			FLUKE 9010A TEST ADAPTER	ASI DEALER
ASI-269-7			TILT TORSION SPRING INSTALLATION/REMOVALTOOL	ASI DEALER
ASI-269-8		815-2274-001	BUFFER ADAPTER (W/2 CABLES)	COLLINS
ASI-269-9			RF TEST CABLE SET (INCLUDES CABLES: A,A,A,B,D,E,F,G,H,J,K,L,L,M,N,P,Q,R,S)	ASI DEALER
ASI-270-1		MI-592189	AVQ-30 RADAR R-T MODULE TEST PANEL	ASI DEALER
ASI-270-2		MI-592188	AVQ-30 RADAR ANTENNA TEST PANEL	ASI DEALER
ASI-270-3		MI-592187	AVQ-30 RADAR INDICATOR TEST PANEL	ASI DEALER
ASI-270-4		MI-592186	AVQ-30 RADAR R-T TEST PANEL	ASI DEALER
ASI-271		828-2551-002	INCIRCUIT PROGRAMMER	COLLINS
ASI-272			CTC-429-P1 BREAKOUT BOX (THIS HAS BEEN REPLACED BY THE ASI-402)	ASI DEALER
ASI-273		TSH-4D	FLITEFONE TEST SET	ASI DEALER
ASI-274		WB-1	FLITEFONE AUXILIARY BELL ASSEMBLY	ASI DEALER
ASI-275-1		T307976	DG-401 PRELIMINARY AND C14FINAL TEST FIXTURE	ASI DEALER
ASI-275-2		T307977	DG-401 CALIBRATION FIXTURE	ASI DEALER
ASI-276	477N-1	522-1149-000	STEERING COMPUTER TEST PANEL	ASI DEALER
ASI-276A	477N-1A	522-3328-000	STEERING COMPUTER TEST PANEL	ASI DEALER
ASI-277			TYPE W MAGNETIC AMPLIFIER TEST PANEL (477N-1 MAN FIG 1003)	ASI DEALER
ASI-278	969W-1	622-3874-001	ADF ANTENNA TESTER	ASI DEALER
ASI-280			51R-10( ) / 51RV-4( ) CPU TEST SET (MAN FIG 911 - 912)	ASI DEALER
ASI-281			FPA-80 TEST PANEL	ASI DEALER
ASI-282	980L-1A	622-0846-001	UNIVERSAL FLIGHT CONTROL TEST PANEL MAIN FRAME	ASI DEALER
ASI-282-M1K			METER RETROFIT KIT FOR ASI-282/980L-1A	ASI DEALER
ASI-283			DME-40 TROUBLESHOOTING PROBE (MAN PG 5-47 FIG 8)	ASI DEALER
ASI-284			KFS-578A CONTROL TEST PANEL (KFS-578A MAN FIG 5-2)	ASI DEALER
ASI-285	477P-1A	522-3329-000	APPROACH HORIZON TEST SET (ALSO REPLACES 477P-1 CPN 522-1150-000)	ASI DEALER
ASI-286-1	CTS-82	622-4562-001	AUTOPILOT TEST SET (INCLUDES 10 CABLES, ASI-28-6A THRU ASI-28-6J)	ASI DEALER
ASI-286-2	CTS-82	622-4562-002	AUTOPILOT TEST SET (DOES NOT INCLUDE CABLES)	ASI DEALER
ASI-287	CT2542		PNEUMATIC SYSTEM CONTROLLER TEST PANEL	ASI DEALER
ASI-288	968A-1	622-3962-001	FLIGHT MODE CONTROL TEST PANEL	COLLINS
ASI-289-1	CTS-231	622-5188-001	OUTPUT MONITOR TEST PANEL	ASI DEALER
ASI-289-2	CTS-232	622-5189-001	MONITOR/NCS SIMULATOR TEST PANEL	ASI DEALER
ASI-291	968J-1	622-4369-001	AUDIO CONTROL TEST PANEL (FOR CPN 622-4149-001)	COLLINS
ASI-292	968W-1	622-4725-001	DME-40 TEST PANEL	ASI DEALER
ASI-293	968X-1	622-4726-001	639U-1 TEST PANEL	COLLINS
ASI-294-1	970D-2	622-3304-001	AIR DATA ELECTRONIC TEST SET	ASI DEALER
ASI-294-2	970D-2A	622-8624-001	AIR DATA ELECTRONIC TEST SET	ASI DEALER
ASI-296-1	971T-1	622-2640-001	FLIGHT PROFILE COMPARATOR TEST PANEL (WITH SYNCHRO GENERATOR)	ASI DEALER
ASI-296-2	971T-1	622-2640-002	FLIGHT PROFILE COMPARATOR TEST PANEL (WITHOUT SYNCHRO GENERATOR)	ASI DEALER
ASI-297	CTS-300	622-4946-001	GENERATOR TEST PANEL	COLLINS
ASI-298	CTS-301	622-5225-001	RADAR NAV TEST SET	ASI DEALER
ASI-299		828-8249-001	ALT-1000/-4000 /-55B TEST PANEL	ASI DEALER
ASI-299-1			ALT-50A/55B/860F-2 XMTR/MOD TEST FIXTURE	ASI DEALER
ASI-299-2		618-1673-002	ALT-50A/55B/860F-2 TRANSMITTER DUST COVER FIXTURE	COLLINS
ASI-300	973W-2	622-5058-001	ARC-182( ) R/T TEST SET	COLLINS
ASI-301	973W-3	622-6121-001	RADIO TEST SET	ASI DEALER
ASI-301-10	973W-10	822-1512-001	ARC-210 RADIO TEST SET	COLLINS
ASI-302	966B-1	622-5479-001	AMPLIFIER-PWR SPLY TEST SET	ASI DEALER
ASI-303	966B-2	622-5480-001	RECEIVER TEST SET	COLLINS
ASI-304	966B-3	622-5481-001	SYNTHESIZER TEST SET	COLLINS
ASI-305	966B-4	622-5482-001	CONTROL PROCESSOR TEST SET (TEST ADAPTERS ARE SOLD SEPERATE)	COLLINS
ASI-306	966B-6	622-5484-001	RADIO SET CONTROL TEST SET	ASI DEALER
ASI-307	966B-7	622-5485-001	RADIO SET CONTROL (HALF SIZE) TEST SET	COLLINS
ASI-308-1	ARM-165	623-5403-001	RADIO TEST SET	ASI DEALER

**AVAILABILITY:**

ASI DEALER: CONTACT ANY ASI DEALER FOR QUOTE  
 COLLINS: CONTACT ROCKWELL COLLINS FOR QUOTE  
 GABLES: CONTACT GABLES ENGINEERING FOR QUOTE  
 TELEPHONICS: CONTACT TELEPHONICS FOR QUOTE

**ASI SPECIALIZED TEST EQUIPMENT LIST**

**AVAILABILITY SUBJECT TO CHANGE WITHOUT NOTICE**

<u>ASI MN</u>	<u>EQUIV MN</u>	<u>EQUIV PN</u>	<u>DESCRIPTION</u>	<u>AVAILABILITY</u>
ASI-308-2	ARM-165A	622-2750-001	RADIO TEST SET	ASI DEALER
ASI-309		659-3488-001	1553 ADDRESS BOX	ASI DEALER
ASI-310	438K-2	622-5731-001	MAINTENANCE KIT FOR RT1272(V)2	ASI DEALER
ASI-310-2C	438K-2C	622-9663-001	MAINTENANCE KIT FOR RT1272D	ASI DEALER
ASI-311	TS-3488	623-5465-001	CONTROL TEST SET	ASI DEALER
ASI-312	TS-3487	623-5464-001	POWER AMPLIFIER/POWER SUPPLY TEST SET	ASI DEALER
ASI-313	MX-9626/ARM	623-5404-001	TRANSLATOR MODULE EXTENDER	ASI DEALER
ASI-314		647-8457-001	TEST INTERFACE ADAPTER	COLLINS
ASI-315	970T-1A	622-5672-001	A7 FILTER TEST SET	ASI DEALER
ASI-316	970T-2	622-1796-001	D/A SERVO MODULE TEST SET	ASI DEALER
ASI-316A	970T-2A	622-5673-001	D/A SERVO MODULE TEST SET	ASI DEALER
ASI-317	970T-3	622-1797-001	SYNTHESIZER TEST SET	ASI DEALER
ASI-317A	970T-3A	622-5674-001	SYNTHESIZER TEST SET	ASI DEALER
ASI-317B	970T-3B	622-6396-001	SYNTHESIZER TEST SET	COLLINS
ASI-317C	970T-3C	622-7201-001	SYNTHESIZER TEST SET	ASI DEALER
ASI-318B	970T-4B	622-6871-001	A3 RF RECEIVER TEST SET	COLLINS
ASI-319	970T-5	622-1799-001	AUDIO MODULE TEST SET	ASI DEALER
ASI-319A	970T-5A	622-5676-001	AUDIO MODULE TEST SET	ASI DEALER
ASI-320	970T-8	622-1812-001	DC-DC CONVERTER TEST SET	ASI DEALER
ASI-321A	969N-1A	622-5532-001	AUDIO TEST FIXTURE	ASI DEALER
ASI-321A-P1			ASI-321A (969N-1A) SHORTING PLUG P1 (INCLUDED WITH ASI-321A)	ASI DEALER
ASI-321A-P2			ASI-321A (969N-1A) SHORTING PLUG P2 (INCLUDED WITH ASI-321A)	ASI DEALER
ASI-321A-P3			ASI-321A (969N-1A) SHORTING PLUG P3 (INCLUDED WITH ASI-321A)	ASI DEALER
ASI-321A-P4			ASI-321A (969N-1A) 619 OHM AUDIO LOAD P4 (INCLUDED WITH ASI-321A)	ASI DEALER
ASI-321A-P5			ASI-321A (969N-1A) 619 OHM AUDIO LOAD P5 (INCLUDED WITH ASI-321A)	ASI DEALER
ASI-321A-P6			ASI-321A (969N-1A) 10K DATA LOAD P6 (INCLUDED WITH ASI-321A)	ASI DEALER
ASI-321A-P7			ASI-321A (969N-1A) 10K DATA LOAD P7 (INCLUDED WITH ASI-321A)	ASI DEALER
ASI-321B	969N-1B	622-5655-001	AUDIO TEST FIXTURE	ASI DEALER
ASI-321D	969N-1D	622-8014-001	AUDIO TEST FIXTURE (ALT MN: TS-4415/GRM)	ASI DEALER
ASI-322		687-8450-001	THIS ITEM HAS BEEN REPLACED BY THE ASI-225	ASI DEALER
ASI-323-1	966D-5	622-5635-001	RADIO SET TEST SET (OBSOLETE-REPLACED BY ASI-323-21 OR ASI-323-3)	COLLINS
ASI-323-2	966D-5A	622-7574-001	RADIO SET TEST SET (OBSOLETE-REPLACED BY ASI-323-21 OR ASI-323-3)	ASI DEALER
ASI-323-21	966D-5A	622-7574-002	RADIO SET TEST SET	ASI DEALER
ASI-323-3	966D-5B	622-9034-001	RADIO SET TEST SET	ASI DEALER
ASI-323-31		751-2239-001	ADAPTER A7 (INCLUDED WITH ASI-323-3)	COLLINS
ASI-323-4		647-7983-001	EXTENDER KIT FOR RADIO SET CONTROL (INCL WITH ASI-323-2/21-/3)	COLLINS
ASI-324	964R-2	822-0742-001	1553 ADDRESS BOX, INCLUDES CABLE	ASI DEALER
ASI-324-1	964R-3	639-3488-001	1553 ADDRESS BOX FOR VHF-186, INCLUDES CABLE	COLLINS
ASI-325			346B-3 TEST FIXTURE (MAN FIG 1002)	ASI DEALER
ASI-326			RTU-40X0 CONDUCTIVITY TEST AID (RTU-4000 MAN FIG 902)	ASI DEALER
ASI-327-1	977A-1	777-1356-001	TEST PANEL (SEE ASI-221-1 FOR EQUIVALENT TEST PANEL)	COLLINS
ASI-327-2	977B-1	777-1357-001	TEST PANEL (SEE ASI-221-2 FOR EQUIVALENT TEST PANEL)	COLLINS
ASI-327-3	977C-1	777-1358-001	TEST ADAPTER	COLLINS
ASI-327-4	977D-1	777-1359-001	TEST ADAPTER	COLLINS
ASI-328	980H-1	522-4380-001	COUPLER TEST SET	ASI DEALER
ASI-328-1	878L-15	522-4252-001	ANTENNA COUPLER CONTROL TESTER	ASI DEALER
ASI-328-2	878L-16	522-4253-001	ELECTRONIC CONTROL AMPLIFIER TESTER	ASI DEALER
ASI-328-3	878L-17	522-4254-001	DISCRIMINATOR TESTER	ASI DEALER
ASI-328-4		761-4599-001	POWER PANEL	ASI DEALER
ASI-329-1	172H-8	522-4514-001	ANTENNA SIMULATOR, LONG WIRE (115 VAC 400 Hz)	ASI DEALER
ASI-329-1A	172H-8	522-4514-002	ANTENNA SIMULATOR, LONG WIRE (115 VAC 60 Hz)	ASI DEALER
ASI-329-1B	DA-487/U	522-4514-001	ANTENNA SIMULATOR, LONG WIRE (115 VAC 400 Hz)	ASI DEALER
ASI-329-1C	172H-8A	642-2190-001	ANTENNA SIMULATOR, LONG WIRE (MODIFIED FOR CU-2041/AR)	ASI DEALER
ASI-329-2	172H-1	522-1708-000	DUMMY COMPOSITE ANTENNA	ASI DEALER
ASI-329-3	172H-18A	622-7148-001	ANTENNA SIMULATOR, SHUNT (SEE ASI-207-1 FOR FUNCTIONAL EQUIVALENT)	COLLINS
ASI-329-3-220	172H-18A	622-7148-001	ANTENNA SIMULATOR, SHUNT-220 VAC (SEE ASI-207-1-220 FOR FUNCTIONAL EQUIV)	COLLINS
ASI-329-31		652-2416-001	TEST RF FEEDLINE FOR CU-2314(V)1/ARC-190(V)	COLLINS
ASI-329-32		651-3262-001	TEST RF FEEDLINE FOR CU-2314(V)2/ARC-190(V)	COLLINS
ASI-329-33		651-3244-001	TEST RF FEEDLINE FOR CU-2314(V)3/ARC-190(V)	COLLINS
ASI-329-34		652-2419-001	TEST RF FEEDLINE FOR CU-2314(V)4/ARC-190(V)	COLLINS
ASI-329-4	DA-174/GRM-10	522-1248-004	ELECTRICAL DUMMY LOAD	ASI DEALER
ASI-329-5	DA-175/GRM-10	522-1249-004	ELECTRICAL DUMMY LOAD	ASI DEALER
ASI-329-6	DA-173/GRM-10	522-1247-002	ELECTRICAL DUMMY LOAD (BIRD 694)	ASI DEALER
ASI-329-7	172H-21	622-1380-001	ANTENNA SIMULATOR, 16 FT WHIP (TIED DOWN)	ASI DEALER
ASI-329-8	172H-21A	622-1732-001	ANTENNA SIMULATOR, 16 FT WHIP (STRAIGHT UP)	ASI DEALER
ASI-329-8A	172H-21A	622-1732-002	ANTENNA SIMULATOR, 16 FT WHIP (STRAIGHT UP)	ASI DEALER
ASI-329-9	172H-17	777-1864-001	ELECTRICAL DUMMY LOAD	ASI DEALER
ASI-329-10	172H-10	522-4601-001	ELECTRICAL DUMMY LOAD	ASI DEALER
ASI-329-11	172H-22	622-1381-001	ANTENNA SIMULATOR, 32 FT WHIP	ASI DEALER
ASI-329-12	172H-12	777-1455-001	SHUNT DUMMY ANTENNA	COLLINS

**AVAILABILITY:**

ASI DEALER: CONTACT ANY ASI DEALER FOR QUOTE  
 COLLINS: CONTACT ROCKWELL COLLINS FOR QUOTE  
 GABLES: CONTACT GABLES ENGINEERING FOR QUOTE  
 TELEPHONICS: CONTACT TELEPHONICS FOR QUOTE

**ASI SPECIALIZED TEST EQUIPMENT LIST**

**AVAILABILITY SUBJECT TO CHANGE WITHOUT NOTICE**

<b>ASI MN</b>	<b>EQUIV MN</b>	<b>EQUIV PN</b>	<b>DESCRIPTION</b>	<b>AVAILABILITY</b>
ASI-329-13	172H-26	622-5605-001	TAILCAP ANTENNA SIMULATOR (THIS WAS ORIGINALLY NUMBERED ASI-351)	ASI DEALER
ASI-329-14	172H-27	4S61700-101B	ANTENNA SIMULATOR FOR CU-2275(V)3	COLLINS
ASI-329-141		652-2440-001	TEST RF FEEDLINE FOR CU-2275(V)3	COLLINS
ASI-330		638-0501-001	SPIN TABLE INTERLOCK	ASI DEALER
ASI-331			BREAKOUT BOX (DEHAVILLAND SPECIAL ORDER)	ASI DEALER
ASI-332	UG2559AB		RADAR ALTIMETER SYSTEM TESTER (TESTS YG-7500 / 7600)	ASI DEALER
ASI-333	UG2926AA		CALIBRATION UNIT PANEL (TESTS HG7502BC02/03/04)	ASI DEALER
ASI-334			HCP-74/74C TEST SET (MAN FIG 5-5 - 5-7)	ASI DEALER
ASI-335		949F859-1	GENERATOR TESTER	ASI DEALER
ASI-336		23-23-00-0054	SELCAL DECODER TESTER	ASI DEALER
ASI-337			KDI-873B TEST FIXTURE	ASI DEALER
ASI-338-1	CTS-200	622-4281-001	HF TEST INTERCONNECT TEST SET	ASI DEALER
ASI-338-2	CTS-201	622-4282-001	HF ANTENNA SIMULATOR (16FT)	ASI DEALER
ASI-338-3	CTS-202	622-4283-001	HF TEST SET (AAC/PWR/TCR)	ASI DEALER
ASI-338-4	CTS-203	622-4285-001	HF TEST SET (AAC-200 CKT CARD)	ASI DEALER
ASI-338-5	CTS-204	622-5403-001	HF TEST SET (HF-220)	ASI DEALER
ASI-338-6	PFP-200	622-3839-001	PROM FREQUENCY PROGRAMMER FOR HF-200/220	COLLINS
ASI-338-7		628-8554-001	DSA-220 TEST SET	COLLINS
ASI-338-8		628-8557-001	LWA-200 LONG WIRE ADAPTER TEST SET	COLLINS
ASI-339	980H-6	777-1534-001	ANTENNA COUPLER TEST SET	COLLINS
ASI-339-1	878L-19A	772-5291-001	DISCRIMINATOR TEST PANEL	ASI DEALER
ASI-339-2	878L-28	777-1856-001	ELECTRONIC CONTROL AMPLIFIER TEST PANEL	COLLINS
ASI-339-3	878L-29	777-1857-001	COUPLER CONTROL TEST PANEL	COLLINS
ASI-339-4	878L-30	777-1858-001	COUPLER CIRCUIT CARD TEST PANEL	COLLINS
ASI-339-5		792-0070-001	POWER PANEL	COLLINS
ASI-340-1	980H-2	522-4541-001	ANTENNA TESTER / SIMULATOR	ASI DEALER
ASI-340-2	890K-1	763-3346-001	ACCESSORY KIT	COLLINS
ASI-340-3	890K-2	772-5480-001	ACCESSORY KIT	COLLINS
ASI-340-4			TEST SET FOR ASI-340-1 OR 980H-2 (437R-1 / 980H-2 MAN FIG 7-5)	ASI DEALER
ASI-343			FD-112A/B/C/V TEST PANEL	ASI DEALER
ASI-344		647-9262-001	DAU-850 TEST ADAPTER (FOR CTS-2000)	ASI DEALER
ASI-345	578F-1	522-1977-000	334C-3( ) SERVO TEST PANEL (334C-3 MAN FIG 1003-1004)	ASI DEALER
ASI-346	980H-3	522-4748-001	ANTENNA COUPLER TEST SET	ASI DEALER
ASI-346-1	878L-1	522-3022-000	AMPLIFIER TEST PANEL	ASI DEALER
ASI-346-2	878L-2	522-3271-000	RELAY CONTROL TEST PANEL	ASI DEALER
ASI-346-3	878L-3	522-3272-000	DISCRIMINATOR TEST PANEL	ASI DEALER
ASI-346-4		772-6871-001	POWER PANEL	ASI DEALER
ASI-347			628T-2/2A A5 ALIGNMENT FIXTURE (MAN FIG 911) / REPLACED BY ASI-70-04P	ASI DEALER
ASI-348-1			SVO-65 OPTIONAL TEST PANEL (MAN FIG 5-10 - 5-11)	ASI DEALER
ASI-348-2			SVT-1000( ) ADAPTER PANEL	ASI DEALER
ASI-349-1	TR5289-1	2488-1/2482-1	AVTECH 5088-1/5289-1/5082-1 TEST PANEL	ASI DEALER
ASI-349-2	TR5264-1		AVTECH 5264-1 TEST PANEL	ASI DEALER
ASI-349-3	TR5260-40-9	2361-1	AVTECH 5261-1 / 5260-1 STATION CARD TEST PANEL	ASI DEALER
ASI-349-4	TR5260-1		AVTECH 5260-1 TEST PANEL	ASI DEALER
ASI-349-5		2020-1	AVTECH TEST SET FOR 5141 / 5144 / 5145 CONTROL PANELS	ASI DEALER
ASI-349-50		2020-1-1	AVTECH 5145-1-XX SELCAL TESTER	ASI DEALER
ASI-349-51		2020-1-2	AVTECH 5145-1-XX SELCAL TESTER	ASI DEALER
ASI-350-1		T321746	COMPARISON FLUX VALVE TEST FIXTURE	ASI DEALER
ASI-350-2			HELMHOLTZ COIL TEST STAND, DET TURNTABLE, MOUNTING BASE, VIBRATOR	ASI DEALER
ASI-351	172H-26	622-5605-001	TAILCAP ANTENNA SIMULATOR (THIS UNIT HAS BEEN RE-NUMBERED TO ASI-329-13)	ASI DEALER
ASI-352			MOTOR TESTER	ASI DEALER
ASI-354		638-0239-001	AHC-85 DUAL MULTI SENSOR TEST PANEL	ASI DEALER
ASI-354-1	ASI-40Y-76-1		APC-65/FCC-65 SERVO EMULATOR	ASI DEALER
ASI-354-2	ASI-40Y-76-2		APC-65/FCC-65 SERVO ANGLE INDICATOR	ASI DEALER
ASI-355		638-0722-001	ANALOG BURN-IN INTERFACE PANNEL (VHF-21/22/422)	ASI DEALER
ASI-356-1		830-1212-001	CIU-906 TEST PANEL (REQUIRES ASI-356-2 FOR OPERATION)	ASI DEALER
ASI-356-2		830-3915-001	CIU-906 MOUNTING TRAY	ASI DEALER
ASI-357			TEST PANEL FOR KN-62/62A/63/64/KDM-706/KTU-709/KDI-572/573/574/KPI-553A	ASI DEALER
ASI-357-2			KPI-553 READOUT TEST PANEL	ASI DEALER
ASI-357-3			KDI-573B BENCH TESTER (MAN FIG 5-1, 5-2)	ASI DEALER
ASI-358	969Y-1	622-5359-001	TEST PANEL FOR F-15 HSI / 331D-7 (622-0290-004)	ASI DEALER
ASI-359-1	TA-500	190-3006-01	TEST PANEL: 5ATI	ASI DEALER
ASI-360			RDR SYSTEM TEST PANEL	ASI DEALER
ASI-361		696-4825-00	KVG-350 TEST PANEL (MAN FIG 5-2)	ASI DEALER
ASI-362		696-05641-0001	KAD-280 TEST SET (MAN FIG 5-1 - 5-3)	ASI DEALER
ASI-363			TDR-950/950L TEST PANEL WITH TEST COVER (MAN FIG 5-6, 5-7)	ASI DEALER
ASI-364		830-2513-002	STANDBY INDICATOR PS TEST FIXTURE (FPI-9330/9331)	ASI DEALER
ASI-365			RTA-8XX RECEIVER/IF TEST FIXTURE	ASI DEALER
ASI-365-1			TEST ADAPTER FOR RECEIVER ASSEMBLY 653-2349-001	ASI DEALER
ASI-365-2			SECOND IF TEST SET	ASI DEALER

**AVAILABILITY:**

ASI DEALER: CONTACT ANY ASI DEALER FOR QUOTE  
 COLLINS: CONTACT ROCKWELL COLLINS FOR QUOTE  
 GABLES: CONTACT GABLES ENGINEERING FOR QUOTE  
 TELEPHONICS: CONTACT TELEPHONICS FOR QUOTE

**ASI SPECIALIZED TEST EQUIPMENT LIST**

**AVAILABILITY SUBJECT TO CHANGE WITHOUT NOTICE**

<b>ASI MN</b>	<b>EQUIV MN</b>	<b>EQUIV PN</b>	<b>DESCRIPTION</b>	<b>AVAILABILITY</b>
ASI-366			642C-1/914F-1 TEST PANEL	ASI DEALER
ASI-367-1	878L-13	522-3971-001	RELAY CONTROL MODULE TEST PANEL	ASI DEALER
ASI-367-2	878L-18	522-4409-001	SERVO AMPLIFIER MODULE TEST PANEL	ASI DEALER
ASI-367-3	878L-19	522-4410-001	DISCRIMINATOR MODULE TEST PANEL	ASI DEALER
ASI-368			618M-2/3/4 TEST PANEL	ASI DEALER
ASI-369	F231-01		TEST FIXTURE FOR PACIFIC ELECTRO DYNAMICS 231-2	ASI DEALER
ASI-370		641-6468-001	ANT-462 T/L TEST PANEL	ASI DEALER
ASI-371			TURBULENCE ADAPTER	ASI DEALER
ASI-372			332E-5 GYRO TEST PANEL	ASI DEALER
ASI-373		638-0525-002	VHF-20/21/22/422 TEST PANEL	ASI DEALER
ASI-374-2			VHF-21/22/422 PS/MOD TEST FIXTURE (VCO MODULE NOT INCL)	ASI DEALER
ASI-375-1	970G-2	622-7345-001	ADF TEST PANEL	ASI DEALER
ASI-375-2	970G-2	622-7345-002	ADF TEST PANEL (WITH 1553 BUS ADAPTER)	ASI DEALER
ASI-376-1	966Y-2	622-6926-001	VOR/ILS TEST PANEL	ASI DEALER
ASI-376-2	966Y-2	622-6926-002	VOR/ILS TEST PANEL (WITH 1553 BUS ADAPTER)	ASI DEALER
ASI-376-3	966Y-2A	622-8325-001	VOR/ILS TEST PANEL (WITH AM-X ADAPTER)	ASI DEALER
ASI-376-4	966Y-2	622-6926-003	VOR/ILS TEST PANEL (WITH 1553 BUS ADAPTER AND AM-X ADAPTER)	ASI DEALER
ASI-376-5		676-6715-001	AM-X ADAPTER	ASI DEALER
ASI-377-1	978F-4A	522-3427-001	AMPLIFIER TEST PANEL FOR FD-108/109	ASI DEALER
ASI-377-2	978F-9A	522-4085-001	AMPLIFIER TEST ADAPTER PANEL FOR FD-109	COLLINS
ASI-377-3	978F-5R	522-3501-000	STEERING COMPUTER TEST PANEL FOR FD-109	ASI DEALER
ASI-377-4	978F-10R	522-4086-001	STEERING COMPUTER TEST ADAPTER FOR FD-109	ASI DEALER
ASI-377-5	978F-6P	522-3426-000	STEERING COMPUTER TEST PANEL FOR FD-109	ASI DEALER
ASI-377-6	978F-11P	522-4113-001	STEERING COMPUTER TEST ADAPTER FOR FD-109	ASI DEALER
ASI-377-7	978F-3M	522-3423-000	MODE CONTROL TEST PANEL FOR 614E(-)	ASI DEALER
ASI-377-8	978F-8W	522-3701-001	COMPARATOR WARNING MONITOR TEST PANEL	ASI DEALER
ASI-378-1			EXCITER ASSY TEST ADAPTER FOR 628-9744-002	ASI DEALER
ASI-378-2			EXCITER ASSY TEST ADAPTER FOR 628-9744-001	ASI DEALER
ASI-378-3			TURBULENCE TEST ADAPTER FOR DSP/CPU CARD 646-7991-011	ASI DEALER
ASI-378-4			TURBULENCE TEST ADAPTER FOR DSP/CPU CARD 646-7991-012	ASI DEALER
ASI-378-5			TURBULENCE TEST ADAPTER FOR DSP/CPU CARD 646-7991-003 THRU -010	ASI DEALER
ASI-378-6			RTA FLIGHT LINE TEST FIXTURE	ASI DEALER
ASI-378-7			WXP-840/850 FLIGHT LINE TEST FIXTURE	ASI DEALER
ASI-378-8		685-6238-001	WXP-840/850 TEST ADAPTER	COLLINS
ASI-378-9	850W		FREQUENCY PLAN ADAPTER (USED WITH ASI-CTS-841)	ASI DEALER
ASI-379		628-8735-001	WXP TEST FIXTURE (WXP-4120/4220 MAN FIG 901)	ASI DEALER
ASI-380		1162291-100	DPCU UNIT TESTER	ASI DEALER
ASI-381	CTS-61	622-6317-001	AIR DATA SENSOR TEST SET	ASI DEALER
ASI-382		641-6388-900	VIR-32/432 INTERFACE PANEL	ASI DEALER
ASI-383			ATC-1400A/ARINC DME INTERROGATOR CTL UNIT (ATC-1400A MAN FIG 3)	ASI DEALER
ASI-384			RDMI-743/RMI-733 SLOW SLEW TESTER (REPLACED BY ASI-502 WITH ASI-502-0019)	ASI DEALER
ASI-385			APR-4000 PWR SUPPLY TEST FIXTURE	ASI DEALER
ASI-386		641-5834-003	AHC-85 BURN-IN PANEL	ASI DEALER
ASI-387			CHP-85/86 TEST FIXTURE (CHP-85/86 MAN FIG 902-904)	ASI DEALER
ASI-388			FCC-85/86 TEST AID FIXTURE (FCC-85/86 MAN FIG 904)	ASI DEALER
ASI-389			FCC-85/86 SERVO PANEL (FCC-85/86 MAN FIG 905)	ASI DEALER
ASI-390			AHC-85 STRAPPING SWITCH ASSY (AHC-85 MAN FIG 904)	ASI DEALER
ASI-391-1			AHC-85 INTEGRATION INTERFACE PANEL (AHC-85 MAN FIG 905)	ASI DEALER
ASI-391-2			AHC-85 INTEGRATION CABLE ADAPTER (AHC-85 MAN FIG 906)	ASI DEALER
ASI-392			MFD-85 DATA ANALYZER TEST SET (MFD-85 MAN FIG 903-905)	ASI DEALER
ASI-393-1			MFD-85 CRT LINEARITY GAGE (MFD-85 MAN FIG 901)	ASI DEALER
ASI-393-2		634-1708-003	MFD-85( ) BEZEL ADAPTER (MFD-85 MAN FIG 902)	ASI DEALER
ASI-393-3		634-3819-001	EFD-85 CRT LINEARITY GAGE (EFD-85 MAN FIG 901)	COLLINS
ASI-393-4		634-3820-001	EFD-86 GRT LINEARITY GAGE (EFD-86 MAN FIG 902)	COLLINS
ASI-393-5		634-1708-001	EFD-85 BEZEL ADAPTER (EFD-85 MAN FIG 903)	ASI DEALER
ASI-393-6		634-1708-002	EFD-86 BEZEL ADAPTER (EFD-86 MAN FIG 904)	ASI DEALER
ASI-393-7			EFD-84 LINEARITY GAUGE	ASI DEALER
ASI-393-8		827-2952-001	EFD-84 LINEARITY GAUGE	COLLINS
ASI-393-9		634-1708-010	EFD-84 BEZEL ADAPTER TEMPLATE	ASI DEALER
ASI-393-10		634-1708-011	EFD-84 BEZEL ADAPTER TEMPLATE	ASI DEALER
ASI-394			HPU-74 ANALOG MULTIPLEXER TEST FIXTURE (HPU-74 MAN FIG 5-3, 5-4)	ASI DEALER
ASI-395			CTS-74 TEST FIXTURE (CTS-74 MAN FIG 5-1, 5-2)	ASI DEALER
ASI-396			DCP-85 TEST BOX W/7 CABLES (DCP-85 MAN FIG 901-902)	ASI DEALER
ASI-397			TCN-40 (BRG-40/DME-40) TEST PANEL	ASI DEALER
ASI-398			346B-3 TEST PANEL (346B-3 MAN FIG 1002)	ASI DEALER
ASI-399	7012-1403-900	T9-1-14-0039	DME 2-PULSE GENERATOR	ASI DEALER
ASI-400-1			ASI-2000 WORKSTATION (4 ASI-10-400X CABLES INCLUDED)	ASI DEALER
ASI-401-1			PRO LINE / PC INTERFACE PANEL WITH 7 CABLES FOR GENERAL INSTALLATION	ASI DEALER
ASI-401-1CTC			ASI-401-1 WITH CTC-429 CARD (SOFTWARE NOT INCLUDED)	ASI DEALER
ASI-401-2			PRO LINE / PC INTERFACE PANEL WITH CUSTOM CABLES FOR SPECIAL INSTAL.	ASI DEALER

**AVAILABILITY:**

ASI DEALER: CONTACT ANY ASI DEALER FOR QUOTE  
 COLLINS: CONTACT ROCKWELL COLLINS FOR QUOTE  
 GABLES: CONTACT GABLES ENGINEERING FOR QUOTE  
 TELEPHONICS: CONTACT TELEPHONICS FOR QUOTE

**ASI SPECIALIZED TEST EQUIPMENT LIST**

**AVAILABILITY SUBJECT TO CHANGE WITHOUT NOTICE**

ASI MN	EQUIV MN	EQUIV PN	DESCRIPTION	AVAILABILITY
ASI-401-2CTC			ASI-401-2 WITH CTC-429 CARD (SOFTWARE NOT INCLUDED)	ASI DEALER
ASI-401-3			PRO LINE / PC INTERFACE PANEL WITH 7 CABLES (6 FT) FOR GEN INSTALL	ASI DEALER
ASI-401-3CTC			ASI-401-3 WITH CTC-429 CARD (SOFTWARE NOT INCLUDED)	ASI DEALER
ASI-401-ISA			PRO LINE / PC INTERFACE CARD FOR ISA COMPUTER (SOFTWARE NOT INLCUDED)	ASI DEALER
ASI-402		638-0199-001	CTC-429 SERIAL LOOPBACK POD (CTC-429 MAN FIGURE 5-3)	ASI DEALER
ASI-403-1	972S-5	622-7122-001	SVO SERVO TEST PANEL FOR SVO-75/85	ASI DEALER
ASI-403-2	972S-5	622-7122-002	SVO SERVO TEST PANEL FOR SVO-1000	ASI DEALER
ASI-404-1		676-3923-001	BCA SERVO TEST SET FOR BCA-770	COLLINS
ASI-405	969L-1	635-7420-001	914G-8/9/11 TEST PANEL	ASI DEALER
ASI-406			147B-2 TEST PANEL	ASI DEALER
ASI-407-1		T307702-4	POWER SUPPLY AND READOUT	ASI DEALER
ASI-407-2		T321272-901	API LATCHING FIXTURE	ASI DEALER
ASI-408		T322861	C-14D BASE TEST FIXTURE	ASI DEALER
ASI-409		T322780	C-14 AMPLIFIER/SYNCHRONIZER TEST FIXTURE	ASI DEALER
ASI-410		T307967	C-14 FLUX VALVE HEADING SIMULATOR	ASI DEALER
ASI-411-1		T322695	VG-401 TEST FIXTURE	ASI DEALER
ASI-411-2		T322880	TARSYN-H / VG-14H BASE TEST FIXTURE	ASI DEALER
ASI-412	CTS-64	622-6459-001	GYRO SYSTEM TEST PANEL	ASI DEALER
ASI-412-1		647-6750-001	TEST FIXTURE: BED OF NAILS (P/O ASI-412)	ASI DEALER
ASI-412-2			DGS-65 CUSTOMER ACCEPTANCE TEST SET (DGS-65 MAN FIG 5-13 - 5-15)	ASI DEALER
ASI-413-1	RIT-32A	2070809-3201	ILS RECEIVER TEST PANEL	ASI DEALER
ASI-413-2	RIG-32A	2070776-3201	ILS AUDIO GENERATOR	ASI DEALER
ASI-414			699Z-1 TEST FIXTURE (699Z-1 MAN FIG 2 IN MAINTENANCE SECTION)	ASI DEALER
ASI-415-1	970D-1A	622-5811-001	AIR DATA TEST PANEL WITH 6 EXTENDER CABLES	ASI DEALER
ASI-415-2	970D-1A	622-5811-002	AIR DATA TEST PANEL WITHOUT 6 EXTENDER CABLES	ASI DEALER
ASI-415-3	970D-3	622-5817-001	VERTICAL NAV TEST SET	COLLINS
ASI-416			DME-40/339F-12/IND-40 TEST FIXTURE (DME-40-339F-12/12( ) MANUAL FIGURE 5-6)	ASI DEALER
ASI-417-1	CTS-855	622-6457-011	ELETRONIC FLIGHT DISPLAY SYSTEM TEST SET WITH 3 CABLES (REQUIRES ASI-418)	ASI DEALER
ASI-417-2	CTS-855	622-6457-012	ELETRONIC FLIGHT DISPLAY SYSTEM TEST SET WITHOUT CABLES (REQ ASI-418)	ASI DEALER
ASI-418	CTS-858	622-7321-001	EFD/MFD GAIN POSITION CALIBRATOR TEST SET	ASI DEALER
ASI-419		641-5955-001	AHC-85 A7 TEST FIXTURE	ASI DEALER
ASI-420-1	RNT-34A	2041341-3401	RNA-34 ADAPTER PANEL	ASI DEALER
ASI-420-2	ADT-34AF	3614307-3401	RNA-34AF ADAPTER PANEL	ASI DEALER
ASI-422	CPT-83A	2041065-8301	GROUND PROXIMITY WARNING STSTEM TEST PANEL	ASI DEALER
ASI-423-1	IUT-1SB	3614367-0101	AUXILIARY INTERFACE UNIT TEST PANEL	ASI DEALER
ASI-423-2	IUT-1MB	3614662-0101	CONTROL TEST PANEL	ASI DEALER
ASI-424-1	RVT-33A	2070811-3301	VOR RECEIVER TEST PANEL	ASI DEALER
ASI-424-2	RVG-33A	2070810-3301	VOR AUDIO GENERATOR	ASI DEALER
ASI-425	RTT-41A	2037676-0501	TRANSCEIVER TEST PANEL FOR RTA-41A/42A/43A/83A, KTR-9100A	ASI DEALER
ASI-426	RCT-1500A	3614129-1501	RDR-1500 ( ) RADAR SYSTEM TEST PANEL (W/10 CABLES)	TELEPHONICS
ASI-427	678Z-1	548-8001-005	FUNCTION TEST SET FOR 618T-1/2/3	ASI DEALER
ASI-428-1	002-0518-00	696-4096-00	TEST PANEL FOR KPI-552/552B AND KPI-553A/553B	ASI DEALER
ASI-428-2		696-6257-00	TEST SET FOR KA-133 / KI-250 / KRA-10/10A	ASI DEALER
ASI-429-1			ADI-84 TEST ADAPTER PANEL W/2 CABLES	ASI DEALER
ASI-429-2			ADI-84 BREAKOUT BOX	ASI DEALER
ASI-430	967N-1	622-5379-001	ANTENNA COUPLER TEST SET	COLLINS
ASI-431	972S-4	622-3211-001	SERVO TEST SET FOR 334C-12H / SVO-830	ASI DEALER
ASI-450		T307951	UNIVERSAL POINTER/FLAG TEST FIXTURE	ASI DEALER
ASI-451-1		T307962	UNIVERSAL INSTRUMENT SERVO TEST FIXTURE	ASI DEALER
ASI-451-2		T307962-425	FUNCTION TEST SET FOR C6	ASI DEALER
ASI-453		T307520-201	SERVO AMPLIFIER TEST FIXTURE	ASI DEALER
ASI-454-1		T307527-201	CONTROL PANEL TEST FIXTURE	ASI DEALER
ASI-454-2		T307527-202	CONTROL PANEL TEST FIXTURE	ASI DEALER
ASI-455		T307531-201	YAW SYNCHRONIZER TEST FIXTURE	ASI DEALER
ASI-456		T307533-201	AIR DATA SENSOR TEST FIXTURE	ASI DEALER
ASI-457		T307534-201	ALTITUDE SIGNAL COUPLER TEST FIXTURE	ASI DEALER
ASI-458-1		T307535-201	PITCH COMPUTER TEST FIXTURE	ASI DEALER
ASI-458-2		T307535-202	PITCH COMPUTER TEST FIXTURE	ASI DEALER
ASI-458-3		T307535-300	PITCH COMPUTER TEST ADAPTER	ASI DEALER
ASI-458-4		T307535-310	PITCH COMPUTER TEST ADAPTER	ASI DEALER
ASI-459-1		T307536-201	LATERAL PATH COUPLER TEST FIXTURE	ASI DEALER
ASI-459-2		T307536-202	LATERAL PATH COUPLER TEST FIXTURE	ASI DEALER
ASI-460-1		T307545-201	PITCH CONTROL CHANNEL TEST FIXTURE	ASI DEALER
ASI-460-2		T307545-202	PITCH CONTROL CHANNEL TEST FIXTURE	ASI DEALER
ASI-460-3		T307545-401	PITCH CONTROL CHANNEL ADAPTER	ASI DEALER
ASI-461-1		T307547-201	ROLL CONTROL CHANNEL TEST FIXTURE	ASI DEALER
ASI-461-2		T307547-202	ROLL CONTROL CHANNEL TEST FIXTURE	ASI DEALER
ASI-461-3		T307547-401	ROLL CONTROL CHANNEL ADAPTER	ASI DEALER
ASI-462		T307550-201	POSITION SENSOR TEST FIXTURE	ASI DEALER
ASI-463-1		T307554-201	YAW DAMPER COUPLER TEST FIXTURE	ASI DEALER

**AVAILABILITY:**

ASI DEALER: CONTACT ANY ASI DEALER FOR QUOTE

COLLINS: CONTACT ROCKWELL COLLINS FOR QUOTE

GABLES: CONTACT GABLES ENGINEERING FOR QUOTE

TELEPHONICS: CONTACT TELEPHONICS FOR QUOTE

**ASI SPECIALIZED TEST EQUIPMENT LIST**

**AVAILABILITY SUBJECT TO CHANGE WITHOUT NOTICE**

<b>ASI MN</b>	<b>EQUIV MN</b>	<b>EQUIV PN</b>	<b>DESCRIPTION</b>	<b>AVAILABILITY</b>
ASI-463-2		T307554-202	YAW DAMPER COUPLER TEST FIXTURE	ASI DEALER
ASI-463-3		T307554-401	YAW DAMPER COUPLER ADAPTER	ASI DEALER
ASI-464-1		T307555-201	TRIM COUPLER TEST FIXTURE	ASI DEALER
ASI-464-2		T307555-202	TRIM COUPLER TEST FIXTURE	ASI DEALER
ASI-465		T307563-201	HEADING SYNCHRONIZER TEST FIXTURE	ASI DEALER
ASI-466-1		T307571-201	VERTICAL PATH COUPLER TEST FIXTURE	ASI DEALER
ASI-466-2		T307571-202	VERTICAL PATH COUPLER TEST FIXTURE	ASI DEALER
ASI-467-1		T307573-201	ROLL COMPUTER TEST FIXTURE	ASI DEALER
ASI-467-2		T307573-202	ROLL COMPUTER TEST FIXTURE	ASI DEALER
ASI-467-102-002	W1	467-102-002	CABLE, GTF-6 INPUT POWER	ASI DEALER
ASI-467-114-002	W2	467-114-002	CABLE, GTF-6 TEST LEAD	ASI DEALER
ASI-467-118-002	W3	467-118-002	CABLE, GTF-6 UNSH EXTENSION	ASI DEALER
ASI-467-137-001	W4	467-137-001	CABLE, GTF-6 COAX	ASI DEALER
ASI-467-117-002	W5	467-117-002	CABLE, GTF-6 COMP/COAX	ASI DEALER
ASI-467-138-001	W6	467-138-001	CABLE, GTF-6 TEST LEAD	ASI DEALER
ASI-467-139-001	W7	467-139-001	CABLE, GTF-6 TEST LEAD	ASI DEALER
ASI-467-147-001	W8	467-147-001	CABLE, GTF-6 COAX	ASI DEALER
ASI-467-119-002	W9	467-119-002	CABLE, GTF-6 COAX	ASI DEALER
ASI-468		T307574-201	Q SENSOR TEST FIXTURE	ASI DEALER
ASI-470		T307724-201	VERTICAL SPEED PITCH CONTROL TEST FIXTURE	ASI DEALER
ASI-471		T307846-902	VERTICAL GYRO TEST FIXTURE	ASI DEALER
ASI-472		T307875	FAILURE WARNING MONITOR TEST FIXTURE	ASI DEALER
ASI-473		T307950	RATE OF TURN RACK TEST FIXTURE	ASI DEALER
ASI-474-1		T321019-201	CONTROL PANEL TEST FIXTURE	ASI DEALER
ASI-474-2		T321019-202	CONTROL PANEL TEST FIXTURE	ASI DEALER
ASI-474-3		T321019-301	TEST ADAPTER PANEL	ASI DEALER
ASI-474-4		T321019-401	TEST ADAPTER PANEL	ASI DEALER
ASI-474-5		T321019-404	TEST ADAPTER PANEL	ASI DEALER
ASI-474-6		T321019-405	TEST ADAPTER PANEL	ASI DEALER
ASI-475		T321116-201	PITCH CONTROL CHANNEL TEST FIXTURE	ASI DEALER
ASI-476		T321121-201	ROLL CONTROL CHANNEL TEST FIXTURE	ASI DEALER
ASI-477		T321241-201	MACH TRIM COUPLER TEST FIXTURE	ASI DEALER
ASI-478		T321352	AUTOMATIC STABILIZER TRIM UNIT TEST FIXTURE	ASI DEALER
ASI-479		T321356	VG-321 TEST FIXTURE SET (INCLUDES ASI-479-1/-2/-3)	ASI DEALER
ASI-479-1		T321356-1	UNIVERSAL COUNTER MODIFIED FOR USE WITH VG-321 TEST FIXTURE (P/O ASI-479)	ASI DEALER
ASI-479-2		T321356-2	VG-321 TEST FIXTURE (P/O ASI-479)	ASI DEALER
ASI-479-3	W5	T321356-3	FREQ MONITOR PU CABLE FOR VG-321 TEST FIXTURE (P/O ASI-479)	ASI DEALER
ASI-480		T321372	MONITOR AND LOGIC UNIT TEST FIXTURE	ASI DEALER
ASI-481		T321670	CONTROLLER TEST FIXTURE WITH 10 CABLES	ASI DEALER
ASI-482		T321989	DIGITAL ALTIMETER TEST FIXTURE	ASI DEALER
ASI-483		T322029	RECEIVER TRANSMITTER TEST FIXTURE	ASI DEALER
ASI-484		T323177	TEST CABLE	ASI DEALER
ASI-485		T323206	DC-9/10 TRC POWER SUPPLY TEST FIXTURE	ASI DEALER
ASI-486		T323687-201	ROLL AUTOLAND TEST FIXTURE	ASI DEALER
ASI-486DX2-66		486DX2-66	INDUSTRIAL COMPUTER WITH ISA SLOTS FOR CTC-429 COMPUTER CARD	ASI DEALER
ASI-487		T323689-201	PITCH AUTOLAND TEST FIXTURE	ASI DEALER
ASI-488	TS-488A/UP		ECHO BOX TEST PANEL (MODIFIED PER COLLINS WRT-701X FLW MANUAL)	ASI DEALER
ASI-489		T323689-202	PITCH AUTOLAND TEST FIXTURE	ASI DEALER
ASI-490		T325144	AUTOMATIC STABILIZER TRIM UNIT TEST FIXTURE ADAPTER	ASI DEALER
ASI-491		T307965	RATE OF TURN RACK MOUNTING FIXTURE	ASI DEALER
ASI-492-1		T322967	RADIO ALTIMETER TEST SET	ASI DEALER
ASI-492-2		T334109	RT-300 TEST FIXTURE ADAPTER	ASI DEALER
ASI-493		T321693	CS-412 COMPENSATOR TEST HARNESS	ASI DEALER
ASI-495			KRA-405B TEST SET	ASI DEALER
ASI-496			CCU-65/RCP-65 TEST FIXTURE (RCP-65/CCU-65 MAN FIG 5-3)	ASI DEALER
ASI-497-1	967M-1	622-5285-001	HARMONIC FILTER FOR 548S-( )	COLLINS
ASI-497-2	967M-2	622-5286-001	AMPLIFIER TEST SET FOR 548S-( )	COLLINS
ASI-497-3	967M-3	622-5287-001	POWER AMPLIFIER TEST SET FOR 548S-( )	COLLINS
ASI-497-4	967M-4	622-5288-001	CONTROL CIRCUIT CARD TEST SET FOR 548S-( ) / AN/ARM-196	COLLINS
ASI-497-5	967M-5	622-5289-001	PREREGULATOR TEST SET FOR 548S-( ) / AN/ARM-197	COLLINS
ASI-498	699N-1	797-0299-001	TEST SET	COLLINS
ASI-499-1	476E-4	522-1487-004	HORIZONTAL SITUATION INDICATOR TEST SET	ASI DEALER
ASI-499-2	476E-4A	522-2698-004	HORIZONTAL SITUATION INDICATOR TEST SET	ASI DEALER
ASI-499-3	476E-4B	522-3049-004	HORIZONTAL SITUATION INDICATOR TEST SET	ASI DEALER
ASI-499-4	476E-4C	522-3547-000	HORIZONTAL SITUATION INDICATOR TEST SET	ASI DEALER
ASI-499-5	476E-1	522-1431-004	FLIGHT DIRECTOR COMPUTER TEST SET (REPLACED BY 476E-1A / ASI-499-6)	ASI DEALER
ASI-499-6	476E-1A	522-2848-004	FLIGHT DIRECTOR COMPUTER TEST SET	ASI DEALER
ASI-499-61			SPECIAL TEST FIXTURE FOR ASI-499-5/6 (479E-1/1A)	ASI DEALER
ASI-500-1			CONTROL HEAD SIMULATOR (1 ASI-10-500A CABLE INCLUDED)	ASI DEALER
ASI-500-1AC			CONTROL HEAD SIMULATOR WITH AC INVERTER (ASI-600-1)	ASI DEALER

**AVAILABILITY:**

ASI DEALER: CONTACT ANY ASI DEALER FOR QUOTE  
 COLLINS: CONTACT ROCKWELL COLLINS FOR QUOTE  
 GABLES: CONTACT GABLES ENGINEERING FOR QUOTE  
 TELEPHONICS: CONTACT TELEPHONICS FOR QUOTE



**ASI SPECIALIZED TEST EQUIPMENT LIST**

**AVAILABILITY SUBJECT TO CHANGE WITHOUT NOTICE**

<b>ASI MN</b>	<b>EQUIV MN</b>	<b>EQUIV PN</b>	<b>DESCRIPTION</b>	<b>AVAILABILITY</b>
ASI-500-2			ARINC 566A CONTROL HEAD SIMULATOR (1 ASI-10-500A CABLE INCLUDED)	ASI DEALER
ASI-500-2AC			ARINC 566A CONTROL HEAD SIMULATOR WITH AC INVERTER (ASI-600-1)	ASI DEALER
ASI-501-1			ARINC 566A TEST CTL HEAD (8.33 KHz CAPABILITY) FOR LINAIRE PANELS	ASI DEALER
ASI-501-2			ARINC 566A TEST CTL HEAD (8.33 KHz CAPABILITY)	ASI DEALER
ASI-501-3			ARINC 566A COM TEST CTL HEAD (8.33 KHz CAPABILITY) 313N-2/3 CONNECTOR	ASI DEALER
ASI-501-4			NAV TEST CTL HEAD (REPLACES 313N-2/3 NAV)	ASI DEALER
ASI-501-5			ADF TEST CTL HEAD SIMULATOR (REPLACES 614L-11/12/13 FOR ADF TESTING)	ASI DEALER
ASI-502			CONTROL WIZARD, CONTROL HEAD SIMULATOR / DATA BUS ANALYZER	ASI DEALER
ASI-502-022			OPTIONAL PROGRAM, CTL-230 W/ ADAPTER BOARD	ASI DEALER
ASI-600-1			400 CYCLE INVERTER (MOUNTS IN ASI-500-1)	ASI DEALER
ASI-601-1	966D-17A	622-9069-001	FAULT MONITOR TEST SET	ASI DEALER
ASI-602-1	966D-18	622-7340-001	SELSCAN INTERFACE TEST PANEL WITH TEST ADAPTER (AS-603-1 / 964B-1 )	ASI DEALER
ASI-602-2	966D-18	622-7340-002	SELSCAN INTERFACE TEST PANEL WITH TEST ADAPTER (AS-603-2 / 964B-2 )	ASI DEALER
ASI-602-3	966D-18	622-7340-003	SELSCAN INTERFACE TEST PANEL WITH TEST ADAPTER (AS-603-3 / 964B-3 )	ASI DEALER
ASI-603-1	964B-1	622-8665-001	DUAL SYSTEM RS232 TEST ADAPTER	COLLINS
ASI-603-2	964B-2	822-0735-001	1553/RS232 TEST ADAPTER	COLLINS
ASI-603-3	964B-3	822-1408-001	RS422 TEST ADAPTER	ASI DEALER
ASI-604-1	263TS101-1		BATTERY CHARGER TEST SET FOR ACME 263BC101-2/3	ASI DEALER
ASI-700-1			INDICATOR DISCRETE FUNCTION INTERFACE UNIT	ASI DEALER
ASI-700-2			ADF/GLU/ILS/VOR DISCRETE FUNCTION INTERFACE UNIT	ASI DEALER
ASI-700-2-1			GLU-RFADAPTER PANEL	ASI DEALER
ASI-700-3			DME/LRA DISCRETE FUNCTION INTERFACE UNIT	ASI DEALER
ASI-700-4			VHF/HF DISCRETE FUNCTION INTERFACE UNIT	ASI DEALER
ASI-700-4-01		983-4904-001	OSCILLOSCOPE LOGIC PROBE	COLLINS
ASI-700-4-02		983-4924-001	POWER SUPPLY LOAD TEST FIXTURE	ASI DEALER
ASI-700-4-03		830-7415-101	TRANSLATOR TESTER	ASI DEALER
ASI-700-4-04		830-7934-001	BLOWER A4A2 TEST FIXTURE	COLLINS
ASI-700-4-05		647-2143-001	CHASSIS/POWER SUPPLY TEST FIXTURE	ASI DEALER
ASI-700-4-06			UNITY GAIN AMPLIFIER CIRCUIT	ASI DEALER
ASI-700-4-07			VOLTAGE REGULATOR A6A3 TESTER FOR HFS-900D	ASI DEALER
ASI-700-4-08		830-7754-001	CONTROL BOX ASSEMBLY-BANDSWITCH ADAPTER FOR HFS-700/900	COLLINS
ASI-701		652-9764-001	EDU-HIGH VOLTAGE POWER SUPPLY TEST PANEL	ASI DEALER
ASI-701-1C		647-8076-004	CABLE: ASI-701 SUPPLY INTERFACE	ASI DEALER
ASI-702			DEM TESTER (RDMI-743A MAN. FIG. 915 - 917)	ASI DEALER
ASI-703			CALIBRATION FIXTURE (RDMI-743A MAN. FIG 909)	ASI DEALER
ASI-704			POWER SUPPLY TESTER (RDMI-743A MAN. FIG. 911 - 914)	ASI DEALER
ASI-705		647-8773-001	POWER SUPPLY FIXTURE (EAP-701 ( ) MAN. FIG. 903 - 904)	ASI DEALER
ASI-706	MST-904	622-6103-001	MICROPROCESSOR SYSTEM TEST SET ADAPTER	ASI DEALER
ASI-707A			DME-700/900 DRIVER A4 ALIGNMENT COVER (DME-700 MAN. FIG 903)	ASI DEALER
ASI-707B			DME-700/900 SYNTH A3 ALIGNMENT COVER (DME-700 MAN. FIG 904)	ASI DEALER
ASI-707C			DME-700/900 PWR AMP ALIGNMENT COVER (DME-700 MAN. FIG 905)	ASI DEALER
ASI-708			SUPPRESSOR LOAD BOX (TPR-710A MAN. FIG. 903)	ASI DEALER
ASI-708-1	KTS-157	071-5040-00	HF/SSB TEST SET	ASI DEALER
ASI-709			RECEIVER EXTENDER CABLE (TPR-710A MAN. FIG. 904)	ASI DEALER
ASI-710			COAX EXTENDER CABLE (TPR-710A MAN. FIG 906)	ASI DEALER
ASI-711			500-OHM T-ATTENUATOR (HFS-700 MAN. FIG. 904)	ASI DEALER
ASI-712			RF INJECTION PROBE, 50-OHM (HFS-700 MAN. FIG. 902)	ASI DEALER
ASI-712-1		983-4909-001	OSCILLOSCOPE LOGIC PROBE FOR HFS-900D	COLLINS
ASI-713	MST-903	622-6102-001	MICROPROCESSOR SYSTEM TEST SET ADAPTER	ASI DEALER
ASI-714		827-0200-003	IDENT SIGNAL GENERATOR (REPLACED ASI-714-2)	ASI DEALER
ASI-714-2		827-0200-003	IDENT SIGNAL GENERATOR	ASI DEALER
ASI-715-1			TUNING COVER (ILS-700 MAN. FIG 906)	ASI DEALER
ASI-715-2		628-8364-001	TEST COVER (ILS-700 MAN FIG 907)	COLLINS
ASI-716	MST-905	622-6104-001	MICROPROCESSOR SYSTEM TEST SET ADAPTER	ASI DEALER
ASI-717			ALTITUDE SIMULATION FIXTURE (LRA-700 MAN. FIG. 906 - 907)	ASI DEALER
ASI-718			RF TUNING COVER (LRA-700 MAN. FIG 904-905)	ASI DEALER
ASI-718U-5			781U-5 SYSTEM TEST SET (REQUIRES INTERPOLATION OF TEST PROCEDURES)	ASI DEALER
ASI-719			PULSE GENERATOR TEST BOX (LRA-700 MAN. FIG. 906 - 907)	ASI DEALER
ASI-720			ATTENUATOR 26 dB L-PAD (PAU-700 MAN. FIG. 901A)	ASI DEALER
ASI-721		099-4386-000	PAU-700 TEST FIXTURE (PAU-700 MAN. FIG 902 - 904)	ASI DEALER
ASI-722	WMT-701X	646-4443-009	WXR-700 RADAR TEST TRAY	ASI DEALER
ASI-722-1			WXR-700 COOLING MOUNT (CAN BE USED IN PLACE OF ASI-722)	ASI DEALER
ASI-722-2		2039960-0501	RTA-4A COOLING MOUNT	ASI DEALER
ASI-722-3		2039960-050	COOLING UNIT	ASI DEALER
ASI-722-10		131-3606-179	WAVEGUIDE SWITCH TESTER FOR WMT-701X	COLLINS
ASI-723	MST-902	622-6101-001	MICROPROCESSOR SYSTEM TEST SET ADAPTER	ASI DEALER
ASI-724			TEST BREAKOUT PANEL (WXR-700X MAN. FIG. 508 - 509)	ASI DEALER
ASI-725			LEVELING BASE (WMA-701X/702X AND WFA-701X MAN. FIG. 902)	ASI DEALER
ASI-72-5A			WMA-701/702X ALIGNMENT PINS	ASI DEALER
ASI-726		647-1997-001	MOTOR DRIVER TEST FIXTURE (WMA-701X/702X MAN. FIG. 906A)	ASI DEALER

**AVAILABILITY:**

ASI DEALER: CONTACT ANY ASI DEALER FOR QUOTE  
 COLLINS: CONTACT ROCKWELL COLLINS FOR QUOTE  
 GABLES: CONTACT GABLES ENGINEERING FOR QUOTE  
 TELEPHONICS: CONTACT TELEPHONICS FOR QUOTE

**ASI SPECIALIZED TEST EQUIPMENT LIST**

**AVAILABILITY SUBJECT TO CHANGE WITHOUT NOTICE**

<b>ASI MN</b>	<b>EQUIV MN</b>	<b>EQUIV PN</b>	<b>DESCRIPTION</b>	<b>AVAILABILITY</b>
ASI-727			FRONT PANEL EXTENDER CABLE (WXI-711 MAN. FIG. 903)	ASI DEALER
ASI-728			ANTENNA WEIGHT SIMULATOR (WMA-701X/702X MAN. FIG. 903)	ASI DEALER
ASI-729		647-0283-001	POWER SUPPLY TEST FIXTURE (WMA-701X/702X MAN. FIG. 905 - 906)	ASI DEALER
ASI-730-1			REAR CONNECTOR BREAKOUT BOX (WXI-711 MAN. FIG. 906)	ASI DEALER
ASI-730-2			TCAS REAR CONNECTOR BREAKOUT BOX (WXI-711 MAN. FIG. 904-905)	ASI DEALER
ASI-731			MOTOR DRIVER TEST FIXTURE (WMA-701X/702X MAN. FIG. 907 - 909)	ASI DEALER
ASI-732			RCVR/MONITOR DRIVER TEST FIXTURE (WMA-701X/702X MAN. FIG. 909A-C)	ASI DEALER
ASI-733			PRELOAD SPRING TORQUE ADAPTER (WMA-701X/702X MAN. FIG. 910)	ASI DEALER
ASI-734			ZERO MONITORS A5 AND A6 MOUNTING JIG (WMA-701X/702X MAN. FIG. 911)	ASI DEALER
ASI-735			ZERO MONITORS A5 AND A6 MOUNT PROBE (WMA-701X/702X MAN. FIG. 912)	ASI DEALER
ASI-736			COIL SPRING TORQUE ADAPTER (WMA-701X/702X MAN. FIG. 913)	ASI DEALER
ASI-737			X BAND WAVEGUIDE FLANGE (WMA-701X/702X MAN. FIG. 914)	ASI DEALER
ASI-737-2			C BAND WAVEGUIDE FLANGE (WMA-701C/702C MAN. FIG. 914)	ASI DEALER
ASI-738	WJB-701	622-5760-001	J-BOX (WXR-700X MAN. FIG. 505 - 507)	ASI DEALER
ASI-739			TURBULANCE TESTER FOR WRT-701X	ASI DEALER
ASI-740		647-8028-001	EFIS LOW VOLTAGE POWER SUPPLY TEST PANEL	ASI DEALER
ASI-741	RMT-4A	8055325-0401	DOPPLER SIGNAL GENERATOR	ASI DEALER
ASI-742	RCT-4A	2041589-0401	RADAR SYSTEM TEST PANEL	ASI DEALER
ASI-743	AIT-4A	8074503-0401	TCAS PPT ADAPTER TEST PANEL	ASI DEALER
ASI-744			DSP-7000 STANDARD TEST PANEL	ASI DEALER
ASI-745-1		830-3834-001	DLM-900 POWER SUPPLY TEST FIXTURE	ASI DEALER
ASI-745-2		830-3834-002	TTR-920 POWER SUPPLY TEST PANEL (CALL FOR AVAILABILITY)	COLLINS
ASI-745-3		830-3834-003	SDU-906 POWER SUPPLY TEST FIXTURE	ASI DEALER
ASI-746-1		676-7387-003	DLM-900 RAM BUFFER CARD	ASI DEALER
ASI-746-2		676-7387-003	SDU-906-900 RAM BUFFER CARD	ASI DEALER
ASI-747		676-7385-001	BUS BUFFER CARD	ASI DEALER
ASI-748		830-4928-001	DLM-900 LOOPBACK POD	ASI DEALER
ASI-749		830-1228-001	SDU-906 SYSTEM PROCESSOR TEST SET	ASI DEALER
ASI-750		830-1243-001	SDU-906 VCO TEST FIXTURE	ASI DEALER
ASI-751		830-1630-001	SDU-906 MAIN UNIT TEST SET	ASI DEALER
ASI-752		830-1631-001	SDU-906 VCO TEST SET	ASI DEALER
ASI-753		830-1635-001	SDU-906 IF/SYNTHESIZER TEST SET	ASI DEALER
ASI-754		830-1638-001	SDU-906 CHANNEL MODULE ADAPTER	ASI DEALER
ASI-755		830-1639-001	SDU-906 CEPT ADAPTER TEST FIXTURE	ASI DEALER
ASI-756		830-1640-001	SDU-906 429 ADAPTER TEST MODULE	ASI DEALER
ASI-757		830-1641-001	SDU-906 REAR AUXILIARY TEST SET	ASI DEALER
ASI-758-1	TEE-5	822-1051-001	AAMP5 WITH 512K HISTORY	ASI DEALER
ASI-758-2	TEE-5	822-1051-002	AAMP5 WITH 128K HISTORY	ASI DEALER
ASI-758-3	TEE-5	822-1051-003	AAMP2/2-8/3 WITH 512K HISTORY	ASI DEALER
ASI-758-4	TEE-5	822-1051-004	AAMP2/2-8/3 WITH 128K HISTORY	ASI DEALER
ASI-759		828-0281-001	DLM-900 I/O EXTENDER CARD	ASI DEALER
ASI-760	PPT-4A	2041591-0401	RADAR INDICATOR TEST PANEL	ASI DEALER
ASI-761			BURN-IN RACK FOR GLU-920	ASI DEALER
ASI-762		830-6309-001	CIU-906 TEST PANEL	ASI DEALER
ASI-763-1			WMA-701/702X ELEVATION DRIVE GEAR SHIMMING FIXTURE (MAN FIG 920)	ASI DEALER
ASI-763-2			WMA-701/702X SCAN DRIVE GEAR SHIMMING FIXTURE (MAN FIG 921)	ASI DEALER
ASI-764			WCP-701/702 TEST FIXTURE	ASI DEALER
ASI-765		099-4421-000	CMU-900 POWER SUPPLY TEST SET	ASI DEALER
ASI-766		830-8625-001	CMU-900 TEST PANEL	ASI DEALER
ASI-767			CMU-900 JTAG ASSY (CMU-900 MAN FIG 907)	ASI DEALER
ASI-768			DCU-2000 TEST SET (DCU-200 MAN FIG 901)	ASI DEALER
ASI-769			DSP-2000 TEST ADAPTER	ASI DEALER
ASI-770	AST-4A	2041886-0401	RADAR ANTENNA SIMULATOR PANEL	ASI DEALER
ASI-771	ATT-4A	2041592-0401	RADAR ANTENNA TEST PANEL	ASI DEALER
ASI-772	KTS-152	071-5026-00	KG-102/102A/105 GYRO TEST PANEL	ASI DEALER
ASI-773	KTS-153	071-5027-00	KI-525/525A TEST PANEL	ASI DEALER
ASI-774-1			DFIU / DFP-702/703/712/712A/713/713A	ASI DEALER
ASI-775		830-8075-001	UNIVERSAL POWER SUPPLY TEST PANEL	ASI DEALER
ASI-776-1		002-00608-0000	KDM-7060 DME BENCH TEST SET	ASI DEALER
ASI-776-2		002-0609-00	KDM-706A OPTIONAL BENCH TEST SET	ASI DEALER
ASI-776-3		002-00615-0000	KDM-7070 DME BENCH TEST SET	ASI DEALER
ASI-777	TE-9210	822-1429-001	HF-9000 SYSTEM TEST SET (INCLUDES FUNCTIONS OF THE TE-9200 AND TE-9600)	ASI DEALER
ASI-777-2	TE-9200	622-9418-001	HF-9000 SYSTEM TEST SET	COLLINS
ASI-777-3	TE-9300	622-9419-001	HF-9000 PROCESSOR TEST SET	COLLINS
ASI-777-4	TE-9500	822-0092-001	HF-9000 RF TUNER TEST SET	COLLINS
ASI-777-5	TE-9600	822-0880-001	HF-9000 ARINC TEST SET	COLLINS
ASI-777-6		685-1179-001	HF-9000 LOWPASS FILTER TEST FIXTURE	COLLINS
ASI-777-61		987-0007-767	HF-9000 LOWPASS FILTER TEST FIXTURE	COLLINS
ASI-777-7		987-0018-001	HF-9087D AUDIO I/O TEST FIXTURE	COLLINS
ASI-777-71		987-0007-768	HF-9087F AUDIO I/O TEST FIXTURE	COLLINS

**AVAILABILITY:**

ASI DEALER: CONTACT ANY ASI DEALER FOR QUOTE

COLLINS: CONTACT ROCKWELL COLLINS FOR QUOTE

GABLES: CONTACT GABLES ENGINEERING FOR QUOTE

TELEPHONICS: CONTACT TELEPHONICS FOR QUOTE

**ASI SPECIALIZED TEST EQUIPMENT LIST**

**AVAILABILITY SUBJECT TO CHANGE WITHOUT NOTICE**

<b>ASI MN</b>	<b>EQUIV MN</b>	<b>EQUIV PN</b>	<b>DESCRIPTION</b>	<b>AVAILABILITY</b>
ASI-777-8		685-1807-001	HF-9000 POWER AMPLIFIER TEST PANEL	COLLINS
ASI-777-81		987-0007-786	HF-9000 POWER AMPLIFIER TEST PANEL	COLLINS
ASI-777-82		987-0007-787	HF-9000 BLOWER FIXTURE	COLLINS
ASI-777-10			HF-9000 SYSTEM HARNESS	ASI DEALER
ASI-778	TE-9400	622-9420-001	HF-9000 EXTENDER SET	ASI DEALER
ASI-779-1			M-4C FLIGHT CONTROL SYSTEM TEST PANEL (INCLUDES ASI-779-1)	ASI DEALER
ASI-779-2			M-4D TEST ADAPTER	ASI DEALER
ASI-779-3			FLIGHT SYSTEM CONTROL SIMULATOR (P/O ASI-779-1)	ASI DEALER
ASI-780-1	TS-810A	4000385-1002	FCS-810 FLIGHT CONTROL SYSTEM TEST PANEL	ASI DEALER
ASI-780-2	TA-810A	4000866-1001	TEST ADAPTER (INCLUDED WITH ASI-780-1)	ASI DEALER
ASI-780-3	TS-870A	4001357-7001	FCS-870 FLIGHT CONTROL SYSTEM TEST PANEL	ASI DEALER
ASI-781			KLN-900 TEST PANEL (KLN-900 MAN FIG 902) (INCLUDES ASI-140 AND ASI-150)	ASI DEALER
ASI-782			KFS-599A/B TEST PANEL (KFS-599B MAN FIG 9001-9002)	ASI DEALER
ASI-783			RDR-2000 (ART-2000 / ART-2100 / IND-182A) TEST PANEL	ASI DEALER
ASI-784		071-00168-0000	BREAKOUT / TEST PANEL FOR KMD-540	ASI DEALER
ASI-785			TEST PANEL FOR KLN-35A/89/89A/90/90A/90B/94	ASI DEALER
ASI-789	AN/ARM-102	522-4545-001	TEST SET, ARA-50 DIRECTION FINDER GROUP (W/4 CABLES)	ASI DEALER
ASI-789-1	TS-2544	522-4817-001	TEST SET (P/O ASI-789)	ASI DEALER
ASI-789-2	MT-3726	522-4818-001	TEST MOUNT (P/O ASI-789)	ASI DEALER
ASI-789-3		622-2182-001	TEST ADAPTER, AN/ARM-102 OR ASI-789 TO DF-301E	ASI DEALER
ASI-790	970V-1	622-3029-001	DIRECTION FINDER TEST SET FOR DF-301E	ASI DEALER
ASI-791		002-00566-0000	KNR-634/634A TEST PANEL (KN4-634A MAN FIG 5-1)	ASI DEALER
ASI-792	KTS-192		PROBE/ANTENNA COUPLER TESTER FOR KAC-992 (INCL ASI-792-1 AND ASI-792-2)	ASI DEALER
ASI-792-1		071-5079-00	BENCH TEST SET (P/O ASI-792)	ASI DEALER
ASI-792-2		071-5080-00	ANTENNA LOAD BOX (P/O ASI-792)	ASI DEALER
ASI-793		155-1442-00	KHF990 (KAC-992/KTR-993/KFS-594) SYSTEM TEST HARNESS	ASI DEALER
ASI-793-1			KHF1050 (KAC-1052/KPA-1052/KRX-1053/PS-440) SYSTEM BENCH-TEST HARNESS	ASI DEALER
ASI-794		002-00544-0000	KX-155/165 SYSTEM BENCH TEST SET	ASI DEALER
ASI-795			KMA-24/24H TEST SET	ASI DEALER
ASI-796-1	UG2293AA01		TOTALIZING INDICATOR TEST SET	ASI DEALER
ASI-796-2	UG2293AA02		TOTALIZING INDICATOR TEST SET	ASI DEALER
ASI-799	AXT-4A	8055692-0401	FAULT DATA TEST UNIT	ASI DEALER
ASI-801	DMT-37A	2041594-3701	DME TEST PANEL	ASI DEALER
ASI-802	ALT-52A	2041475-5201	RADIO ALTIMETER TEST PANEL	ASI DEALER
ASI-803	RTT-44A	2041524-4401	VHF COMM TEST PANEL	ASI DEALER
ASI-803-1		303-0005-001	2X5 TUNING PANEL FOR RTA-83A	ASI DEALER
ASI-804	DFT-75A	2041520-7501	ADF TEST PANEL	ASI DEALER
ASI-804-1	DFT-75B	2041597-7501	ADF ANTENNA TEST SET	ASI DEALER
ASI-804-2		2040156-0501	ADF ANTENNA HOLDER FIXTURE	ASI DEALER
ASI-804-3			SIMULATOR TEST SET (INCLUDES ADAPTER CABLES FOR -7504 AND ABOVE)	ASI DEALER
ASI-805	RNT-30A	2041634-3003	NAV TEST PANEL (INCLUDES RIA-35A/35B AND RVA-36A CABLE)	ASI DEALER
ASI-805-1	RNT-30A	2041634-3001	NAV TEST PANEL (INCLUDES RIA-35A/35B CABLE)	ASI DEALER
ASI-805-2	RNT-30A	2041634-3002	NAV TEST PANEL (INCLUDES RVA-36A CABLE)	ASI DEALER
ASI-810	92N-2	01-0215-00	SERIES III TEST SYSTEM (INCLUDES ASI-810-1, ASI-810-2, AND ASI-810-3)	ASI DEALER
ASI-810-1	92AF-1	01-0216-00	SERIES III ADF TEST PANEL FOR DFS-43 SYSTEM	ASI DEALER
ASI-810-2	92CN-1	01-0217-00	SERIES III VHF/NAV TEST PANEL FOR VCS-40 / VNS-41 SYSTEMS	ASI DEALER
ASI-810-3	92XD-1	01-0218-00	SERIES III DME/XPDR TEST PANEL FOR DMS-44 / TRS-42 SYSTEMS	ASI DEALER
ASI-811-1		226-40-1	TEST SET FOR 226-1 (AIRSHOW / CABIN SYSTEMS)	ASI DEALER
ASI-811-2		828-40-1	TEST SET FOR 828-1 (AIRSHOW / CABIN SYSTEMS)	COLLINS
ASI-811-3		902-40-1	TEST SET FOR 902-1 (AIRSHOW / CABIN SYSTEMS)	COLLINS
ASI-811-4		1165-40-1	TEST SET FOR 1165-1 (AIRSHOW / CABIN SYSTEMS)	ASI DEALER
ASI-811-5		1226-40-1	TEST SET FOR 1226-1 (AIRSHOW / CABIN SYSTEMS)	ASI DEALER
ASI-811-6		1287-40-1	TEST SET FOR 1287-1 (AIRSHOW / CABIN SYSTEMS)	ASI DEALER
ASI-811-7		1730-40-1	TEST SET FOR 1730-1 (AIRSHOW / CABIN SYSTEMS)	COLLINS
ASI-811-8		807-40-1	TEST SET	COLLINS
ASI-812-1			BREAKOUT BOX FOR TAILWIND SSP/GEM/FMU (INCLUDES 4 CABLES)	COLLINS
ASI-812-2			ADAPTER CABLE KIT FOR TAILWIND SSP/GEM/FMU BREAKOUT BOX (3 CABLES)	COLLINS
ASI-813			VMOD TEST SET	COLLINS
ASI-814			10.4" MONITOR RETRACT POWER SUPPLY (442-0679-001) TEST SET	COLLINS
ASI-815			MCU BOARD TEST FIXTURE	COLLINS
ASI-815-1			MCU BOARD TEST FIXTURE WITH W1-W8	COLLINS
ASI-816-1			EXCHANGE SYSTEM BREAKOUT BOX WITH 5 CABLES	COLLINS
ASI-816-2			EXCHANGE AITR SYSTEM BREAKOUT BOX WITH 2 CABLES	COLLINS
ASI-817		653-5113-001	RF/SIGNAL DISTRIBUTION PANEL WITH CABLE	COLLINS
ASI-818-1		TS-PC15-1	TEST SET FOR PC15 / PC-15A	ASI DEALER
ASI-818-2		TS-PC17-1	TEST SET FOR PC17 / PC-17A	ASI DEALER
ASI-818-3			TEST SET FOR PC-250	ASI DEALER
ASI-980L-1MM			METER RETROFIT KIT FOR COLLINS 980L-1 (NOT FOR USE WITH 980L-1A)	ASI DEALER
ASI-1000			INST TEST PANEL	ASI DEALER
ASI-1001-1			PB-100 MODULE TESTER - GLIDE SLOPE A	FED-EX

**AVAILABILITY:**

ASI DEALER: CONTACT ANY ASI DEALER FOR QUOTE  
 COLLINS: CONTACT ROCKWELL COLLINS FOR QUOTE  
 GABLES: CONTACT GABLES ENGINEERING FOR QUOTE  
 TELEPHONICS: CONTACT TELEPHONICS FOR QUOTE

**ASI SPECIALIZED TEST EQUIPMENT LIST**

**AVAILABILITY SUBJECT TO CHANGE WITHOUT NOTICE**

<b>ASI MN</b>	<b>EQUIV MN</b>	<b>EQUIV PN</b>	<b>DESCRIPTION</b>	<b>AVAILABILITY</b>
ASI-1001-2			PB-100 MODULE TESTER - GLIDESLOPE B / BEAM B	FED-EX
ASI-1001-3			PB-100 MODULE TESTER - GO AROUND	FED-EX
ASI-1001-4			PB-100 MODULE TESTER - COMMAND A	FED-EX
ASI-1001-5			PB-100 MODULE TESTER - MONITOR	FED-EX
ASI-1001-6			PB-100 MODULE TESTER - FLIGHT DIRECTOR A	FED-EX
ASI-1001-7			PB-100 MODULE TESTER - BEAM A	FED-EX
ASI-1001-8			PB-100 MODULE TESTER - CRUISE 2	FED-EX
ASI-1001-9			PB-100 MODULE TESTER - COMMAND ADJUST / MONITOR	FED-EX
ASI-1001-10			PB-100 MODULE TESTER - CRUISE 1	FED-EX
ASI-1001-11			PB-100 MODULE TESTER - CWS COMMAND	FED-EX
ASI-1001-12			PB-100 MODULE TESTER - CAM POSITION	FED-EX
ASI-1001-13			PB-100 MODULE TESTER- FLT DIR CHAN A	FED-EX
ASI-1001-14			PB-100 MODULE TESTER- FLT DIR CHAN B	FED-EX
ASI-1001-15			PB-100 MODULE TESTER - COMPARATOR 2	FED-EX
ASI-1001-16			PB-100 MODULE TESTER - COMPARATOR 1	FED-EX
ASI-1001-17			PB-100 MODULE TESTER - SERCO CMD CH B	FED-EX
ASI-1001-18			PB-100 MODULE TESTER - SERCO CMD CH B	FED-EX
ASI-1001-20			DC-10 FLAP-SPOILER BREAKOUT BOX	ASI DEALER
ASI-1002			UNIVERSAL GABLES CONTROL HEAD TEST PANEL (AVAILABLE FROM GABLES)	GABLES
ASI-1002-2			UNIVERSAL BREAKOUT BOX FOR GABLES CONTROLS	ASI DEALER
ASI-1002-3			GABLES G6980 AUDIO MANAGEMENT UNIT TEST PANEL	ASI DEALER
ASI-1002-4			UNIVERSAL BREAKOUT BOX FOR GABLES CONTROLS (KLM DESIGN)	ASI DEALER
ASI-1003-GAB			GABLES G7185 TEST PANEL	ASI DEALER
ASI-1003-RAY			PNEUMATIC FLOW CONTROL RAMP TEST SET	ASI DEALER
ASI-1003-1			GABLES TCAS CONTROL (G6990/G6992/G7131/G7156) TEST PANEL	ASI DEALER
ASI-1004	CT8122		PRESSURE SENSOR ELECTRONIC TEST PANEL	ASI DEALER
ASI-1005	CT2506		PRESSURE SENSOR PNEUMATIC TEST PANEL	ASI DEALER
ASI-1006		98A27608011001	A310 CONTROL BOX-SPOILER VALVE GROUP	ASI DEALER
ASI-1007		901-700-000-A0	COMPUTER INTERFACE BOX	ASI DEALER
ASI-1008	BB11-142A	NWA-00-3246-0-0011	ANTI-SKID/SPOILER DET PULLER	ASI DEALER
ASI-1009	PSD40-503		CABLE: 727-737	ASI DEALER
ASI-1010-1		GSE601303-001	INTERFACE CONTROL PANEL	ASI DEALER
ASI-1010-2		GSE601303-001	INTERFACE CONTROL PANEL (KLM MOD OF ASI-10101-1)	ASI DEALER
ASI-1011		170130	CARGO ELECTRONIC UNIT (CEU) TEST SET	ASI DEALER
ASI-1011-1		170145	CABLE SET FOR ASI-1011 (170130) CEU TES SET (INCLUDES W1 AND W2)	ASI DEALER
ASI-1012			TEST ADAPTER FOR AMETEK 253884 SURFACE POSITION INDICATOR	ASI DEALER
ASI-1013		4374-01	CTI TEST SET	ASI DEALER
ASI-1013-1		101149-01-01	CTI TEST SET CABLE FOR SMITHS 2263-01	ASI DEALER
ASI-1014	CT21038		737 EPDS SPCU TEST PANEL	ASI DEALER
ASI-1014-1	CT24128		126 OHM LOAD FOR ASI-1014	ASI DEALER
ASI-1015		KLM3E-86566-00	CALIBRATION CONTROL UNIT FOR LT-90/92	ASI DEALER
ASI-1016		170180	DETECTION / SUPPRESSION PANEL	ASI DEALER
ASI-1016-1		170192	DETECTION / SUPPRESSION PANEL TEST CABLE	ASI DEALER
ASI-1016-2		170228	CIRCUIT CARD / CONNECTOR ASSEMBLY TEST CABLE (PRE SB 473955-1-26-404)	ASI DEALER
ASI-1016-3		170395	CIRCUIT CARD / CONNECTOR ASSEMBLY TEST CABLE (POST SB 473955-1-26-404)	ASI DEALER
ASI-1017		170222	TIMER MONITOR	ASI DEALER
ASI-1018			M193 WINDOW HEAT MODULE ASSEMBLY TEST SET (ATA 30-41-01 FIG 5A)	ASI DEALER
ASI-1018-1			M193 WINDOW HEAT MODULE ASSEMBLY TEST SET (ATA 30-41-01 FIG 5)	ASI DEALER
ASI-1019-1			WINDOW HEAT CONTROL TEST FIXTURE FOR KOITO 8300-05603/4 / 10-61833-4/-6	ASI DEALER
ASI-1019-2			WINDOW HEAT CONTROL LOAD FIXTURE FOR KOITO 8300-05603/4 / 10-61833-4/-6	ASI DEALER
ASI-1020-1			POINT LEVEL SENSOR SIMULATION FIXTURE FOR 1742F3 / S417T108-7	ASI DEALER
ASI-1020-2			LCM LEVEL INTERFACE FIXTURE FOR 1742F3/5/6/8 / S417T108-7/-11/-14/-16	ASI DEALER
ASI-1020-3	BTR-9466		POINT LEVEL SENSOR SIM FIXTURE FOR 1742F3/5/6/8 / S417T108-7/-11/-14/-16	ASI DEALER
ASI-1021			VOLTAGE RATIO TEST CIRCUIT FOR 10-60554-XX	ASI DEALER
ASI-1025			TEST FIXTURE FOR BC1302	ASI DEALER
ASI-1026	BTCG-03		SMOKE DETECTION CONTROL UNIT TEST SET FOR CERBERUS RCGSK-10-0X	ASI DEALER
ASI-1026-1			SMOKE DETECTOR TEST FIXTURE FOR CERERBUS KTA-2400 (2 CHANNEL) FIG 103	ASI DEALER
ASI-1026-2			SMOKE DETECTOR TEST FIXTURE FOR CERERBUS KTA-2400 (6 CHANNEL) FIG 104	ASI DEALER
ASI-1026-3			SMOKE DETECTOR TEST FIXTURE FOR CERERBUS FTA719-XX / FTA720-XX FIG 105	ASI DEALER
ASI-1027-1	CT8069		WINDOW HEAT CONTROL TEST PANEL FOR HONEYWELL 624066-X	ASI DEALER
ASI-1027-2	CT8073		SIMULATED LOAD	ASI DEALER
ASI-1027-3	CT8044		TEST FIXTURE	ASI DEALER
ASI-1028			CIRCUIT CARD TEST SET FOR 472266 / 898732	ASI DEALER
ASI-1029			WINDOW HEAT CONTROL UNITS TEST SET (ATA 30-41-06 FIG 1002)	ASI DEALER
ASI-1030			TEST FIXTURE FOR HELLA 8ES00523X SERIES POWER UNITS	ASI DEALER
ASI-1031-1			DIMMING CONTROL TEST PANEL	ASI DEALER
ASI-1032-1		NYLZ-52238	WINDOW DEFOG CONTROLLER TEST FIXTURE FOR SYLZ-51855	ASI DEALER
ASI-1032-2		NYLZ-52239	WINDOW DEFOG CONTROLLER LOAD FIXTURE FOR SYLZ-51855	ASI DEALER
ASI-1033			TEST FIXTURE FOR NORD-MICRO ELECTRONIC BOX 20995-( )	ASI DEALER
ASI-1034		71572	POWER SUPPLY TESTER FOR GRIMES 60-1321-X	ASI DEALER

**AVAILABILITY:**

ASI DEALER: CONTACT ANY ASI DEALER FOR QUOTE  
 COLLINS: CONTACT ROCKWELL COLLINS FOR QUOTE  
 GABLES: CONTACT GABLES ENGINEERING FOR QUOTE  
 TELEPHONICS: CONTACT TELEPHONICS FOR QUOTE

**ASI SPECIALIZED TEST EQUIPMENT LIST**

**AVAILABILITY SUBJECT TO CHANGE WITHOUT NOTICE**

ASI MN	EQUIV MN	EQUIV PN	DESCRIPTION	AVAILABILITY
ASI-1035			BREAKOUT / TEST SET FOR 284U1523-1 / 654U0061-X / 65B07320-X / 65B07322-X	ASI DEALER
ASI-0012-00		245-0012-00	CABLE, EGPWS (LRU TEST CABLE)	ASI DEALER
ASI-0016-038		117-0016-038	ERECTION ACCURACY FIXTURE	COLLINS
ASI-0150-001		828-1050-001	COAX SWITCHING MODULE (CSSI-1000)	ASI DEALER
ASI-0182-DLC		827-0182-001	DLC-800( ) POWER SUPPLY TEST FIXTURE	ASI DEALER
ASI-0201-DLM		827-0201-001	DLM-700( ) BREAKOUT TO MU CABLE	ASI DEALER
ASI-0202-DLM		827-0201-004	DLM-700( ) BREAKOUT TO LOOP BACK CABLE	ASI DEALER
ASI-0303-001		629-0303-001	CABLE: PWR SUP / PWR AMP (P/O ASI-2752-159)	ASI DEALER
ASI-0304-001		629-0304-001	CABLE: SW UNIT (P/O ASI-2752-159)	ASI DEALER
ASI-0312-001		629-0312-001	CABLE: FREQ / SYNTH (P/O ASI-2752-159)	ASI DEALER
ASI-0317-001		629-0317-001	CABLE: XLTR/MOD (P/O ASI-2752-159)	ASI DEALER
ASI-0319-070		229-0319-070	SVO-85/1000 FLUX KEEPER	COLLINS
ASI-0319-120		229-0319-120	SVO-1000 FLUX KEEPER	COLLINS
ASI-0343-001		830-0343-001	CABLE: NO. 1	ASI DEALER
ASI-0344-001		830-0344-001	CABLE: NO. 2	ASI DEALER
ASI-0345-001		830-0345-001	CABLE: NO. 3	ASI DEALER
ASI-0412-001			ADF ANTENNA SIMULATOR BREAKOUT/TEST BOX	ASI DEALER
ASI-0428-001		629-0428-001	CABLE: GUARD REC (P/O ASI-2752-159)	ASI DEALER
ASI-0433-001		629-0433-001	CABLE: IF/AF AMP (P/O ASI-2752-159)	ASI DEALER
ASI-0465-DLC		827-0465-001	DLC-800( ) TEST PANEL W/CABLE	ASI DEALER
ASI-0465-003		827-0465-003	CABLE: ASI-0465-DLC TO DLC-800( )	ASI DEALER
ASI-0491-001		649-0491-001	BREAKOUT-BOX ASSEMBLY (ALLIED SIGNAL)	ASI DEALER
ASI-0491-002		649-0491-002	BREAKOUT-BOX ASSEMBLY (ALLIED SIGNAL)	ASI DEALER
ASI-0501-001		828-0501-001	A1 BOARD PROGRAMMER FOR HFS-700D/900D	COLLINS
ASI-0511-001		638-0511-001	AHC-85 DUAL MULTISENSOR TESTER	COLLINS
ASI-0519-001		751-0519-001	THINLINE CONTACT EXTRACTOR (INCL TOOL 751-0519-001 & HANDLE 007-0611-000)	ASI DEALER
ASI-0740-001		791-0740-001	51RV-2B SLICE EXTENDER KIT	COLLINS
ASI-0780-02		55-0780-02	PSDA300-1 CENTER TANK ADAPTER CABLE	ASI DEALER
ASI-0788-001		987-0788-001	TEST SET	COLLINS
ASI-0795-001		442-0795-001	POWER ADAPTER TEST FIXTURE	COLLINS
ASI-0896-001		987-0896-001	CABLE, ELECTRICAL POWER	COLLINS
ASI-0897-001		987-0897-001	CABLE, UUT	COLLINS
ASI-0998-001		772-0998-001	590A-3( )ALLEN-HEAD WRENCH	COLLINS
ASI-1207-A	TS-1207A	4000595-0701	RT-1201A RADAR TEST SET (KPN 071-05108-000)	ASI DEALER
ASI-1100-DLM		827-1100-002	DLM-700( ) BREAKOUT PANEL	ASI DEALER
ASI-1130-DLM		827-1130-001	DLM-700( ) POWER DISTRIBUTION PANEL W/3 CABLES	ASI DEALER
ASI-1226-010		638-1226-010	CABLE, ASI-CTS-974 CHROME INTERFACE	COLLINS
ASI-1226-075		638-1226-075	CABLE, ASI-CTS-974 TO FCP-65	COLLINS
ASI-1226-076		638-1226-076	CABLE, ASI-CTS-974 TO MAP-65	COLLINS
ASI-1226-077		638-1226-077	CABLE, ASI-CTS-974 TO IND-42	COLLINS
ASI-1226-078		638-1226-078	CABLE, ASI-CTS-974 TO TCU-906	COLLINS
ASI-1226-079		638-1226-079	CABLE, ASI-CTS-974 TO CAD-31/62	COLLINS
ASI-1226-080		638-1226-080	CABLE, ASI-CTS-974 TO CAD-870G	COLLINS
ASI-1226-081		638-1226-081	CABLE, ASI-CTS-974 TO CAD-870/875 / RAC-870/875	COLLINS
ASI-1226-082		638-1226-082	CABLE, ASI-CTS-974 TO RTU-870	COLLINS
ASI-1226-083		638-1226-083	CABLE, ASI-CTS-974 TO ALI-80 / MSI-80 / VSI-80	COLLINS
ASI-1226-084		638-1226-084	CABLE, ASI-CTS-974 TO PRE-80	COLLINS
ASI-1226-085		638-1226-085	CABLE, ASI-CTS-974 TO TAI-80	COLLINS
ASI-1226-110		638-1226-110	CABLE, ASI-CTS-974 CHROME DATA	COLLINS
ASI-1229-001		634-1229-001	CABLE ASSY	COLLINS
ASI-1253-001		987-1253-001	CABLE, RS-232	COLLINS
ASI-1254-001		987-1254-001	CABLE, RS-422	COLLINS
ASI-1305-001		634-1305-001	CABLE ASSY	COLLINS
ASI-1316-001		638-1316-001	LN2 CHAMBER RACK MOUNT	COLLINS
ASI-1374-030		987-1374-030	RESOURCE PANEL TEST CABLE, CDU-7000	COLLINS
ASI-1374-040		987-1374-040	RESOURCE PANEL TEST CABLE	COLLINS
ASI-1374-050		987-1374-050	RESOURCE PANEL TEST CABLE	COLLINS
ASI-1374-060		987-1374-060	RESOURCE PANEL TEST CABLE	COLLINS
ASI-1374-070		987-1374-070	RESOURCE PANEL TEST CABLE	COLLINS
ASI-1374-075		987-1374-075	RESOURCE PANEL TEST CABLE	COLLINS
ASI-1374-078		987-1374-078	RESOURCE PANEL TEST CABLE	COLLINS
ASI-1429-001		609-1429-001	CABLE-EXTENDER ASSY RF MODULE IN 671U-4( )	ASI DEALER
ASI-1438-001		609-1438-001	CABLE-EXTENDER ASSY FOR POWER SUPPLY IN 671U-4( )	ASI DEALER
ASI-1522-DLM		827-1522-009	DLM-700( ) ACARS LOOPBACK POD	ASI DEALER
ASI-1569-010	G48C	013-1569-010	ANTENNA FOR 972Q-4	ASI DEALER
ASI-1577-001		827-1577-001	TEST ADAPTER ASSY	ASI DEALER
ASI-1588-001		827-1588-001	TEST ADAPTER ASSY	ASI DEALER
ASI-1627-001		638-1627-001	RTA-4XXX WW-MAP LOAD BOX (REPLACED BY ASI-4922-001 / 964-4922-001)	COLLINS
ASI-1773-001		634-1773-001	SEE ASI-21-24A	ASI DEALER
ASI-1902-001		651-1902-001	WRT-701X PWR AMP TEST COVER (P/O ASI-7994-701X)	ASI DEALER

**AVAILABILITY:**

ASI DEALER: CONTACT ANY ASI DEALER FOR QUOTE

COLLINS: CONTACT ROCKWELL COLLINS FOR QUOTE

GABLES: CONTACT GABLES ENGINEERING FOR QUOTE

TELEPHONICS: CONTACT TELEPHONICS FOR QUOTE

**ASI SPECIALIZED TEST EQUIPMENT LIST**

**AVAILABILITY SUBJECT TO CHANGE WITHOUT NOTICE**

ASI MN	EQUIV MN	EQUIV PN	DESCRIPTION	AVAILABILITY
ASI-1903-001		651-1903-001	WRT-701X COUPLER LOAD PORT ADAPTER (R/B ASI-1920-001)	ASI DEALER
ASI-1904-001		651-1904-001	WRT-701X EXTENDER CABLE (P/O ASI-7994-701X)	ASI DEALER
ASI-1904-002		651-1904-002	WRT-701X EXTENDER CABLE (P/O ASI-7994-701X)	ASI DEALER
ASI-1904-003		651-1904-003	WRT-701X EXTENDER CABLE (P/O ASI-7994-701X)	ASI DEALER
ASI-1904-004		651-1904-004	WRT-701X EXTENDER CABLE (P/O ASI-7994-701X)	ASI DEALER
ASI-1904-005		651-1904-005	WRT-701X EXTENDER CABLE (P/O ASI-7994-701X)	ASI DEALER
ASI-1904-006		651-1904-006	WRT-701X EXTENDER CABLE (P/O ASI-7994-701X)	ASI DEALER
ASI-1904-007		651-1904-007	WRT-701X EXTENDER CABLE (P/O ASI-7994-701X)	ASI DEALER
ASI-1904-008		651-1904-008	WRT-701X EXTENDER CABLE (P/O ASI-7994-701X)	ASI DEALER
ASI-1909-001		651-1909-001	WRT-701X EXTENDER CABLE (P/O ASI-7994-701X)	ASI DEALER
ASI-1910-001		651-1910-001	WRT-701X MULTIPLIER TEST FIXTURE (P/O ASI-7994-701X)	ASI DEALER
ASI-1914-001		651-1914-001	WRT-701X EXTENDER CABLE (P/O ASI-7994-701X)	ASI DEALER
ASI-1915-001		651-1915-001	WRT-701X TEST COVER (P/O ASI-7994-701X)	ASI DEALER
ASI-1916-001		651-1916-001	WRT-701X TEST COVER (P/O ASI-7994-701X)	ASI DEALER
ASI-1917-001		651-1917-001	WRT-701X TEST COVER (P/O ASI-7994-701X)	ASI DEALER
ASI-1918-001		651-1918-001	WRT-701X TEST COVER (P/O ASI-7994-701X)	ASI DEALER
ASI-1919-001		651-1919-001	WRT-701X TEST COVER (P/O ASI-7994-701X)	ASI DEALER
ASI-1920-001		651-1920-001	WRT-701X TEST COVER (P/O ASI-7994-701X)	ASI DEALER
ASI-1934-DLC		647-1934-000	BACKLIGHT TEST FIXTURE FOR COLLINS DLC-800	ASI DEALER
ASI-2013-002		987-2013-002	CABLE, ITA W2	ASI DEALER
ASI-2013-003		987-2013-003	CABLE, ITA W3	ASI DEALER
ASI-2013-008		987-2013-008	CABLE, ITA W8	ASI DEALER
ASI-2013-010		987-2013-010	CABLE, ITA W10	ASI DEALER
ASI-2013-012		987-2013-012	CABLE, ITA W12	ASI DEALER
ASI-2013-034		987-2013-034	CABLE, ITA W38	ASI DEALER
ASI-2058-001		822-2058-001	JTRS CLUSTER 1 RF MUX PANEL	ASI DEALER
ASI-2171-010			NICAD BATTERY FOR 972Q-4 / AN/ARM-186 (REPLACES 221-2171-010)	ASI DEALER
ASI-2214-001		601-2214-001	EXTENDER CARD FOR ADI-85 (P/O ASI-9999-001 KIT)	ASI DEALER
ASI-2216-001		601-2216-001	EXTENDER CARD FOR HSI-85 A2/A3/A4 (P/O ASI-9999-001 KIT)	ASI DEALER
ASI-2221-001		638-2221-001	EXTENDER NO. 1: ADC-80/81/82	ASI DEALER
ASI-2222-001		638-2222-001	EXTENDER NO. 2: ADC-80/81/82	ASI DEALER
ASI-2223-001		638-2223-001	EXTENDER NO. 3: PRE-80	ASI DEALER
ASI-2224-001		638-2224-001	EXTENDER NO. 4: ALI-80/MSI-80/VS1-80	ASI DEALER
ASI-2225-001		638-2225-001	EXTENDER NO. 5: ALI-80/MSI-80/VS1-80	ASI DEALER
ASI-2226-001		638-2226-001	EXTENDER NO. 6: ALI-80/MSI-80/VS1-80	ASI DEALER
ASI-2227-001		638-2227-001	EXTENDER KIT (INCLUDES NO.1 THRU NO. 6)	ASI DEALER
ASI-2235-001		621-2235-001	860E-4/5 EXTENDER CABLE KIT	ASI DEALER
ASI-2235-002		621-2235-002	860E-4/5 EXTENDER CABLE KIT	ASI DEALER
ASI-2241-001		601-2241-001	EXTENDER CARD, ARC-186 RCVR IF (P/O ASI-2390-001/-002)	ASI DEALER
ASI-2242-001		601-2242-001	EXTENDER CARD, ARC-186 AUDIO (P/O ASI-2390-001/-002)	ASI DEALER
ASI-2243-001		601-2243-001	EXTENDER CARD, ARC-186 P/S (P/O ASI-2390-001/-002)	ASI DEALER
ASI-2244-001		601-2244-001	EXTENDER CARD, ARC-186 RCVR RF (P/O ASI-2390-001/-002)	ASI DEALER
ASI-2244-001A		621-2244-001	CABLE: RF NO 1 (P/O ASI-2235-001/-002)	ASI DEALER
ASI-2245-001		621-2245-001	CABLE: RF NO 2 (P/O ASI-2235-001/-002)	ASI DEALER
ASI-2248-001		621-2248-001	CABLE: ATE (P/O ASI-2235-001)	ASI DEALER
ASI-2248-002		621-2248-002	CABLE: ATE (P/O ASI-2235-002)	ASI DEALER
ASI-2370-101		827-2370-101	DCP-5020 TEST ADAPTER	COLLINS
ASI-2370-102		827-2370-102	DCP-3030 TEST ADAPTER	COLLINS
ASI-2370-104		827-2370-104	CCP-3000 TEST ADAPTER	COLLINS
ASI-2389-002		638-2389-002	INTERCONNECT CABLE SET FOR AN/ARC-186 (USE WITH AN/ARM-173)	COLLINS
ASI-2390-001		638-2390-001	EXT CABLE SET FOR AN/ARC-186	ASI DEALER
ASI-2390-002		638-2390-002	EXT CABLE SET FOR AN/ARC-186 (INCL THREE 1553 CABLES)	ASI DEALER
ASI-2421-001		827-2421-001	SVO-3000 CABLE ASSY	COLLINS
ASI-2421-002		827-2421-002	SVO-3000 CABLE ASSY	COLLINS
ASI-2421-003		827-2421-003	SVO-3000 CABLE ASSY	COLLINS
ASI-2587-001		987-2587-001	MFD-286P ADAPTER CABLE	ASI DEALER
ASI-2599-001		830-2599-001	EDU TALK OUT TEST FIXTURE	ASI DEALER
ASI-2635-010			NICAD BATTERY CHARGER FOR 972Q-4 / AN/ARM-186 (REPLACES 270-2635-010)	ASI DEALER
ASI-2635-010-220			NICAD BATTERY CHARGER FOR 972Q-4 / AN/ARM-186 (220 VOLT)	ASI DEALER
ASI-2647-001		827-2647-001	DCP-400X DATA LOADER CABLE ASSY	COLLINS
ASI-2752-159		622-2752-001	ARC-159 EXTENDER CABLE SET	ASI DEALER
ASI-2756-001		830-2756-001	WRT-701X TEST COVER (P/O ASI-7994-701X)	ASI DEALER
ASI-2904-F51			SINGLE SIDED EXT CARD FOR SMITHS IND 2904-F5	ASI DEALER
ASI-2904-F52			DOUBLE SIDED EXT CARD FOR SMITHS IND 2904-F5	ASI DEALER
ASI-3056-001		988-3056-001	COAX CABLE ASSY	COLLINS
ASI-3109-001		828-3109-001	CABLE: CTS-88	COLLINS
ASI-3109-002		653-4242-001	CABLE: ASI-CTS-958 TO AHC-3000/A (828-3109-002)	COLLINS
ASI-3121-001	W2	651-3121-001	CABLE: 966D-5A TO R/T	COLLINS
ASI-3358-001		830-3358-001	WMA-701/702X SHIMMING PRY TOOL NO 1 (MAN FIG 918)	COLLINS
ASI-3360-001		830-3360-001	WMA-701/702X SHIMMING PRY TOOL NO 2 (MAN FIG 919)	COLLINS

**AVAILABILITY:**

ASI DEALER: CONTACT ANY ASI DEALER FOR QUOTE  
 COLLINS: CONTACT ROCKWELL COLLINS FOR QUOTE  
 GABLES: CONTACT GABLES ENGINEERING FOR QUOTE  
 TELEPHONICS: CONTACT TELEPHONICS FOR QUOTE

**ASI SPECIALIZED TEST EQUIPMENT LIST**

**AVAILABILITY SUBJECT TO CHANGE WITHOUT NOTICE**

<b>ASI MN</b>	<b>EQUIV MN</b>	<b>EQUIV PN</b>	<b>DESCRIPTION</b>	<b>AVAILABILITY</b>
ASI-3364-001		830-3364-001	WMA-701/702X SHIMMING PRY TOOL NO 5 (MAN FIG 917)	COLLINS
ASI-3413-001		828-3413-001	ADC-850 MODULE ADAPTER	COLLINS
ASI-3413-002		828-3413-002	ADC-850 MODULE ADAPTER	COLLINS
ASI-3423-001		659-3423-001	DFC-206A CONTROL TEST PANEL	ASI DEALER
ASI-3605-097		135-3605-097	DSP-2000 TORQUE ADJUSTMENT TOOL	COLLINS
ASI-3620-001		827-3620-001	CABLE ASSY	COLLINS
ASI-3758-001		618-3758-001	913K-1 EXTENDER CARD, FRONT	ASI DEALER
ASI-3759-001		618-3759-001	913K-1 EXTENDER CARD, BACK	ASI DEALER
ASI-3829-001		830-3829-001	WMA-701/702X SHIMMING PRY TOOL NO 6 (MAN FIG 915)	COLLINS
ASI-3830-001		830-3830-001	WMA-701/702X SHIMMING PRY TOOL NO 7 (MAN FIG 916)	COLLINS
ASI-3831-001		830-3831-001	WMA-701/702X AIRBORNE GEAR SHIMMING KIT	COLLINS
ASI-3842-DLM		676-3842-001	DLM-700( ) A6 POWER SUPPLY TEST SET (FOR CPN 676-7059-002 ONLY)	ASI DEALER
ASI-4015-186		647-4015-001	INTERCONNECT CABLE SET FOR AN/ARC-186 (USE WITH AN/ARM-165)	ASI DEALER
ASI-4016-001		647-4016-001	CABLE: W1 (P/O ASI-4015-186)	ASI DEALER
ASI-4093-001		647-4093-001	CABLE: W2 (P/O ASI-4015-186)	ASI DEALER
ASI-4094-001		647-4094-001	CABLE: W3 (P/O ASI-4015-186)	ASI DEALER
ASI-4095-001		647-4095-001	CABLE: W4 (P/O ASI-4015-186)	ASI DEALER
ASI-4096-001		647-4096-001	CABLE: W5 (P/O ASI-4015-186)	ASI DEALER
ASI-4287-054		983-4287-054	ZERO SENSOR HOUSING TEST COVER	ASI DEALER
ASI-4287-201		983-4287-201	ZERO MON CAL FIXTURE	ASI DEALER
ASI-4287-202		983-4287-202	CABLE: ZERO SENSOR	ASI DEALER
ASI-4287-203		983-4287-203	WMA INCLIMOMETER / COUNTERWEIGHT ASSEMBLY	ASI DEALER
ASI-4287-205		983-4287-205	CABLE: SCAN ZERO SENSOR	ASI DEALER
ASI-4652-001		641-4652-001	EXTENDER BOARD NO. 1 FOR 590A-3K/K1	ASI DEALER
ASI-4652-002		641-4652-002	EXTENDER BOARD NO. 2 FOR 590A-3K/K1	ASI DEALER
ASI-4667-001		983-4667-001	CABLE: RF	COLLINS
ASI-4759-001		601-4759-001	913K-1A/2H EXTENDER CARD, BACK	ASI DEALER
ASI-4922-001		964-4922-001	RTA-4XXX WW-MAP LOAD BOX	COLLINS
ASI-5058-001		641-5058-001	HSI-85( ) CARD EXTRACTOR	COLLINS
ASI-5058-002		641-5058-002	ADI-85( ) CARD EXTRACTOR	COLLINS
ASI-5687-001		635-5687-001	CABLE: RCVR (P/O ASI-2235-001/-002)	ASI DEALER
ASI-5688-001		635-5688-001	CABLE: PWR AMP (P/O ASI-2235-001/-002)	ASI DEALER
ASI-5689-001		635-5689-001	CABLE: DRVR (P/O ASI-2235-001/-002)	ASI DEALER
ASI-6041-3782-200		6041-3782-200	CABLE: IFR STD-7000 TO CRT INTERFACE ASSY	ASI DEALER
ASI-6041-3782-300		6041-3782-200	CABLE: IFR CRT INTERFACE ASSY (7005-3742-400) TO MONITOR	ASI DEALER
ASI-6042			CABLE: ASI-488 RF	ASI DEALER
ASI-6046-3880-600		6046-3880-600	CABLE: IFR DF-7708 TO STD-7000	ASI DEALER
ASI-6046-3880-700		6046-3880-700	CABLE: IFR DF-7708 TO COLLINS RADAR ANTENNA	ASI DEALER
ASI-6046-3880-800		6046-3880-800	CABLE: IFR DF-7708 TO COLLINS RADAR CONTROL	ASI DEALER
ASI-6046-3880-900		6046-3880-900	CABLE: IFR DF-7708 TO COLLINS RADAR INDICATOR	ASI DEALER
ASI-6046-3881-000		6046-3881-000	CABLE: IFR DF-7708 TO COLLINS RADAR R/T	ASI DEALER
ASI-6046-3881-500		6046-3881-500	CABLE: IFR DF-7708 TO COLLINS CONTROL (ADAPTER)	ASI DEALER
ASI-6301-002		628-6301-102	BOARD, PROM	COLLINS
ASI-6382-628T		635-6382-001	628T-1/1A HARNESS TEST SET (REPLACED BY ASI-209-6)	ASI DEALER
ASI-6695-050		987-6695-050	CABLE, ELECTRICAL INTERFACE	COLLINS
ASI-6695-051		987-6695-051	CABLE, ELECTRICAL INTERFACE	COLLINS
ASI-6769-001		617-6769-001	ADAPTER CABLE: 973L-1/635U	COLLINS
ASI-6787-001	CTS-90	622-6787-001	INTERCONNECT CABLE SET FOR VCN-186 / C-11029( )	ASI DEALER
ASI-6900-002		830-6900-002	CABLE: A51 NOISE DIODE BREAKOUT FOR WRT-701X / WRT-2100	COLLINS
ASI-6900-003		830-6900-003	CABLE: A50 SOURCE EXTENDER FOR WRT-701X / WRT-2100	COLLINS
ASI-6943-001		830-6943-001	DRIVE EXT CABLEAND CONTROL BOX FOR WRT-701X (WS) (P/O ASI-6960-001)	ASI DEALER
ASI-6944-001		830-6944-001	SEC IF A8 EXT CABLE AND CONTROL BOX FOR WRT-701X (WS) (P/O ASI-6960-001)	ASI DEALER
ASI-6945-001		830-6945-001	NOISE DIODE TEST BOX FOR WRT-701X (WS) (P/O ASI-6960-001)	ASI DEALER
ASI-6946-001		830-6946-001	CABLE: PREDM EXTENDER (P/O ASI-6960-001)	ASI DEALER
ASI-6946-002		830-6946-002	CABLE: MULTIPLIER EXTENDER (P/O ASI-6960-001)	ASI DEALER
ASI-6946-003		830-6946-003	CABLE: MIXER A7 EXTENDER (P/O ASI-6960-001)	ASI DEALER
ASI-6946-004		830-6946-004	CABLE: RF EXTENDER (P/O ASI-6960-001)	ASI DEALER
ASI-6951-001		830-6951-001	TUNING COVER (P/O ASI-6960-001)	ASI DEALER
ASI-6952-001		830-6952-001	TUNING COVER (P/O ASI-6960-001)	ASI DEALER
ASI-6953-001		830-6953-001	TUNING COVER (P/O ASI-6960-001)	ASI DEALER
ASI-6954-001		830-6954-001	TUNING COVER (P/O ASI-6960-001)	ASI DEALER
ASI-6964-628T		642-6964-001	COLLINS 628T-2/2A TEST KIT (INCLUDES ASI-209-8 AND ASI-209-9)	COLLINS
ASI-6960-001		830-6960-001	WXR FLW RF ALIGNMENT KIT (ALT CPN: 099-4920-000)	ASI DEALER
ASI-7000-701X			CPU ANALYZER FOR COLLINS WRT-701X	ASI DEALER
ASI-7005-3741-800		7005-3741-800	KEYBOARD ASSY FOR STD-7000	ASI DEALER
ASI-7005-3742-400		7005-3742-400	CRT INTERFACE ASSY FOR STD-7000	ASI DEALER
ASI-7005-4042-101		7005-4042-101	EXTERNAL RF POWER MODULE ASSY FOR RDX-3000 / RDX-7708	ASI DEALER
ASI-7008-001		797-7008-001	345C-2A ACCELERATION SENSOR POS FIXTURE (345C-2A MANUAL FIGURE 1005)	COLLINS
ASI-716562-01		716562-01	EXTENDER CARD	ASI DEALER
ASI-7263-001		752-7263-001	CABLE: MEM EXTENDER (P/O ASI-2390-002)	ASI DEALER

**AVAILABILITY:**

ASI DEALER: CONTACT ANY ASI DEALER FOR QUOTE  
 COLLINS: CONTACT ROCKWELL COLLINS FOR QUOTE  
 GABLES: CONTACT GABLES ENGINEERING FOR QUOTE  
 TELEPHONICS: CONTACT TELEPHONICS FOR QUOTE

**ASI SPECIALIZED TEST EQUIPMENT LIST**

**AVAILABILITY SUBJECT TO CHANGE WITHOUT NOTICE**

ASI MN	EQUIV MN	EQUIV PN	DESCRIPTION	AVAILABILITY
ASI-7264-001		752-7264-001	CABLE: EXTENDER (P/O ASI-2390-002)	ASI DEALER
ASI-7264-002		752-7264-002	CABLE: EXTENDER (P/O ASI-2390-002)	ASI DEALER
ASI-7366-001		827-7366-001	CABLE: METER W3 (P/O CTA-2028)	COLLINS
ASI-7367-001		827-7367-001	CABLE: SCOPE W4 (P/O CTA-2028)	COLLINS
ASI-7373-001		827-7373-001	DCU-4000/4001 POWER MONITOR TEST AID	COLLINS
ASI-7419-002		827-7419-002	RTU-42X0 DATA LOADER CABLE ASSY	COLLINS
ASI-7419-007		827-7419-007	RTU-40X0 DATA LOADER CABLE ASSY	COLLINS
ASI-7419-038		827-7419-038	"T" DATA LOAD CABLE	ASI DEALER
ASI-7424-001		830-7424-001	WRT LO FILTER TEST FIXTURE	ASI DEALER
ASI-7779-DLM(L)	659-8804-001	646-7779-001	DLM-700( ) CIRCUIT CARD EXTENDER-LEFT (A3,A5,A5)	ASI DEALER
ASI-7779-DLM(R)	659-8804-002	646-7779-002	DLM-700( ) CIRCUIT CARD EXTENDER-RIGHT (A6,A7)	ASI DEALER
ASI-7830-001		646-7830-001	EXTENDER CARD	ASI DEALER
ASI-7841-005		827-7841-005	TEMPLATE ASSY (P/O CTA-2052)	COLLINS
ASI-7847-001		827-7847-001	CABLE: CTS-2000 TO CDU-5000 (P/O CTA-2052)	COLLINS
ASI-7994-701C		659-7994-001	MAINTENANCE KIT FOR WRT-701C	ASI DEALER
ASI-7994-701X		659-7994-002	MAINTENANCE KIT FOR WRT-701X	ASI DEALER
ASI-8001-001		791-8001-001	51RV-2B CARD EXTENDER CABLE FOR MANUAL VOR/LOC SENSOR CARD Z2	COLLINS
ASI-8048-001		791-8048-001	51RV-2B CARD EXTENDER KIT	COLLINS
ASI-8092-010		372-8092-010	CRIMPING TOOL 90202-1 / 91516-1	COLLINS
ASI-8093-010		372-8093-010	EXTRACTION TOOL (SAME AS ASI-0519-001)	COLLINS
ASI-8139-001		629-8139-001	CABLE: APA-80 EXTENDER (38 POS-NOTCHED)	COLLINS
ASI-8139-002		629-8139-002	CABLE: APA-80 EXTENDER (30 POS)	COLLINS
ASI-8139-003		629-8139-003	CABLE: APA-80 EXTENDER (38 POS)	COLLINS
ASI-8140-001		629-8140-001	CABLE: FGC-80 A2J7 EXTENDER	COLLINS
ASI-8140-002		629-8140-002	CABLE: FGC-80 A2J6 EXTENDER	COLLINS
ASI-8140-003		629-8140-003	CABLE: FGC-80 A3J9 EXTENDER	COLLINS
ASI-8140-004		629-8140-004	CABLE: FGC-80 A3J8 EXTENDER	COLLINS
ASI-8140-005		629-8140-005	CABLE: FGC-80 A4J11 EXTENDER	COLLINS
ASI-8140-006		629-8140-006	CABLE: FGC-80 A4J10 EXTENDER	COLLINS
ASI-8140-007		629-8140-007	CABLE: FGC-80 A5J13 EXTENDER	COLLINS
ASI-8140-008		629-8140-008	CABLE: FGC-80 A5J12 EXTENDER	COLLINS
ASI-8140-009		629-8140-009	CABLE: FGC-80 A6J15 EXTENDER	COLLINS
ASI-8140-010		629-8140-010	CABLE: FGC-80 A6J14 EXTENDER	COLLINS
ASI-8140-011		629-8140-011	CABLE: FGC-80 A7J17 EXTENDER	COLLINS
ASI-8140-012		629-8140-012	CABLE: FGC-80 A7J16 EXTENDER	COLLINS
ASI-8260-DLC		646-8260-001	DLC-800( ) EXTENDER CARD (A3)	ASI DEALER
ASI-8261-DLC		646-8260-002	DLC-800( ) EXTENDER CARD (A4,A5,A6,A7)	ASI DEALER
ASI-8262-DLC			DLC-800( ) EXTENDER CABLE (A8)	ASI DEALER
ASI-8263-DLC			DLC-800( ) EXTENDER CABLE (A7,A9)	ASI DEALER
ASI-8264-DLC			DLC-800( ) EXTENDER CABLE (A2A1)	ASI DEALER
ASI-8265-DLC			DLC-800( ) EXTENDER CABLE (LCD)	ASI DEALER
ASI-8266-DLC			DLC-800( ) EXTENDER CABLE (A5,A6)	ASI DEALER
ASI-8267-DLC			DLC-800( ) CARD PULLER	ASI DEALER
ASI-8268-DLC		HT/100E-32K	DLC-800( ) DUMB TERMINAL (HANDHELD)	ASI DEALER
ASI-8271-001		827-8271-001	A1 INTERFACE BOX ASSY	COLLINS
ASI-8272-001		827-8272-001	A2 INTERFACE BOX ASSY	COLLINS
ASI-8273-001		827-8273-001	A5 INTERFACE BOX ASSY	COLLINS
ASI-8274-001		827-8274-001	W49 RIBBON CABLE ASSY	COLLINS
ASI-8274-002		827-8274-002	W47 RIBBON CABLE ASSY	COLLINS
ASI-8274-003		827-8274-003	W48 RIBBON CABLE ASSY	COLLINS
ASI-8292-006		548-8292-006	RADIO TEST HARNESS SUBASSY	ASI DEALER
ASI-835000		835000	500 NS DELAY LINE	ASI DEALER
ASI-835000-CSK			COIL SECURING KIT	ASI DEALER
ASI-8342-001		752-8342-001	DIPLEXER/PREAMP TEST FIXTURE (WITH 2 CABLES)	ASI DEALER
ASI-8361-001		830-8361-001	CMU-900 POWER SUPPLY TESTER	COLLINS
ASI-8431-001		659-8431-001	SDU-640 PROG FIXTURE CABLE ASSY	COLLINS
ASI-8405-001		791-8405-001	MAINTENANCE KIT FOR 860E-3	ASI DEALER
ASI-8560-003	TS-1949A	757-8560-003	RADIO SET TEST HARNESS (P/O ASI-209-2B)	ASI DEALER
ASI-8633-050		827-8633-050	TEST SET	ASI DEALER
ASI-880061-1		880061-1	POSITION INDICATOR SWITCH ASSY	ASI DEALER
ASI-8803-DLM		659-8803-003	DATA LINK TEST ADAPTER	ASI DEALER
ASI-8904-001		628-8904-001	ECU-3000 TEST CABLE	COLLINS
ASI-8938-001		618-8938-001	EXTENDER BOARD FOR 972V-1	ASI DEALER
ASI-9023-001		634-9023-001	CABLE: POWER SUPPLY (P/O ASI-9305-118)	ASI DEALER
ASI-9024-001		634-9024-001	CABLE: RECEIVER (P/O ASI-9305-118)	ASI DEALER
ASI-9025-001		634-9025-001	CABLE: SYNTH DRIVER (P/O ASI-9305-118)	ASI DEALER
ASI-9030-001		634-9030-001	CABLE: RF (P/O ASI-9305-118)	ASI DEALER
ASI-9031-001		634-9031-001	CABLE: RF (P/O ASI-9305-118)	ASI DEALER
ASI-9033-001		634-9033-001	CABLE: RF (P/O ASI-9305-118)	ASI DEALER
ASI-920032		920032	CABLE: ANTENNA ADAPTER	ASI DEALER

**AVAILABILITY:**

ASI DEALER: CONTACT ANY ASI DEALER FOR QUOTE  
 COLLINS: CONTACT ROCKWELL COLLINS FOR QUOTE  
 GABLES: CONTACT GABLES ENGINEERING FOR QUOTE  
 TELEPHONICS: CONTACT TELEPHONICS FOR QUOTE



**ASI SPECIALIZED TEST EQUIPMENT LIST**

**AVAILABILITY SUBJECT TO CHANGE WITHOUT NOTICE**

ASI MN	EQUIV MN	EQUIV PN	DESCRIPTION	AVAILABILITY
ASI-9202-001		629-9202-001	CABLE: 972V-1 TO 331A-8H INDICATOR (8 IN)	COLLINS
ASI-9202-002		629-9202-002	CABLE: 972V-1 TO 331A-8H INDICATOR (48 IN) / SEE ASI-22-6A FOR ALTERNATE	COLLINS
ASI-9276-001		988-9276-001	CABLE: MFD-255E BURN IN, TURKEY-PHENIX	COLLINS
ASI-930005-101		930005-101	ALIGNMENT TOOL FOR DBS2100 ASTV (PRICE INCLUDES 2 DIGITAL PROTRACTORS)	ASI DEALER
ASI-9305-118		629-9305-001	COLLINS TCN-118 MAINTENANCE KIT	ASI DEALER
ASI-931101-100-1		931101-100-1	RDU BREAKOUT BOX	ASI DEALER
ASI-931402		931402	CABLE: ANT/DAU	ASI DEALER
ASI-931407-100		931407-100	CABLE: RDU CONFIGURATION ADAPTER	ASI DEALER
ASI-932400-105-1		932400-105-1	CABLE: GEM-P4 TP SSP-P3	ASI DEALER
ASI-932400-105-2		932400-105-2	CABLE: TMU-P1 TO GEM-P1	ASI DEALER
ASI-933428-100		933428-100	CABLE: IRDM	ASI DEALER
ASI-933436-100		933436-100	CABLE: IR INTERFACE DONGLE	ASI DEALER
ASI-9496-001		629-9496-001	CABLE: FRONT PNL EXTENDER (P/O ASI-2752-159)	ASI DEALER
ASI-9497-001		629-9497-001	CABLE: SIGNAL COND EXTENDER (P/O ASI-2752-159)	ASI DEALER
ASI-9498-001		629-9498-001	CABLE: MAN CONT EXTENDER (P/O ASI-2752-159)	ASI DEALER
ASI-9499-001		629-9499-001	CABLE: MEMORY CARD EXTENDER (P/O ASI-2752-159)	ASI DEALER
ASI-9509-001		629-9509-001	CABLE: BACK PLATE ASSY EXTENDER (P/O ASI-2752-159)	ASI DEALER
ASI-9539-001		634-9539-001	CABLE: MEMORY (P/O ASI-2390-001/-002)	ASI DEALER
ASI-9540-001		634-9540-001	CABLE: CONTROL (P/O ASI-2390-001/-002)	ASI DEALER
ASI-9541-001		634-9541-001	CABLE: PA (P/O ASI-2390-001/-002)	ASI DEALER
ASI-9542-001		634-9542-001	CABLE: ALC NO 1 (P/O ASI-2390-001/-002)	ASI DEALER
ASI-9543-001		634-9543-001	CABLE: ALC NO 2 (P/O ASI-2390-001/-002)	ASI DEALER
ASI-9555-001		629-9555-001	CABLE: EXTENDER (P/O ASI-2752-159)	ASI DEALER
ASI-9556-001		629-9556-001	CABLE: EXTENDER (P/O ASI-2752-159)	ASI DEALER
ASI-9557-DLM		659-8732-001	DLM-700( ) POWER SUPPLY A6 TEST FIXTURE	ASI DEALER
ASI-9759-001		634-9759-001	EXTENDER CARD, ARC-186 SMO (PART OF ASI-2390-00X / 638-2390-00X KIT)	ASI DEALER
ASI-9871-001		629-9871-001	DISPLAY FILTER FOR COLLINS 478A-3 ZIFOR III	COLLINS
ASI-9581-001		629-9581-001	CABLE: EXTENDER (P/O ASI-2752-159)	ASI DEALER
ASI-9945-001		634-9945-001	EXTENDER CARD FOR HSI-85 A5 (P/O ASI-9999-001 EXTENDER KIT)	ASI DEALER
ASI-9977-001		634-9977-001	EXTENDER CARD FOR ADI-85 (P/O ASI-9999-001 EXTENDER KIT)	ASI DEALER
ASI-9999-001		634-9999-001	ADI-85( ) AND HSI-85( ) CARD EXTENDER KIT (INCLUDES 4 EXTENDER CARDS)	ASI DEALER
ASI-AA3710-1	AA3710-1		OVERALL TEST RIG FOR AD370 SYSTEM (OBSOLETE / REPLACED BY ASI-AA3710-2)	ASI DEALER
ASI-AA3710-2	AA3710-2		OVERALL TEST RIG FOR AD370 SYSTEM (INCLUDES 5 CABLES)	ASI DEALER
ASI-ACS-5A	ACS-5A		FDR TEST SET (THIS UNIT MAY ONLY BE PURCHASED FROM GLENDALE INT'L)	GLENDALE
ASI-AVR-02	AVR-02	100-2120-200	COCKPIT VOICE RECORDER TEST PANEL (INCLUDES 2 CABLES)	ASI DEALER
ASI-A24004-2	A24004-2		TEST RELAY, ISOLATION REQUEST POWER DIST SYSTEM	ASI DEALER
ASI-A31-6621-02	A31-6621-02		CABLE: ASI-AA3710-02 TO DISTRESS CONTROLLER	ASI DEALER
ASI-A32074-1	A32074-1		BREAKOUT BOX, RELAY SYSTEM AIR/GND	ASI DEALER
ASI-A3286382	A3286382		CABLE, W259 INC TO AN/VSQ-2B#1 TO CISCO 2924MXL	ASI DEALER
ASI-BD83-101	BD83-101		HYDRAULIC PUMP TEST ADAPTER SET	ASI DEALER
ASI-B2701-51	B2701-51		TEST BOX, ELEVATOR HARDOVER TEST	ASI DEALER
ASI-CTC-429	CTC-429	822-0854-001	PRO LINE TEST CARD (TEST SOFTWARE MUST BE PURCHASED FROM COLLINS)	ASI DEALER
ASI-CTS-9	CTS-9	622-6720-001	EXTENDER CABLE BREAKOUT BOX	ASI DEALER
ASI-CTS-10	CTS-10	622-4561-001	UNIVERSAL ATR BREAKOUT BOX	ASI DEALER
ASI-CTS-11	CTS-11	622-5380-001	COLLINS ADI-85 INSTRUMENT TEST SET	ASI DEALER
ASI-CTS-11A	CTS-11A	622-6823-001	COLLINS ADI-77 INSTRUMENT TEST SET	ASI DEALER
ASI-CTS-12	CTS-12	622-5381-001	COLLINS HSI-85 INSTRUMENT TEST SET	ASI DEALER
ASI-CTS-12A1		601-2123-001	LABEL CHANGER CARD	ASI DEALER
ASI-CTS-700-1			THIS ITEM HAS BEEN RENAMED ASI-700-1 (SEE ASI-700-1 FOR PRICE)	ASI DEALER
ASI-CTS-840	CTS-840	822-0080-001	RTA-84X/85X RADAR ABSORPTION BARREL	COLLINS
ASI-CTS-841	CTS-841	822-0081-001	RTA-84X/85X RECEIVER/TRANSMITTER/ANTENNA TEST PANEL	ASI DEALER
ASI-CTS-859	CTS-859	622-7975-001	DIGITAL EFIS TEST PANEL	ASI DEALER
ASI-CTS-940	CTS-940	628-8750-001	TDR-94/94D MODE S TRANSPONDER TEST PANEL	ASI DEALER
ASI-CTS-941			TDR-94/94D MODE S TRANSPONDER TEST SET	ASI DEALER
ASI-CTS-941AR			TDR-94/94D MODE S TRANSPONDER TEST SET (BENCH RACK VERSION)	ASI DEALER
ASI-CTS-942			TDR-94 BURN-IN RELAY TEST PANEL	COLLINS
ASI-CTS-943			TDR-94D INTERFACE PANEL	COLLINS
ASI-CTS-944			RTA BURN-IN RF RELAY PANEL	COLLINS
ASI-CTS-945			RTA BURN-IN TEST PANEL	COLLINS
ASI-CTS-946			GLU BURN-IN PANEL	COLLINS
ASI-CTS-946-1			GLU BURN-IN PANEL	COLLINS
ASI-CTS-947		685-6824-001	A7 IF/LVPS TEST PANEL (INCL 3 CABLES)	ASI DEALER
ASI-CTS-948			A4/SMO TEST FIXTURE	COLLINS
ASI-CTS-949			AHC-3000 VXI INTERFACE PANEL	COLLINS
ASI-CTS-950			AHC-3000 POWER SUPPLY (A3) TEST FIXTURE	COLLINS
ASI-CTS-951			AHC-3000 IMU SIM CARD TEST FIXTURE	COLLINS
ASI-CTS-952			AHC-3000 CARCO VXI INTERFACE PANEL	COLLINS
ASI-CTS-953A			VHF-21/22/422 ESS TEST PANEL A	COLLINS
ASI-CTS-953B			VHF-21/22/422 ESS TEST PANEL B	COLLINS
ASI-CTS-954			TDR-94( ) XMIT TEST PANEL	COLLINS

**AVAILABILITY:**

ASI DEALER: CONTACT ANY ASI DEALER FOR QUOTE  
 COLLINS: CONTACT ROCKWELL COLLINS FOR QUOTE  
 GABLES: CONTACT GABLES ENGINEERING FOR QUOTE  
 TELEPHONICS: CONTACT TELEPHONICS FOR QUOTE

**ASI SPECIALIZED TEST EQUIPMENT LIST**

**AVAILABILITY SUBJECT TO CHANGE WITHOUT NOTICE**

<b>ASI MN</b>	<b>EQUIV MN</b>	<b>EQUIV PN</b>	<b>DESCRIPTION</b>	<b>AVAILABILITY</b>
ASI-CTS-955			RTA-8XX MODULATOR TESTER	ASI DEALER
ASI-CTS-956			RTA -8XX TRANSMITTER TEST PANEL	ASI DEALER
ASI-CTS-957			RTA-8XX RECEIVER/EXCITER TEST PANEL	ASI DEALER
ASI-CTS-958			CTS-88 AUX TEST PANEL (PRICE INCLUDES 801-F30 API)	COLLINS
ASI-CTS-959			AHC-3000 BURN-IN PANEL (12)	COLLINS
ASI-CTS-960		638-0274-001	AHC-85 SYNCHRO SELECT PANEL	COLLINS
ASI-CTS-961		638-0161-002	LOW CURRENT POWER CONTROL PANEL	COLLINS
ASI-CTS-962			36 INCH RATE TABLE VXI INTERFACE PANEL	COLLINS
ASI-CTS-963			ALT RF RELAY PANEL	COLLINS
ASI-CTS-964		685-6461-ASI	JC CONTROL PANEL	COLLINS
ASI-CTS-965			RTA RF TEST PANEL	COLLINS
ASI-CTS-966			INTERFACE PANEL	COLLINS
ASI-CTS-967			AHC-3000 BURN-IN PANEL W/4 CABLES	COLLINS
ASI-CTS-968			RIU-4000 ESS POWER PANEL	COLLINS
ASI-CTS-969			CTS-88 FDU SELECT FIXTURE W/4 CABLES	COLLINS
ASI-CTS-970			RTA-8XX ATE INTERFACE PANEL W/4 CABLES	COLLINS
ASI-CTS-971			RTA-8XX IMPATT TEST PANEL	COLLINS
ASI-CTS-972			RTA-8XX ESS TEST PANEL	COLLINS
ASI-CTS-973		638-1440-001	VHF-2100/4000 HASS PANEL	COLLINS
ASI-CTS-974		638-1381-001	FC BURN-IN PANEL	COLLINS
ASI-CTS-975		638-1461-001	POWER CONTROL INTERFACE PANEL	COLLINS
ASI-CTS-976		932500-101	LOCAL PANEL	COLLINS
ASI-CTS-977			RTA-4XXX TUA TEST BOX	COLLINS
ASI-CTS-978			RTA-4XXX MASS TRANSFER INTERFACE PANEL	COLLINS
ASI-CTS-979			RIU-4000 ESS ATE PANEL	COLLINS
ASI-CTS-980			PA TEST PANEL (INCLUDES ASI-CTS-980-1 AND ASI-CTS-980-2)	COLLINS
ASI-CTS-981			ACP-6000 ESS ATE PANEL	COLLINS
ASI-CTS-982			ACP-6000 ATE PANEL	COLLINS
ASI-CTS-983			ACP-6000 POWER SUPPLY PANEL (COLLINS SUPPLIES 828-2468-001/828-2407-001)	COLLINS
ASI-CTS-984			TX TEMPERATURE ALIGNMENT ELECTRICAL FIXTURE	COLLINS
ASI-CTS-984-1			MODULE ALIGNMENT FIXTURE	COLLINS
ASI-DLC-800			MAINTENANCE KIT FOR COLLINS DLC-800( )	ASI DEALER
ASI-DLM-700			MAINTENANCE KIT FOR COLLINS DLM-700( )	ASI DEALER
ASI-DL100-35			DELAY LINE, 35FT / 71nS	ASI DEALER
ASI-DL100-100			DELAY LINE, 100FT / 203nS	ASI DEALER
ASI-DL100-250			DELAY LINE, 250FT / 508nS	ASI DEALER
ASI-ES120665-43		ES120665-43	C130 SENSOR	ASI DEALER
ASI-ES120666-9		ES120666-9	C130 FUEL FLOW CABLE	ASI DEALER
ASI-ES120666-13		ES120666-13	C130 TORQUE METER CABLE	ASI DEALER
ASI-ES120666-65		ES120666-65	C130 TACHOMETER CABLE	ASI DEALER
ASI-ES120683-15		ES120683-15	C130 CARD EXTENDER	ASI DEALER
ASI-FDX-A22001-22		FDX-A22001-22	REMOTE MCDP	ASI DEALER
ASI-KLM3E-86872		KLM3E-86872	EMERGENCY BATTERY PACK LOADER	ASI DEALER
ASI-LT6013A	ASI-IH-56		CABLE, ASI-200-8 (LT-5) to 618M-3/4/5	ASI DEALER
ASI-M1090			TEST SET FOR BAKER M1090	ASI DEALER
ASI-PLCS-01			RACK MOUNT COMPUTER SYSTEM WITH CTC-429 TEST CARD INSTALLED	ASI DEALER
ASI-PRO-360		PRO-360	DIGITAL PROTRACTOR / LEVEL (ACCURACY +/-0.1 DEGREES)	ASI DEALER
ASI-PRO-3600		PRO-3600	DIGITAL PROTRACTOR / LEVEL WITH RS-232 OUTPUT (ACCURACY +/-0.05 DEGREES)	ASI DEALER
ASI-PRO-3600-CBL		PRO-3600 CABLE	RS-232 CABLE AND FOOT SWITCH FOR ASI-PRO3600 (PRO3600)	ASI DEALER
ASI-RX1-LM	RX1-LM		TEST ADAPTER FOR GTF-1, GTF-2, GTL-6, GTF-10	ASI DEALER
ASI-SDD-EXT			SDD-640 PWR SUPPLY EXT	ASI DEALER
ASI-SDU-EXT			SDU-640 EXT CABLES (SET OF 3)	ASI DEALER
ASI-SDU-906		856-8022-010	SDU-906 TEST EQUIPMENT KIT	ASI DEALER
ASI-T450-100-TB1		T450-100-TB1	SWITCH TEST BOX FOR LANDING GEAR (450-100) AND FIRE CONTROL (450-300)	ASI DEALER
ASI-T450-100-TS		T450-100-TS	TEST STAND (INCLUDED WITH ASI-T450-100-TB1)	ASI DEALER
ASI-W-16			CABLE: CA-154-1 BATTERY TO BATTERY CHARGER	ASI DEALER
ASI-WS2			CABLE: RCA WEATHERSCOUT BENCH TEST HARNESS	ASI DEALER
ASI-Y-1		634-9848-001	CABLE: CTS-202 Y-ADAPTER TO CTL-220 AND TCR-220	ASI DEALER
ASI-Y-2		653-2159-001	CABLE: Y-ADAPTER (ASI-Y-1) TO CTL-230	ASI DEALER
ASI-Y-3			CABLE: Y-ADAPTER 339F-12 TO ATC-1400A OR SQUAWK NAUT I/II	ASI DEALER

**AVAILABILITY:**

ASI DEALER: CONTACT ANY ASI DEALER FOR QUOTE  
 COLLINS: CONTACT ROCKWELL COLLINS FOR QUOTE  
 GABLES: CONTACT GABLES ENGINEERING FOR QUOTE  
 TELEPHONICS: CONTACT TELEPHONICS FOR QUOTE